

TCL 50 LE

T510D

## Quick Start Guide

Thank you for choosing TCL. This booklet helps you get started with your new device.  
For more information about your phone or to download the complete user manual version, please visit [tcl.com/us](http://tcl.com/us)



 
English - CJB2M8001AAA  
Printed in China

## Phone Setup


### Installing or removing the SIM card and microSD™ card

Your phone already has a SIM card installed. If you need to change or remove your SIM card, follow the steps below.

- ① Use the provided SIM pin to open the SIM tray.
- ② To install SIM/microSD™ card, place the SIM/microSD™ card with the chip facing down into the SIM card tray and then slide it into its slot.
- ③ To remove SIM/microSD™ card, push up on the chip side of the cards inside the SIM tray.

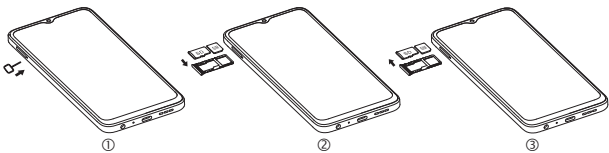

### Charging the battery

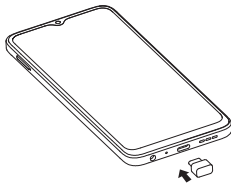 

It is advised that you fully charge your battery before first use ( ). Connect the charger to your phone and an outlet. Charging status is indicated by the percentage on screen while the phone is powered off. The percentage increases as the phone is charged.

### Power your phone on/off

To turn your phone on, press and hold the Power/Lock button until the screen turns on.

To turn your phone off, press both the Power/Lock button and Volume up button at the same time, then tap Power off on the screen when it appears.

### Set up your phone for the first time

The first time you power on the phone, you'll be prompted to choose your language, Vision settings, select a network, Date and time zone, log in to your Google Account and setup Google services. Finally, select a screen lock option such as face unlock, or Set a PIN, Pattern or Password. You may also skip this step and complete the setup at a later time.

Do not leave your PIN/password or pattern, with your phone. Store this information in a safe place when not in use.

### Personalize your Home screen

**Add**

By touching and holding an application, a folder, or a widget, you can activate the Move mode and drag the item to the Home screen of your choice.

**Reposition**

Touch and hold any application, folder, or widget icon to reposition or move to another Home screen. To activate the Move mode, touch and hold the icon then drag the item to the desired position and then release.

**Remove**

To remove an item, touch and hold it to activate the Move mode, drag it to the top of the screen over the Remove icon, then release when the item is gray.

**Create folders**

Stack one shortcut or application on top of another to create a new folder. You can name or rename the folder by opening it and entering a new name in the folder's title bar.

 
**Wallpaper customization**

Touch and hold the Home screen then touch **Wallpaper & style** to customize wallpaper.

## Phone

### Placing a call

Touch **Phone** from the Home screen.

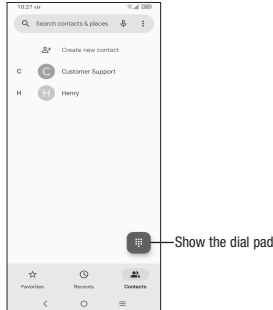

Enter the desired number from the keyboard directly, or select one of the following:

- Access frequently called or favorite contacts in **Favorites**.
- View recently called numbers and contacts in **Recents**.
- Choose a saved contact in **Contacts**.

Touch to place the call.

To hang up a call, touch .

### Answering or rejecting a call

When you receive a call:

- Swipe up to answer.
- Swipe down to reject.
- Touch to reject the call by sending a preset message.

 
To mute the ringtone volume of an incoming call, press the **Volume up/down key**.

## Contacts

**Contacts** enables quick and easy access to the people you want to reach. You can view and create contacts on your phone.

To access this feature, swipe up on the Home screen, then select **Contacts**.

### Adding a contact

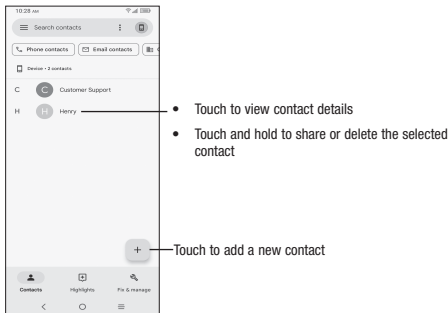

### Editing a contact

To edit contact information, touch in the contact details screen. When finished, touch **Save**.

### Importing, exporting, and sharing contacts

From the Contacts screen, touch **Fix & manage** to open the options menu, then select **Manage SIM**, **Import from file** or **Export to file**.

 
Share a single contact or multiple contacts with others by sending the contact's vCard to them via Bluetooth, Gmail, etc.

Touch and hold the contact(s) you want to share, touch .

## Messages

You can send and receive text and picture messages on this device.

To access this feature, touch **Messages** from the Home screen.

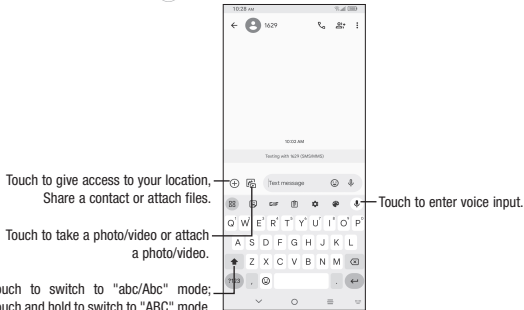

### Sending a message

Enter the mobile phone number of the recipient in the **To** bar or select a contact, then touch the **Text message** bar to type the text of the message. When finished, touch to send the text message.

### Sending a multimedia message

MMS enables you to send video clips, images, photos, animations and sounds to other compatible phones and e-mail addresses.

An SMS will be converted to MMS automatically when media files (image, video, audio, etc.) are attached or subject or email addresses are added.

## Gmail

In addition to your Gmail account, your phone supports external POP3, IMAP or Exchange email accounts.

To access this feature, swipe up on Home screen then select **Gmail**.

### To create and send emails

- Touch from the Inbox screen.
- Enter recipient(s) email address(es) in the To: field.
- If necessary, tap next to the To: field to add Cc/Bcc to the message.
- Enter the subject and the content of the message.
- Tap to add an attachment.
- Tap to send.

## Camera & Video

Your phone's camera is equipped with multiple modes for taking photos and videos. From the home screen, touch to access.

### To take a picture:

The screen acts as the viewfinder. First, position the object or landscape in the viewfinder, touch the screen to focus if necessary. Touch to capture, the photo will be automatically saved. You can also touch and hold to take burst shots.

### To take a video:

Touch **VIDEO** to change the camera mode to video. Touch to start video recording.

Touch to take a picture during video recording.

Touch to pause video recording and touch to continue. Touch to stop recording. The video will be automatically saved.



## Security

Swipe up on the Home screen, then touch **Settings** > **Security & privacy** > **Device unlock**.

Enable your lock/unlock method: Swipe, Pattern, PIN, Password or Face & fingerprint unlock.

Face unlock will unlock your phone using the front camera to register your face.

**Note:** facial recognition methods may not be as secure as Pattern, PIN, or Password locks.

## Data backup

This phone enables you to back up your phone's settings and other application data to the Google Server, with your Google Account.

If you replace your phone, the settings and data you've backed up are restored onto the new phone the first time you sign in with your Google Account.

To activate this function:

- Swipe up on **Home screen** > **Settings** > **System** > **Backup**.

## Factory data reset

To activate factory data reset:

- Swipe up on **Home screen** > **Settings** > **System** > **Reset options** > **Erase all data (factory reset)**.
- Tap **Erase all data**.

Resetting the phone will erase all of your personal data from internal phone storage, including information about your Google Account, any other accounts on your phone, your system and application settings, and any downloaded applications. If you reset the phone in this way, you're prompted to re-enter the same kind of information as when you first set up your device.

If you are unable to power on your phone, there is another method to perform a factory data reset by pressing the Power key and the Volume up key at the same time until the screen lights up.

## Getting connected

Your phone can connect to the Internet using mobile networks or Wi-Fi, whichever is convenient and available.

### Network

The first time you turn on your phone, it will automatically configure your 4G network service.

To check the network connection you are using, swipe up on the **Home screen** > **Settings** > **Mobile network**.

### Wi-Fi

Using Wi-Fi, you can connect to the Internet when your phone is within the range of a wireless network. Wi-Fi can be used on your phone even without a SIM card inserted.

**To turn Wi-Fi on and connect to a wireless network**

- Swipe up on the Home screen, then touch **Settings** > **Wi-Fi**.
- Touch the switch next to Wi-Fi to turn Wi-Fi on or off.
- Touch Wi-Fi, the detailed information of detected Wi-Fi networks is displayed in the Wi-Fi networks section.
- Touch a Wi-Fi network to connect. If the network you selected is secured, you are required to enter a password or other credentials (you may contact the network carrier for details). When finished, touch **CONNECT**.

### Connecting to Bluetooth devices

Bluetooth is a short-range wireless communication technology that you can use to exchange data or connect to other Bluetooth devices for various uses.

**To turn on Bluetooth**

- Swipe up on the Home screen, then touch **Settings** > **Bluetooth**.
- Touch the switch to activate/deactivate this function.

**To pair/connect your phone with a Bluetooth device**

- Touch **Settings** > **Bluetooth** > **+ Pair new device**.
- Touch a Bluetooth device you want to pair your phone with from the list.
- If the pairing is successful, your phone will be connected to the device.

**To disconnect/unpair from a Bluetooth device**

- Touch next to the device name
- Touch and **FORGET DEVICE** to confirm

## Status bar

From the status bar, you can view both phone status and notification information.

### Status icons

	GSM		Alarm is set
	LTE		Connected to a Wi-Fi network
	Signal strength		Speakerphone is on
	No signal		No SIM card inserted
	Airplane mode		Battery is charging
	Bluetooth connected		Battery is low
	Headset connected		Battery is partially drained
	GPS is on		Battery is full
	Vibrate mode		

### Notification icons

	New Gmail message		Missed call
	New text or multimedia message		Connect to open Wi-Fi network
	Upcoming event		Uploading data
	Downloading data		System update available

Regulatory Agency Information	
FCC ID	2ACCJH180
Max. SAR (W/kg) - Head	1.18 W/Kg
Max. SAR (W/kg) - Body	1.18 W/Kg
HAC (Hearing Aid Compatible)	The volume control performance has been evaluated according to ANSI C63.19-2019 and waiver DA-23-914. The lowest conversational gain is 17.34 dB with a hearing aid, and 20.98 dB without a hearing-aid, using telecoil coupling capability.