

# User Manual

Model: BX-100

FCC ID: 2ACDABX-100

Dear Customer,  
Thank you very much for buying our Bluetooth speaker. Please read this manual before using.

## 1. Note

- \*Please use and store this product at normal temperature environment ;
- \*Do not expose this product to rain or wet conditions;
- \*Do not drop, to avoid damage the product ;
- \*Do not disassemble, Repair and modification the product by yourself;
- \*This product is built-in lithium battery, do not discard or set to fire to avoid dangerous!

## 2. Safety Tips

- \*Please do not listening music at high volume to protect your hearing and the products.
- \*Turn off the power switch immediately when the product no working. To prevent damage of speakers and other components.
- \*Please charge the bluetooth speakers on time. Since low battery power will affect the distance and could make disconnect.

## 3. Technical Data

- \*Bluetooth specification: Bluetooth V 2.1+EDR
- \*Transmission distance: ≤10M (due to environmental and the different Bluetooth devices)
- \*USB Charging voltage: DC 5V
- \*External Battery: Lithium Polymer batteries.

\*Frequency Response: 100Hz-20KHz  
\*Sensitivity: 80db ± 2db

\*Signal to noise ratio: ≥ 85dB

## 4. Components

- \*Speaker x 1
- \*3.5 audio cable x 1
- \*USB power cable x 1
- \*Manual x 1

## 5. Common Functions

### 1) Turn on the speaker

2) **Bluetooth connection:** Turn on the speaker and it will come to pairing mode automatically, blue lights flash.

Turn on the bluetooth of your mobile and search for the speaker. When your phone find out the speaker, Choose and confirm to connect it. If need any password or Pin please enter 0000.

And this bluetooth speaker has memory connection function. It will connect with the last mobile automatically when next time using..

## 6. Compatibility:

Bluetooth 2.1+EDR or higher version of the device (the relevant agreements, please refer to general specifications), Such as IPAD, IPHONE, IPOD TORCH, MAC with Bluetooth, and most of Bluetooth smart phone or computer.

## 7. FAQS:

Questions	Solutions
Unsuccessful pairing	1. Recheck if the speakers in the pairing mode. Or restart the speakers. 2. Too much bluetooth devices around causing the search difficult. Please close other Bluetooth devices. 3. Battery is low, Pls charge it in time.
Sound distorted/ Sound is low	1. Check the volume of the Bluetooth devices and adjust the volume to a proper Position. 2. The battery voltage is low, Please charge on time. 3. Battery is low, Pls charge it in time.
The music not smooth playing	1. <b>Beyond the effective distance, or there is barrier between the speakers and devices.</b> 2. Battery is low, Pls charge it in time.
Not working, System halted, Can not turned on	1. Low battery, Please charge again 2. Restart the speakers

## 8. Button definition and operation

MODE	KEY	Operation	Functions
BLUETOOTH MODE	◀ / -	Long Press	Volume Down
		Short press	Previous song
	📞 ➡/II	Long Press	NO
		Short press	Play/Pause
	➡ / +	Long Press	Volume Up
		Short press	Next song
	M	Long Press	NO
		Short press	Switch Mode
	◀ / -	Long Press	Volume Down
		Short press	Transferred to phone
Phone	📞 ➡/II	Long Press	Long press about 2S to reject the call
		Short press	1. Short click to pick up the phone. 2. Three-click to redial the last Number
	➡ / +	Long Press	Volume Up
		Short press	Transferred to phone
	M	Long Press	NO
		Short press	Switch Mode
	◀ / -	Long Press	Volume Down
		Short press	Previous song
	📞 ➡/II	Long Press	NO
		Short press	Play/Pause
TF Music Mode	➡ / +	Long Press	Volume Up
		Short press	Next song
	M	Long Press	NO
		Short press	Switch Mode
	◀ / -	Long Press	Volume Down
		Short press	Previous song
	📞 ➡/II	Long Press	NO
		Short press	Play/Pause
	➡ / +	Long Press	Volume Up
		Short press	Next song
Aux Line-in Mode	M	Long Press	NO
		Short press	Switch Mode
	◀ / -	Long Press	Volume Down
		Short press	NO
	📞 ➡/II	Long Press	NO
		Short press	Play/Pause
	➡ / +	Long Press	Volume Up
		Short press	NO
	M	Long Press	NO
		Short press	Switch Mode
Fm radio (insert USB cable for FM antenna)	◀ / -	Long Press	Volume Down
		Short press	Select broadcasting radio station
	📞 ➡/II	Long Press	NO
		Short press	Search broadcasting radio station
	➡ / +	Long Press	Volume Up
		Short press	Select broadcasting radio station
	M	Long Press	NO
		Short press	Switch Mode

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.