


VERTICAL TURNTABLE WITH USB PLAYER, BLUETOOTH

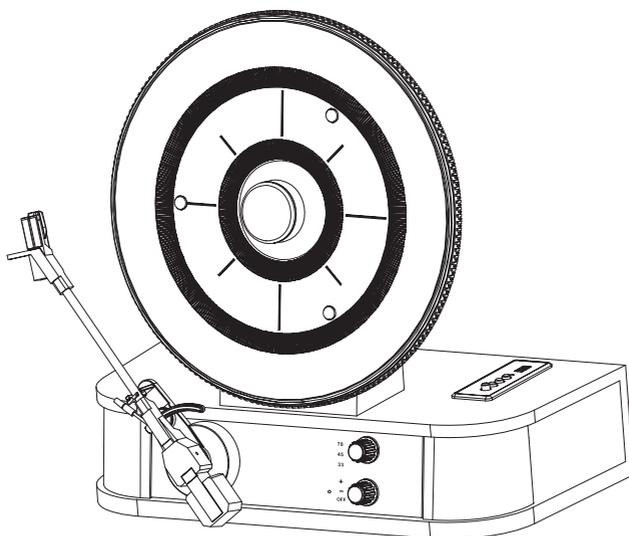

MODEL: TR-W286
Instructions Manual

CAUTION

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

 <p>The lightning flash with arrow-head symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated 'dangerous voltage' within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>	<p style="text-align: center;">CAUTION</p> <p style="text-align: center;">RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK), NO USER SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	 <p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p>
--	--	---

IMPORTANT SAFETY INSTRUCTIONS


- 1) Please read these instructions and keep them for future reference.
- 2) Pay attention to all warnings.
- 3) Follow all instructions.
- 4) Do not use this apparatus near water.
- 5) Clean only with a dry cloth.
- 6) Do not block any ventilation openings.
- 7) Install in accordance with the manufacturer's instructions. Do not install near any heat sources such as radiators, heaters, stoves, or other apparatus (including amplifiers) that produce heat.
- 8) Protect the power cord from being walked on or kinked, in particular where the plug is fitted and at the point where it exits from the apparatus.
- 9) Only use attachments / accessories specified by the manufacturer.
- 10) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 11) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 12) This appliance should not be exposed to dripping or splashing water and no object filled with liquids, such as vases, should be placed on the apparatus.
- 13) Do not overload the wall power outlet. Use only power source as indicated - i.e. 120V AC mains.

PREPARATION FOR USE

UNPACKING AND SET UP

- Carefully remove the unit from the display carton and remove all packing material from the unit.
- Unwind the AC power cord and extend it to its full length.
- Place the unit on a stable, level surface, convenient to an AC outlet, out of a strong magnetic field.
- Connect the plug to your AC outlet.
- Remove the white plastic stylus cover from the phonograph stylus by sliding it in the direction of the arrow.
- During this operation pay attention to the stylus, because the stylus damage is not covered by guarantee.

This product is designed to operate by 12V 1AAC-DC adapter. Attempting to operate this system from any other power source may cause damage to the system, and such damage is not covered by your warranty.

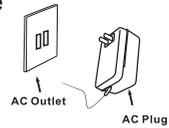

NOTE: You will note that this system is equipped with domestic standard AC power plug. If this plug does not fit into your existing AC outlet, do not try to defeat this safety feature by filing the wide blade to make it fit into your outlet. If this plug will not fit into your outlet, you probably have an outdated non-polarized AC outlet. You should have your outlet changed by a qualified licensed electrician.


PROTECT YOUR FURNITURE

This model is equipped with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These 'feet' are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polishes, wood preservatives, or cleaning sprays may cause the rubber 'feet' to soften, and leave marks or a rubber residue on the furniture. To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement centers everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the product on fine wooden furniture.


CARE OF THE CABINETS: You should care for the cabinet as you would care for any piece of the furniture. When the cabinet becomes dusty wipe it with a soft, non-abrasive dust cloth. If the cabinet becomes smudged with fingerprints you may use any good quality commercial dusting and polishing spray cleaner, however avoid spraying the plastic or metal parts of this system. We recommend that you spray the cleaner on your dust cloth. Not directly on the cabinet. to avoid getting any of the spray on the plastic or metal parts.

LOCATION OF CONTROLS AND INDICATORS

FRONT PANEL

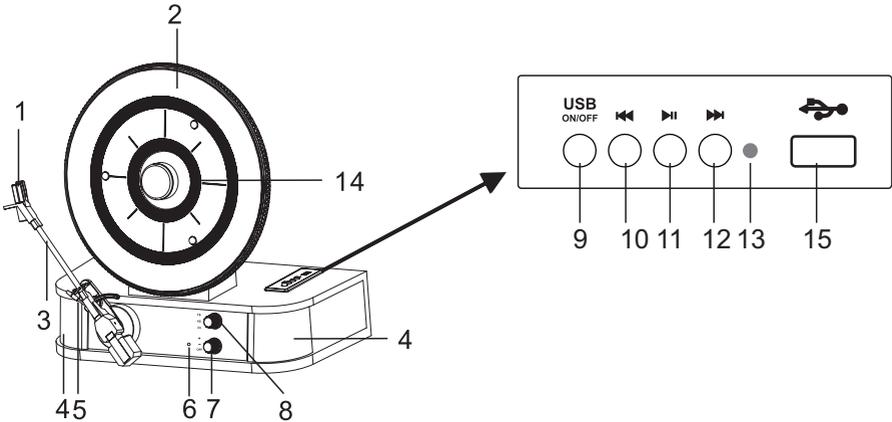

- 1) Cartridge & Stylus
- 2) Turntable
- 3) Tone Arm
- 4) Speakers
- 5) Tone arm lever
- 6) Bluetooth Indicator Light
- 7) OFF/VOLUME Knob
- 8) Speed Control Knob
- 9) USB ON/OFF Button
- 10) Forward Skip Button
- 11) Play/Pause Button
- 12) Backward Skip Button
- 13) USB Indicator Light
- 14) Magnetic Adapter
- 15) USB socket

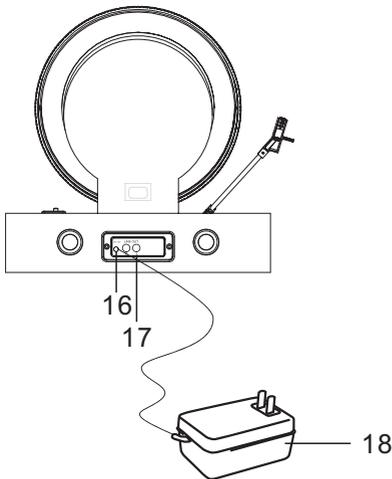

- 16) Power Jack
- 17) Line Out Jack
- 18) AC Adapter

OPERATING INSTRUCTIONS

Playing USB

1. Press USB ON/OFF button to set the unit to the USB mode, USB indicator light will be on.
2. Insert the U disk, the unit will begin to play the first song of the U disk automatically. And the indicator light will flash.
3. Press the Forward skip button ►► or the Backward skip button ◀◀ to select the song.
4. To pause playback, press Play/Pause button ►|| , the indicator light will be on; press Play/Pause button ►|| again to resume playback.
5. To stop playback, press USB ON/OFF button, the indicator light will go off.
Noted: When playing USB(the USB indicator light is on), only the Volume control knob on the front panel can be used.

TURNTABLE OPERATION

1. Rotate the ON/OFF knob to turn on the unit.
2. Rotate the SPEED CONTROL KNOB to the correct speed (33 1/3, 45 or 78 rpm) for the select record.
3. Take out the MAGNETIC ADAPTER, put a record on the TURNTABLE lightly, then put the MAGNETIC ADAPTER back to fix the record.
4. Move the tone arm over the record and lower it to point from which you want the record to start.
5. Remove the stylus protector from the stylus assembly.
6. Release the tonearm lock, use the Cue Lever too lift up the tonearm.
7. Move the tonearm over the record where play is desired to begin. Use the Cue Lever back to the down position, the tonearm will descend slowly onto the record and begin to play.
8. Rotate the volume control knob to get desired sound level.
9. At the end of the record, the tone arm will stop automatically.

OPERATING INSTRUCTIONS

BLUETOOTH FUNCTION OPERATION:


1. Turn on the unit, rotate the volume control to desert level.
2. The bluetooth function is setting as acquiescent function when turn on the unit. and make sure the tone-arm is on the resetting state. A short Bluetooth starting tone can be heard. then the Bluetooth indicator will be flashing.
3. Turn on your Bluetooth device and scan. It will be displayed as "TR-W286" when discovered by your Bluetooth device. Enter password "0000" during pairing if necessary.
4. When the unit is paired with your Bluetooth device, you can hear a short tone from the speakers.
5. Play your Bluetooth device as you normally do and the sound will be played from this unit .Then you may enjoy the music.

Note:

1. Make sure your Bluetooth device and this unit is within 10 meters.
2. Check and see if there are other Bluetooth devices nearby interfering the signal and connection.
3. This unit is could be paired by multiple different Bluetooth devices, but could only be connected and played by one of them at a time. Make sure no others device is actively connected to it already when you are trying to connect the one you are working on.

LINE OUT OPERATION

This system includes a set of LINE OUT jacks which allow you to record from the Phonograph of this system to an external recording device such as a cassette recorder, Mini-Disc, etc. In any play mode, insert the audio cable (not include) into the matching " LINE OUT" socket of the unit, operate as usual, and through the speakers of A, we can hear the sound exported from the external device(A).

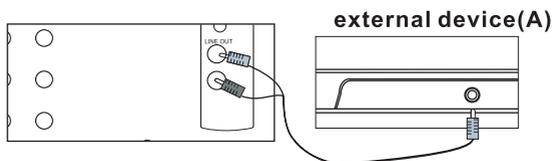

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.