 





Game Controller Super Converters


PS3 ↔ PS4 Controller Adapter

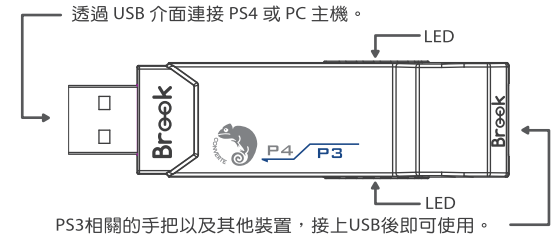

 
- step.1** 將 Game Controller Super Converters 連接到 PS4 主機的 USB 連接埠，等待 LED 藍燈亮起即代表與主機連線成功。
- step.2** 無線 PS3 手把透過 USB 線與 Game Controller Super Converters 連接後，待手把 Player 指示燈任一燈號亮起(或確認手把能用有線操控的方式對應主機功能)，即表示與 Game Controller Super Converters 註冊完成。
- step.3** 拔除無線 PS3 手把 USB 線後，即可進行無線手把操控。
- step.4** 註冊完成後，當手把休眠或關閉時，只需按壓手把上的PS按鍵即可立即連線，則不再需要重新使用USB連接線進行註冊。

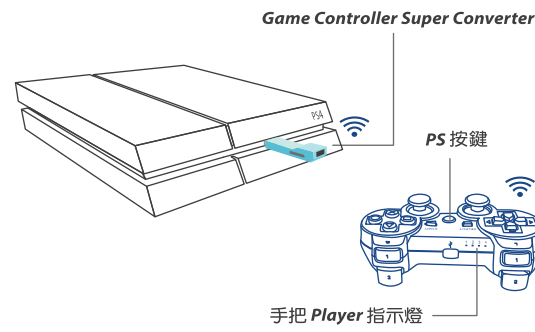

 - 每個 Super Converter 一次僅能對應一支 PS3 手把進行控制。
- 無線 PS3 手把可直接與 Super Converter 連線，若發現無法與 Super Converter 連線時，請重新註冊。

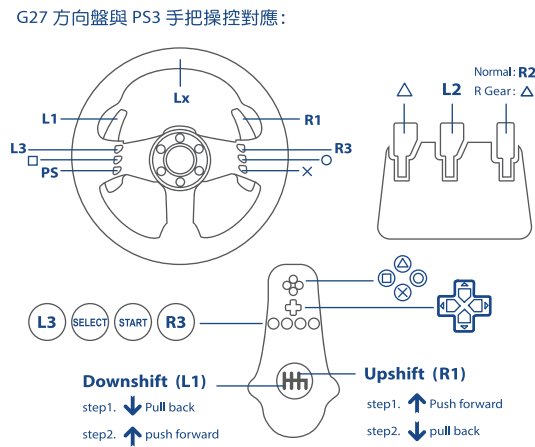

 可自動判斷 PS3 手把與方向盤功能，不需要(撥動開關)設定，自動對應 PS4 按鍵功能。按鍵功能定義方式如下：

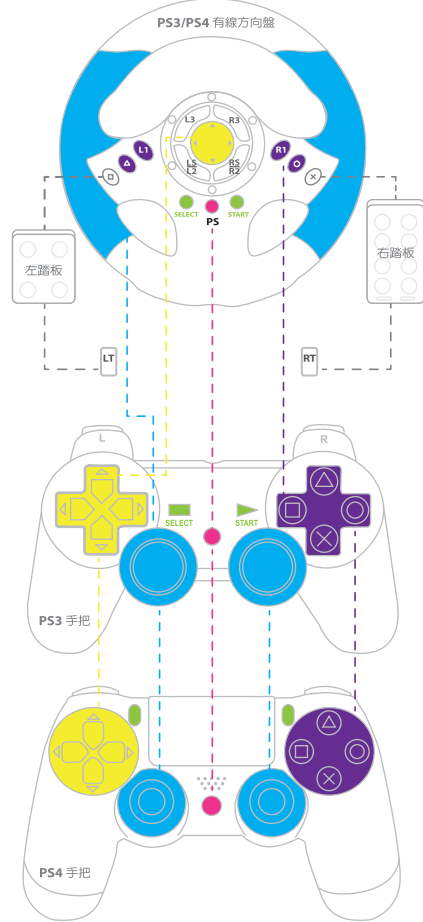

PS4 手把	PS4 有線方向盤	PS3 手把	PS3 有線方向盤
Dpad-UP	Dpad-UP	Dpad-UP	Dpad-UP
Dpad-Down	Dpad-Down	Dpad-Down	Dpad-Down
Dpad-Left	Dpad-Left	Dpad-Left	Dpad-Left
Dpad-Right	Dpad-Right	Dpad-Right	Dpad-Right
X	X	X	O
O	O	O	△
□	□	□	L1
△	△	△	R1
OPTIONS	OPTIONS	Start	Start
SHARE	SHARE	Select	Select
Lx	Lx	Lx	Lx
Ly	Ly	Ly	--
Rx	Rx	Rx	--
Ry	Ry	Ry	--
L1	L1	L1	L2
R1	R1	R1	R2
L2	L2	L2	□
R2	R2	R2	X
L3	L3	L3	L3
R3	R3	R3	R3
PS Key	PS Key	PS Key	PS Key
Touchpad Key	--	* L3+R3	* L3+R3

* 如果週邊裝置有L3 & R3按鍵，當同時按下L3 & R3時就有 Press Touchpad Key功能

Turbo 使用設定步驟：

- step.1** 將手把按住 PS 鍵 + SELECT 鍵後，轉接器的LED藍燈轉成LED紅燈，即進入設定模式。
- step.2** 按住 SELECT 鍵不放，再選擇想要連發的鍵，可選擇一個或是多個按鍵。
- step.3** 按下 START 鍵後，設定完畢。
- step.4** 按下 PS 鍵，轉接器中的LED紅燈，轉換成LED藍燈代表退出設定模式。

清除全部 Turbo 使用設定步驟：

- step.1** 將手把按住 PS 鍵 + SELECT 鍵，轉接器的LED藍燈轉成LED紅燈，即進入設定模式。
- step.2** 再同時按下 SELECT 鍵 + START 鍵，即可將設定全部清除。
- step.3** 按下PS鍵，轉接器中的LED紅燈，轉換成LED藍燈代表退出設定模式。

Remap Key/Custom Buttons 使用設定步驟：

- step.1** 將手把按住 PS 鍵 + START 鍵後，轉接器的LED藍燈轉成LED紅燈，即進入設定模式。
- step.2** 轉移單一按鍵功能 (舉例：要將○鍵功能轉換到×、△、□三鍵使用) 單一按鍵功能轉移到複數鍵 (舉例：要將○鍵功能轉換到×、△、□三鍵使用)
- step.3** 按下PS鍵，轉接器中的LED紅燈，轉換成LED藍燈代表退出設定模式。

清除全部Remap Key/Custom Buttons 使用設定步驟：

- step.1** 按住 PS 鍵 + START 鍵，轉接器的LED藍燈轉成LED紅燈，進入設定模式。
- step.2** 再同時按下 SELECT 鍵 + START 鍵，即可將設定全部清除。
- step.3** 按下 PS 鍵，轉接器中的LED紅燈轉換成LED藍燈，代表退出設定模式。

 
更多詳細操作請上官網查詢 www.brookaccessory.com

根據國家通訊傳播委員會(NCC)「低功率電波射頻性電機管理辦法」第12條和第14條規定：經型式認證合格之低功率射頻電機，非經國家通訊傳播委員會(NCC)許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前項合法通信，指依電信法規定作業之無線電通信。低功率射頻電機須忍受合法通信或工業、科學及醫療用電波射頻性電機設備之干擾。




Game Controller Super Converters


PS3 ↔ PS4 Controller Adapter

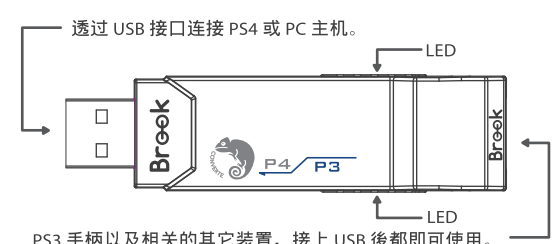

 
- step.1** 將 Game Controller Super Converters 連接到 PS4 主機的 USB 連接埠，等待 LED 藍燈亮起即代表與主機連線成功。
- step.2** 無線 PS3 手柄透過 USB 線與 Game Controller Super Converters 連接後，待手柄 Player 指示燈任一燈號亮起(或確認手柄能用有線操控的方式對應主機功能)，即表示與 Game Controller Super Converters 註冊完成。
- step.3** 拔除 PS3 手柄 USB 線後，即可進行無線手柄操控。
- step.4** 註冊完成後，當手柄休眠或關閉時，只需按壓手柄上的PS按鍵即可立即連線，則不再需要重新使用USB連接線進行註冊。

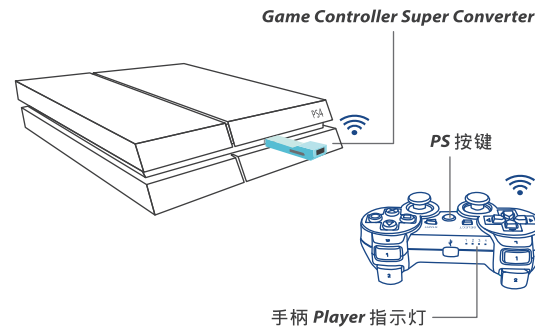

 - 每個 Super Converter 一次僅能對應一支 PS3 手柄進行控制。
- 無線 PS3 手柄可直接與 Super Converter 聯機，若發現無法與 Super Converter 聯機時，請重新註冊。

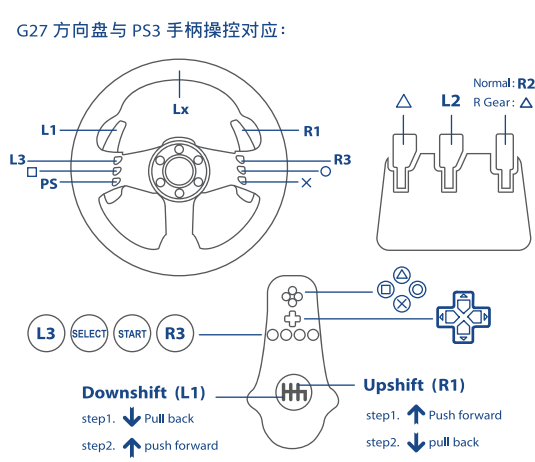

 可自動判斷 PS3 手柄與方向盤功能，不需要(撥動開關)設定，自動對應 PS4 按鍵功能。按鍵功能定義方式如下：

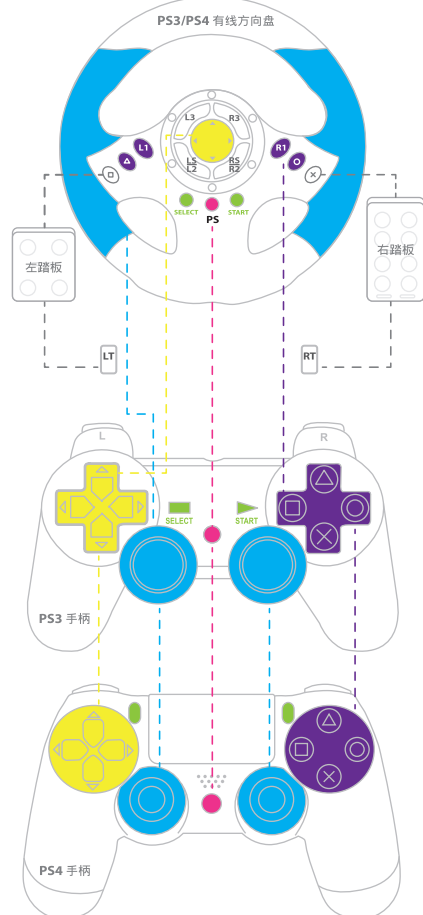

PS4 手柄	PS4 有線方向盤	PS3 手柄	PS3 有線方向盤
Dpad-UP	Dpad-UP	Dpad-UP	Dpad-UP
Dpad-Down	Dpad-Down	Dpad-Down	Dpad-Down
Dpad-Left	Dpad-Left	Dpad-Left	Dpad-Left
Dpad-Right	Dpad-Right	Dpad-Right	Dpad-Right
X	X	X	O
O	O	O	△
□	□	□	L1
△	△	△	R1
OPTIONS	OPTIONS	Start	Start
SHARE	SHARE	Select	Select
Lx	Lx	Lx	Lx
Ly	Ly	Ly	--
Rx	Rx	Rx	--
Ry	Ry	Ry	--
L1	L1	L1	L2
R1	R1	R1	R2
L2	L2	L2	□
R2	R2	R2	X
L3	L3	L3	L3
R3	R3	R3	R3
PS Key	PS Key	PS Key	PS Key
Touchpad Key	--	* L3+R3	* L3+R3

* 如果周邊裝置有L3 & R3按鍵，當同時按下L3 & R3時就有 Press Touchpad Key功能

Turbo 使用設定步驟：

- step.1** 將手把按住 PS 鍵 + SELECT 鍵後，轉接器的LED藍燈轉成LED紅燈，即進入設定模式。
- step.2** 按住 SELECT 鍵不放，再選擇想要連發的鍵，可選擇一個或是多個按鍵。
- step.3** 按下 START 鍵後，設定完畢。
- step.4** 按下 PS 鍵，轉接器中的LED紅燈，轉換成LED藍燈代表退出設定模式。

清除全部 Turbo 使用設定步驟：

- step.1** 將手把按住 PS 鍵 + SELECT 鍵，轉接器的LED藍燈轉成LED紅燈，即進入設定模式。
- step.2** 再同時按下 SELECT 鍵 + START 鍵，即可將設定清除。
- step.3** 按下PS鍵，轉接器中的LED紅燈，轉換成LED藍燈代表退出設定模式。

Remap Key/Custom Buttons 使用設定步驟：

- step.1** 將手把按住 PS 鍵 + START 鍵後，轉接器的LED藍燈轉成LED紅燈，即進入設定模式。
- step.2** 轉移單一按鍵功能 (舉例：要將○鍵功能轉換到×、△、□三鍵使用) 單一按鍵功能轉移到複數鍵 (舉例：要將○鍵功能轉換到×、△、□三鍵使用)
- step.3** 按下PS鍵，轉接器中的LED紅燈，轉換成LED藍燈代表退出設定模式。

清除全部Remap Key/Custom Buttons 使用設定步驟：

- step.1** 按住 PS 鍵 + START 鍵，轉接器的LED藍燈轉成LED紅燈，進入設定模式。
- step.2** 再同時按下 SELECT 鍵 + START 鍵，即可將設定清除。
- step.3** 按下 PS 鍵，轉接器中的LED紅燈轉換成LED藍燈，代表退出設定模式。

 
更多詳細操作請上官網查詢 www.brookaccessory.com



Game Controller Super Converters

Magic stick P4-WH


PS3 PS4 Controller Adapter

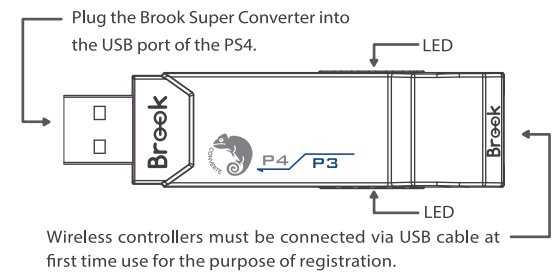

step.1
Connect the Brook Super Converter to the USB port of the PS4 or PC. The converter's blue LED will turn on to indicate a successful connection.

step.2
For first time use the wireless PS3 controller is connected with a USB cable to the Super Converter. Registration of the controller and mapping of buttons start automatically and finish when the port indicator light of the controller turns on or when pushing a button triggers a response on the screen. The cable is then disconnected and the controller is ready for playing.

 
step.3
The USB cable is removed and the controller is ready for use as wireless.

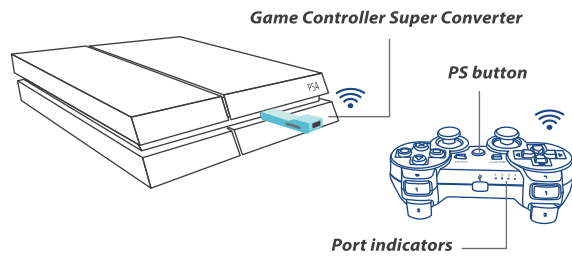


step.4
Please note that this process only needs to be completed once. After the first-time registration and use, simply press the PS button when the console is hibernating or shut down to have it automatically connect to the Super Converter; there is no need to re-register the controller using the USB cable.

- Each Super Converter can handle one PS3 game controller at a time.
- Wireless PS3 controllers connect to the Super Converter automatically. In case they don't, please try to re-register the controller with the USB cable.

 G27 Racing Wheel with PS3 Gamepad map as follows:

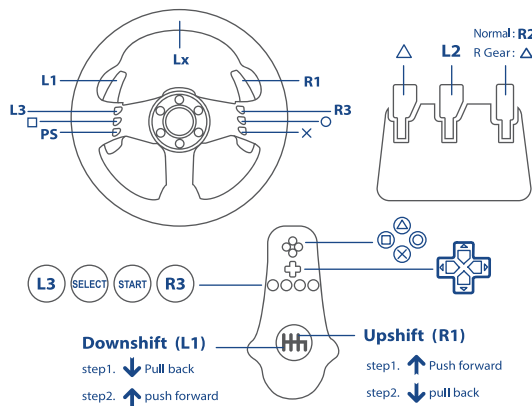

 The PS3 to PS4 Super Converter automatically recognizes PS3 gamepads and racing wheels and auto-configures their buttons for use with the PS4. No toggling required. The buttons map as follows.

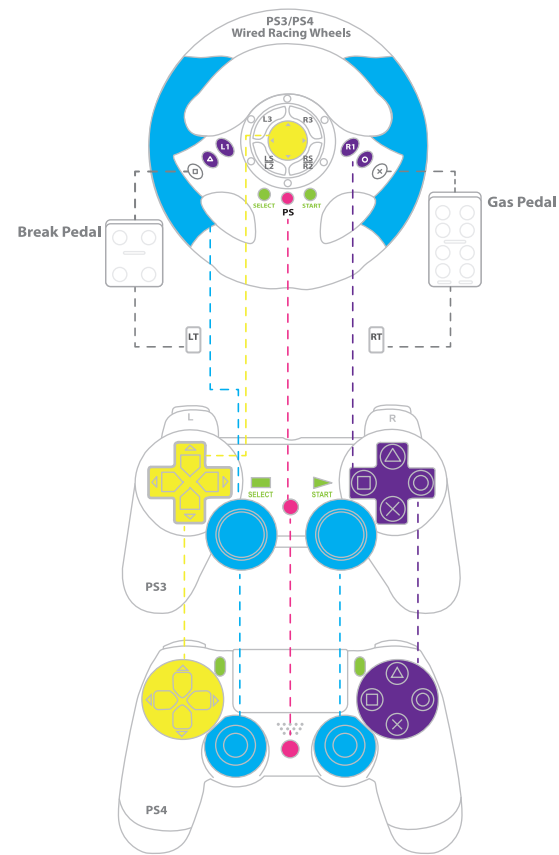

PS4 Gamepad	PS4 Wired Racing Wheel	PS3 Gamepad	PS3 Wired Racing Wheel
Dpad-UP	Dpad-UP	Dpad-UP	Dpad-UP
Dpad-Down	Dpad-Down	Dpad-Down	Dpad-Down
Dpad-Left	Dpad-Left	Dpad-Left	Dpad-Left
Dpad-Right	Dpad-Right	Dpad-Right	Dpad-Right
X	X	X	O
O	O	O	△
□	□	□	L1
△	△	△	R1
OPTIONS	OPTIONS	Start	Start
SHARE	SHARE	Select	Select
Lx	Lx	Lx	Lx
Ly	Ly	Ly	--
Rx	Rx	Rx	--
Ry	Ry	Ry	--
L1	L1	L1	L2
R1	R1	R1	R2
L2	L2	L2	□
R2	R2	R2	X
L3	L3	L3	L3
R3	R3	R3	R3
PS Key	PS Key	PS Key	PS Key
Touchpad Key	--	* L3+R3	* L3+R3

 
* If your device has L3 and R3 keys then pressing them simultaneously will emulate a Touchpad.

Procedure for assigning a Turbo button

step.1
Press the PS and SELECT buttons at the same time. The converter's LED will switch from blue to red to indicate that you enter the settings mode.



step.2
Press the SELECT button and the button you want to assign as the Turbo button at the same time. More than one button can be chosen.

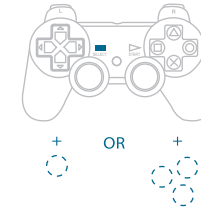

step.3
Press the START button to complete the setting.



step.4
Press the PS button to exit the settings mode. The converter's LED will switch back from red to blue.

 


Procedure for clearing a Turbo button assignment

step.1
Press the PS and SELECT buttons at the same time. The converter's LED will switch from blue to red to indicate that you enter the settings mode.



step.2
Press the SELECT and START buttons at the same time to clear the current setting.

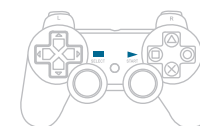

step.3
Press the PS button to exit the settings mode. The converter's LED will switch back from red to blue.



Procedure for customizing buttons

step.1
Press the PS and START buttons at the same time. The converter's LED will switch from blue to red to indicate that you enter the settings mode.



 
step.2
Transfer a function from one button to another.
(Example: You want to use □ to do what O does now.)

1. Press the O button.
2. Press and hold SELECT, then press the □ button.
3. Press START to complete the setting.



Transfer a function from one button to multiple buttons.
(Example: You want to use X, △, or □ to do what O does now.)

1. Press the O button.
2. Press and hold SELECT, then press X, △ and □ one by one (any sequence will do).
3. Press START to complete the setting.

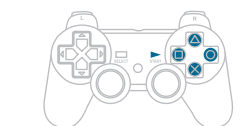

step.3
Press the PS button to exit the settings mode. The converter's LED will switch back from red to blue.



Procedure for resetting all customized buttons

step.1
Press the PS and START buttons at the same time to enter the settings mode. The converter's LED will switch from blue to red to indicate that you enter the settings mode.



step.2
Press the SELECT and START buttons at the same time to clear the custom buttons.



step.3
Press the PS button to exit the settings mode. The converter's LED will switch back from red to blue.



FCC Statement:
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.