

USER'S MANUAL

BLUETOOTH STEREO HEADSET

SPECIFICATIONS

Model NO			BluetoothV.3.0+EDR
Bluetooth profiles	HSP,HFP,A2DP,AVRCP	Effective Range	10Meters
Music Time	6-8Hours	Talk Time	7Hours
Standby Time	Up to 65 Hours	Input	DC:5V/130mAh
Charge Time	3Hours	Dimensions	14.5*10*6CM

About R-888

R-888 is a stereo headset with Bluetooth technology.It supports the following Bkyetooth profiles:

HSP-Headset Profile

HFP —— Hands-free Profile


A2DP—— Advanced Audio Distribution Profile

AVRCP——Audio/Video Remote Control Profile

Overview

1	Built-in microphone	2	3.5mm audio line
3	LED Indicator	4	+key:volume up/next song
5	Mulfifunction button:answer,and reject call,pause and play		
6	-key:volume down	7	Charging port

(如下图)

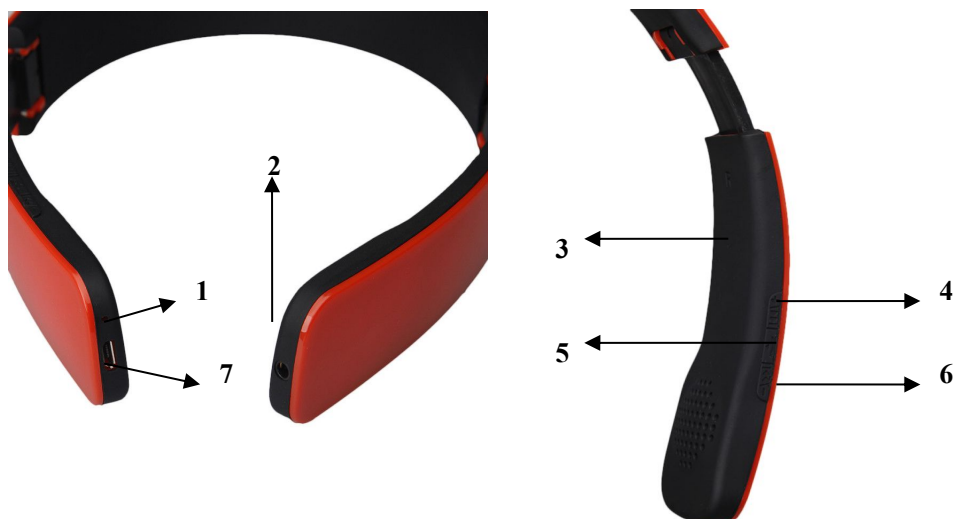

Charging the battery with Micro USB cable

- Step1: Insert USB charging cable into USB port which have support 5V power (such as AC/DC USB adapter or PC USB port)
- Step2: Connect charging cable to the charging port of headset.
- When the red light is on, the headset is in charging.
- When the red light is off, the headset is fully charged.
- It takes about almost 3 hours to charge the headset fully.

Warning:

- The battery is rechargeable.
- First time charging : first time charger battery ,please be sure the battery has been charged fully before use.

How to use

1) Switching on / off headset

Function	Operation	LED indicator	Voice prompt
Switch on	Press .) button for 2 seconds, and release it till the blue LED is on	Blue LED blink 3 times.	Power On
Switch off	Press .) button for 4 seconds, and release it till the red LED is on	Red LED blink 3 times	Power Off

Pairing the headset with Bluetooth devices

A. How to enter pairing mode

Function	Operation	LED indicator	Voice prompt
Enter pairing mode	Make sure the headset is off. Press and hold .) button for 6 seconds, and release it till the red and blue LEDS blink alternately	Red and blue LED blink alternately.	Pairing

B. Pairing the headset with Bluetooth mobile phone

Please make sure your mobile phone has Bluetooth function that can be used.

Notes: Specific pairing procedures may vary with different mobile phone. Please refer to your mobile phone manual for further information. Steps as follows:

- Please keep the headset and mobile phone in the range of 1 meter when pairing.
- Make the headset enter into pairing mode (LED is red and blue blinking)
- Start the Bluetooth function of mobile phone and search for new Bluetooth devices.

After searched, select “R-888” in the Bluetooth device list.

- According to indication, enter password or PIN No:”0000”, and press the key of” Yes” or “confirmed”. (it depends on the Bluetooth device setting)
- After successful pairing, select “R-888” in the Bluetooth device list, and press “connect”.
- After connect successfully, the blue LED of the headset will keep blinking.

Notes:

- If the pairing is not successful, please switch off headset firstly, and then re-pair again.
- After pairing is successful, paired devices will remember each other. Unless pairing information is deleted because of new pairing, no need to pair when use next time. If you want to pair the headset with other devices, please pair it with the new device according to steps 1~6 mentioned above.
- Multilink technology allows simultaneous connection to two different devices, just simply repeat the pairing process on both devices.
- Although WIN7 is a superior operating system with most drivers already built-in, in some cases this does not cover the various hardware configurations built into the device (e.g. PC, Note book, Net book etc) from the manufacturer. In this case, please visit the manufacturer’s web site for the latest Bluetooth drivers for your onboard Bluetooth device.

3) Re-connecting to a Bluetooth device

- **Automatic connecting**

Every time the headset is switched on, it will connect to last connected device automatically, of course the source device Bluetooth must be on “on” states

- **Manual connecting to last connected HFP device**

When the headset is in standby mode and doesn’t connect to any HFP devices, short press .) button once, it will connect to last connected source device

automatically.

Notes:

- Before connecting to a Bluetooth device, please turn on the Bluetooth device's Bluetooth function.

- On some Bluetooth devices, take some Nokia mobile phones for example, you have to allow automatic connecting in the mobile phone's settings. Please refer to your mobile phone's manual for further information.

4) Making calls with the headset

Function	Status of headset	Operation
Voice dial	Standby mode	Press and hold .) button for 1 second, release it till hearing indication sound ,then speak the call you want to.
Redial last number	Standby mode	Short press .) twice quickly
Volume up	Conversation mode	Short press + key
Volume down	Conversation mode	Short press - key
Answer calling	Ringing	Short press .)
Reject calling	Ringing	Press and hold .) button for 1 second, and release until you hear indication sound

- Not all the mobile phones support all the functions listed above. Please refer to the instruction of your mobile phone.
- Some functions and indication tones may vary with different mobile phones.
- When the volume is adjusted to max or min, you will hear a indication tone.
- For some mobile phones, when you press the key of accepting on the phone, the conversation will be sent to the mobile phone. At this time, you can switch the call to headset by using the conversation switch button or through operating on the mobile phone. Please refer to the instruction of your mobile phone for further information.

5) Playing music

When the headset connects with the mobile phone or Bluetooth transmitter , you can enjoy music through headset wirelessly.

Function	Status of headset	Operation
Pause	Playing music	Short press .)

Play	Pausing	Short press .)
Next song	Playing music	Short press ►► key
Last song	Playing music	Short press ◀◀ key
Volume up	Playing music	Short press + key
Volume down	Playing music	Short press - key

Notes:

- For some of mobile phones, when they are playing music, the music will transmit to the speaker of mobile phone, you have to choose “transmit the sound through Bluetooth” in the “setting” of music play interface, and then choose “R-888” in the device list, the music will be transmitted to the headset. Please refer to the instruction of your mobile phone for further information.
- When the volume of headset is adjusted to max. or min, you will hear a indication DU DU tone.
- Remote control the function of last song/next song/pause, it needs your mobile phone or Bluetooth transmitter supports AVRCP. Please refer to the instruction of your mobile phone or Bluetooth transmitter for further information.

6) LED

1) Battery Charging mode

LED indicator	Status of the headset
Red LED is on	Charging
Red LED is off	Finish charging

2) Operation mode

LED Indicator	Status of the headset
Red and blue LEDs blink alternately	Pairing mode
Blue LED quickly blinks twice every 1 seconds.	Not connected to a device
Blue and Red LED quickly blinks three times every 2 seconds	Set up HFP and A2DP connection
Red LED blinks twice every 20 seconds	Low power

Re-connecting to a Bluetooth device

A) Automatic connecting

Every time the headset is switched on, it will connect to the nearest, and last connected device automatically.

B) Manual connecting to last connected device

When the headset is in standby mode and doesn't connect to any device, short press .) button once, it will connect to last connected device automatically.

FCC Information and Copyright

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates,

uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference

to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does

cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is

encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC RF warning statement: the device has been evaluated to meet general RF exposure requirement , The device can be used in portable exposure condition without restriction.