

Light Repute International Limited

Model NO.:Z5

User manual

Light Repute International Limited

Table of Contents

I. Precautions	4
1 safety	4
1.1 Traffic Safety First	4
1.2 IN HOSPITALS off	4
1.3 AIRCRAFT off	4
1.4 when refueling shutdown	4
1.5 in the vicinity of blasting areas	4
2 Using the phone's Notes	4
2.1 Interference	4
2.2 rational use of	4
2.3 QUALIFIED SERVICE	4
2.4 waterproof	4
2.5 Emergency Call	4
3 Battery Caution	4
4 Children Precautions	4
Second, the keyboard description	5
This manual called "press" means associated with the screen with your fingers touch the screen.	5
Third, started	5
1, the battery	5
1.1 Battery removal and installation	5
1.2 Rechargeable batteries	5
2, connected to the network	5
2.1 SIM card	5
2.2 SIM card insertion and removal	6
2.3 memory card insertion and removal	6
2.4 switch phone	6
2.5 SIM card to unlock	6
2.6 to connect to the network	6
Fourth, the basic functions	6
1. Call	6
1.2 hit list telephone	6
2. Emergency call	7
3. Answer the phone	7
The call records	7
5. Call options	7
V. Function Menu Description	7
1. File management	7
2. Flashlight	7
3. message	7
4 Gallery	8

5 recorder	8
6 Dial	8
7 Explorer	8
8 Calendar	8
9 clock	8
10 Email	8
11Contacts	8
12 Calculator	9
13 settings	9
13.1 SIM card management	9
13.2 WLAN	9
13.3 Bluetooth	9
13.4 9 traffic usage	
13.5 Network Management	9
13.6 Profiles	9
13.7 Show	9
13.8 Timer switch	9
13.9 Languages and Input	9
13.10 Date and time	9
9 13.11 Account	
13.12 Security	9
13.13 location	9
13.14 Restore factory settings	10
13.15 stores	10
13.16 Battery	10
13.17 Application	10
13.18 uninstall	10
13.19 Printing	10
13.20Accessibility	10
13.21 on the phone	10
14 Music	10
15 Cameras	10
16 SIM card applications	10
17 Notepad	10
18 Radio	10
Sixth, the Quick Start Guide	11
Seven, hazard warning	11
7.1 Precautions	11
7.2 charging	12

I. Notes

Read these simple guidelines. Breaking the rules may be dangerous or illegal.

1 safety

1.1 Traffic Safety first

When driving, use of mobile phones to be careful; if bad driving conditions, set the car parked on the roadside, and then use the phone.

1.2 in the hospital should be shut down

Follow any regulations or rules. When the medical device near your shutdown.

1.3 SWITCH OFF IN AIRCRAFT

Wireless devices can cause interference in aircraft. Not only dangerous but also illegal use of mobile phones on the plane.

1.4 OFF WHEN REFUELING

Do not use the phone at a refueling point. Near fuel or chemicals Do not use the phone.

1.5 in the vicinity of blasting areas

Please do where blasting is in progress using cell phones. Observe any restrictions, and follow any regulations or rules.

2 Using the phone's Notes

2.1 Interference

All wireless phones may be susceptible to interference, which could affect call quality.

2.2 rational use

In the normal position Use the phone only. If not necessary, do not touch the antenna.

2.3 QUALIFIED SERVICE

Only qualified personnel may install or repair this product.

2.4 Waterproof

Your phone is not water-resistant. Keep it dry.

2.5 Emergency Call

Determine the phone powered on and in service. Enter the emergency service number and touch dial keys.

3 Battery Caution

3.1 Do not place the battery near a fire or thrown into the fire to avoid danger;

3.2 Do not dispose of batteries thrown into the garbage, it should be sent to designated waste battery recycling center.

4 Children Notes

Keep the phone away from children hard to reach places, so children will cause personal injury as a toy.

Second, the keyboard description

☐ Home key

Press to return directly to standby.

☐ Off button

Long press on or off the phone, press the lock screen and activate the screen.

☐ volume up / down key

Press the volume up / down keys to increase or decrease the volume.

☐ return key

Click this touch screen, usually return to the previous menu.

☐ Menu key

Click this touch screen to enter the selection menu.

This manual called "press" means associated with the screen with your fingers touch the screen.

Third, start using

1, battery

The initial state of the battery charge about 50% of the electricity can be used after open. The first three charging thoroughly run out of power before full use, this battery is easy to achieve the best state.

1.1 Battery removal and installation

When removing the following steps:

- 1 Open the battery cover;
- 2 Lift the bottom of the battery;
- 3 and remove it from the battery compartment.

When you install the following steps:

- 1 battery metal contacts facing up and the battery compartment metal contacts aligned and battery snaps into the bottom of the battery compartment;
- 2 parallel cover the battery cover, until completely closed.

Battery charging 1.2

When the state of charge, battery indicator icon area of the phone screen symbol as shown; if turned off, charging indication picture will appear on the screen, your phone is charging. If the phone is still excessive use of power is low, it may take some time before the charging indicator appears on the screen after charging begins.

When the battery indicator icon area of the display screen are full, indicating that the charge has been completed. If the charge off, the screen will display the charging complete picture. Batteries, cell phone and charger get hot during charging, this is normal.

Disconnect the AC power outlet and inter-phone and charger when charging is complete.

Note: Be sure to place the charging environment temperature $-10\text{ }^{\circ}\text{C} \sim +55\text{ }^{\circ}\text{C}$ ventilated place, and be sure to use the charger provided by the manufacturer. Use of an unapproved charger may be dangerous, but also in violation of the provisions of the manufacturer warranty. If the temperature is too high or too low during charging, the phone will automatically alarm and stop charging, so as not to damage the battery or danger.

2, connected to the network

2.1 SIM card

Before using the phone you must insert a valid SIM (Subscriber Identity Module) card in the phone.

And to establish a network connection all the relevant information is recorded in the SIM card's chip, including names stored in the SIM card of your phone book, phone number and a short message. In order to prevent loss and damage to the SIM card information, you should avoid touching the metal contacts and SIM cards away from electric and magnetic places.

2.2 SIM card insertion and removal

- ☐ Turn off the phone, remove the battery and other external power.
- ☐ the SIM card into the SIM card holder.
- ☐ When you need to remove the SIM card, turn it off, remove the battery, and then take the card.

Warning: Be sure to phone off before removing the SIM card. Doing so may damage your SIM card.

2.3 memory card insertion and removal

☐ Turn off the phone.

☐ Insert the card into the slot.

☐ such as the phone does not support T card is hot swappable. If inserted SIM card, when you need to remove the memory card, turn it off, and then take the card

2.4 switch phone

To turn on the phone or turn off the phone, please press the switch button. If you first turn on the phone, but no SIM card inserted, the phone will prompt "no SIM card."

After inserting the SIM card is powered on, it appears on the display the following tips in order:

Enter PIN - If you set SIM card password.

Find - the phone will search until it finds a suitable network connection.

2.5 SIM card to unlock

To prevent unauthorized use of your SIM card with a PIN (personal identification number) code encryption protection. Elected to use this capability, if you have set up PIN code protection, you must enter the PIN code each time you switch, so you can unlock the SIM card, the phone to normal use.

Users can turn off the SIM card password, but in this case, SIM cards can not prevent unauthorized use.

☐ Enter your PIN with the Delete key to clear a mistake, press the left soft key "OK" to the end.

For example, if the PIN is set to 1234, then the following entries: 1234 OK

If three consecutive error, your SIM card will be locked by the network, the phone will ask for PUK code.

Note: Your network supplier will set a standard for your SIM card's PIN number (4-8), you should change it as soon as possible for your personal password.

2.6 to connect to the network

After the SIM card is unlocked successfully, the phone automatically searches for available network (displayed on the screen to find). Once contact the network provider's name will appear in the upper central region of text and graphics. In this case your phone is connected to a network.

Note: If the prompt "can make emergency calls" (Emergency), means that you have in the normal network coverage (service area) or outside your card is not verified, but you can still send emergency call according to intensity of the signal on the screen .

Fourth, the basic function

1. Phone

When the network provider's logo appears on the screen, you can make or receive calls.

Information bar at the top of the display screen shows the network signal strength.

It affects call quality affected by obstacles, so moving in a small range can effectively improve call quality.

1.2 hit the Phone List

You dialed and then hear each telephone number in the phone call records are in the table. Most recently dialed, answered and missed phone numbers in a time series include all calls fall

recorded in the same interface. To see a list of key operation shall be carried out as follows:

- ☐ standby mode, press Dial icon to select dial to view the address book.
- ☐ all phone numbers appear in the list can make a call by clicking record.

2. Emergency Call

As long as you are within the network coverage (you can check the phone's display network signal strength indication bar on the top left), you can call the emergency services. If your network provider does not provide roaming service in the area, the display will show "can make emergency calls" (Emergency), tells you can only call emergency numbers. If you are in network coverage, even without the SIM card also can make emergency calls.

3. Answer the phone

Slide the call interface "Answer" icon in the call, if the headset is plugged in, you can use the buttons on the headset to answer the call.

4. Call records

Your phone except in accordance with the time down sequence includes all phone records, you can touch "All" control, select a call type, they filter out various types of call records, such as whole, received calls, dialed calls, not answer the phone.

5. Call options

The call option is only available during a call to see, and call waiting, call hold, conferencing and other functions need network support, please contact your network provider.

In a call option, you can do the following: Add Call, Hold, recording, mute, keypad, speakerphone, end the call. In addition, the phone has conferencing capabilities:

- ☐ conference call *

Into the multi-party conference call, you can follow the prompts, answering the waiting call, to multi-party call; will maintain a multi-party conferencing; and meeting one private conversation, to keep all the other party; the party turned on with the other They quit conferencing; in the multi-party holding; end the current call and all call on hold.

Note: * marked menu item is only present in a given situation. For the meeting, you need the appropriate service operators to subscribe to.

V. Function Menu Description

File management

You can save the file in your phone or memory card to operate.

2. Flashlight

You can open or close the flashlight.

3 Information

Tap to compose a new message, to establish a new message:

1. Click on the edit box, pop-up virtual keyboard, you can enter the content;
- 2, the touch screen number input box number, or click the Add a contact icon to add the stored contact numbers from your contacts list. 3, touch-screen contents of the input box, enter the contents, you have finished, touch to send, it can send.

Type in the option to add information when composing a new theme will be switched to MMS messages; add attachments, you can add in the photo gallery, take a new photo, video within a selected gallery, shoot video, add audio, sound recordings and electronic business card file, add slide; insert common phrases; insert emoticons; abandon the current edit information; to see all sessions.

In the message list interface can compose new messages; delete the session; have a keyword search for information; settings can be stored settings, SMS settings, MMS settings, notification settings, font settings.

Press select to delete the session information session

Long press of a particular piece of information, you can lock information (releasing information locked), forwarding information, copy text, copy to sim card, view the message details, delete information.

4 Gallery

Enter the gallery interface into a different folder, you can view saved in the phone or memory card photos and videos. When viewing a photo about the slide switch next to enter the menu can delete the picture, slide show, edit, left, right rotation, cropping, set the photo as wallpaper / contact photos, details and print operations You can also share photos via Bluetooth, information, e-mail and other means. When viewing the video can click the buttons below the screen forward, backward, before an after a video, you can drag the progress bar pulling part to want to watch; to enter menu playback size, answer mode, and channel and other settings; also The current video can be shared through information, Bluetooth, e-mail and other means.

5 Recorder

Click the record button to start recording in the middle of the screen is a timer, and then press the pause button to stop recording, eject save / cancel option, click "Save" to save the recording. The list can be set to enter the recording storage path, press and audio files can delete the list of recordings and rename operation.

6 Dial

Click on standby interface dial, the dial pad interface, the phone can be fuzzy matching local contacts, you can select the number you wish to dial from the matching records. During a call, you can also dial keypad or select a contact to add a new call for a new dial.

7 Browser

Click the browser icon to enter the web search interface, you can select any web browsing.

8 Calendar

Enter calendar submenu will be displayed on the screen and the current date of the month calendar background box marked with a special color. Direct exposure to the date browse by date, calendar information on the screen will be updated accordingly. See calendar interface, click on any date but also a new memo activities.

9 Clock

Enter the clock menu, can be alarm clock, world time, countdown and stopwatch functions operate.

10 Email

We first need to create an account, select E-mail setup wizard, enter a password to complete the account creation. Then you can write the message, update mail account, the global mail settings.

11 contacts

Enter the Contacts menu, you can view all your contacts, search for contacts or new contacts. New contact that is adding new record a telephone number to the SIM card or the machine.

In addition, you can also view call records and groups.

12 Calculator

Your phone provides you with a simple function calculator, you can tap the arithmetic symbols on-screen operations. Note: This calculator has limited accuracy will produce rounding errors.

13 Set

13.1 SIM card management

Display SIM card information; you can to voice calls, messages, data connection settings, etc.

13.2 WLAN

WLAN feature is turned on or off after opening near the wifi scanning device, after a successful connection can be used normally wifi network.

13.3 Bluetooth

Turn on Bluetooth, search for nearby Bluetooth devices paired, you can transfer files after the pairing is successful; can search for Bluetooth headset devices, can be used after paired Bluetooth headset to listen to music, talk.

13.4 traffic usage

It can be viewed over a period of time, the mobile data usage.

13.5 Network Management

Set the priority network, turn on or off Airplane mode, the network share point and portable perform other operations.

13.6 Profiles

You can choose to set the standard, silent, meeting, outdoor mode, Standard mode can be set to call, notification, and other tones.

13.7 Display

Brightness can automatically rotate the screen, wallpaper and sleep and other functions set

13.8 Timer switch

After setting Switcher Time and Repeat form, the phone will power down in battery case, turn on or off automatically at a set time.

13.9 Languages and Input

Alternatively phone language, select the type of input, and adjust the pointer speed.

13.10 Date and Time

To access this function, you can use the network to automatically determine and update time zone, turn off the automatic determine the date and time, you can manually adjust the date and time; you can also select the date and time display format.

13.11 Account

Add the correct account information

13.12 Security

This feature can be set to screen lock mode, the owner information is also encrypted phone and set SIM card lock and other functions.

13.13 location information

You can set whether to access the phone's location information allowed. .

13.14 Restore factory settings

You can restore the phone to factory settings and other functions.

13.15 store

You can view the phone memory usage, images, audio, caching, download data and other space size and other functions.

13.16 Battery

You can view the key peripherals such as displays, radio frequency power consumption situation, and battery information.

13.17 Applications

You can view the running, download and other applications list.

13.18 uninstall

Recalling the installation procedures for unloading operation

13.19 Print

Related operations can be performed after the installation procedures

13.20 Accessibility

Can be opened / closed captions, zoom gesture; you can also select a large font, press the power button to end the call and other functions.

13.21 About phone

Including status messages, legal information, model, Android version, Baseband version, kernel version and the version number.

14 Music

Support for multiple audio formats; drag the progress bar, you can play any of the music, and then click the Play button to pause or play, click on the icon on the left and right to switch to switch on a song to the next song. Select and hold down the music, albums, songs and playlists and other options to perform playback operations. Any player interface, press the top right corner of the screen icon or menu keys music library, Party Shuffle, add to the playlist, delete, sound, used as ringtones and exit the player interface menu operation.

15 camera

Into the camera viewfinder screen, click on the camera icon or video icon can take pictures or video; click the Switch icon to switch back and forth to use the camera to take pictures; setup options to adjust the exposure, framing mode, preview mode, image size, brightness, color effects, framing mode settings.

16 SIM card applications

Depending on your selected service providers, content displayed in this menu will vary, details see the phone

17 Notepad

You can add new items.

18 Radio

Plug in your headphones, you can search for radio; you can switch play broadcast through the speaker.

Sixth, the Quick Start Guide

Features

Your phone has a mobile phone in addition to the basic functions, but also support rich, practical, efficient multimedia features, briefly described as follows:

☐ Contacts: quickly find qualified support telephone number is recorded; each phonebook records are stored on the phone can store multiple phone numbers, SIM card phonebook entries can be stored according to card capacity may be; support in the phonebook Send a text message, copy the single record to the SIM card or phone and choose to support copy phonebook entries

between the SIM card and phone; support delete SIM card and phone book records in the phone.

☐ Call records: information about your phone call records are automatically stored for viewing; supports the call in the call log phone number; support to save a phone number in the call log to the phonebook; support for single delete call records and delete all calls Record contents of the list.

☐ Short Message: supports SMS messages stored on your phone; SIM card and phone support View SMS storage capacity and occupied space; supports extracting text message phone number;

☐ MP3 playback: Your phone supports playback of MP3 music files and other music file formats.

☐ Recording: Your phone supports call recording and non-call recording. During a call, you can select the recording function call interface.

☐ Camera: The phone supports a camera, the camera may need to be personalized.

☐ Setting: You can personalize your phone settings as needed, including phone settings, network settings, and security settings and other projects, under each project has diverse and flexible function lets you customize according to their different preferences.

Seven, Hazard Warning

Do not mix with other battery

Battery not with other types of primary or secondary batteries together, or because of an abnormal charge and discharge cause the battery heat, smoke, deformation or burning.

The battery away from children

Place the battery in a child can not get a place to avoid child bite or swallow batteries. If swallowed, the battery should be promptly sent to hospitals.

Not long-term in the charger on

If more than the normal charging time is very long charger is still charging, stop charging. Abnormal charging may cause the battery heat, smoke, deformation or burning.

Can not be placed in a microwave oven or other pressure vessel

Instant heating or structural damage can cause the battery heat, smoke, deformation or burning.

Leaking battery away from fire

If an electrolyte leakage (or smell), should let the battery away from fire. Otherwise, the leaking electrolyte may catch fire, and even cause other hazards.

Do not use an abnormal battery

If you find the battery smell, deformed, discolored or distorted, should be allowed to leave the phone or the battery charger and abandoned. Not normal use the battery will heat, smoke, deformation or burning.

7.1 Precautions

Use the battery in strong sunlight

Do not use in strong sun exposure environment batteries to avoid heat, deformation, smoke. At least avoid battery performance and reduce life expectancy.

Antistatic

Battery fitted with a protective circuit to avoid the occurrence of various contingencies. Do not use the battery in high electrostatic properties, easily damaged by static electricity protection board, which led to the battery is not working properly, fever, deformation, smoke or burst into flames.

Charging temperature range

Recommended charging temperature range 0--35 °C. In an environment outside this range may

cause the battery charging performance and reduce life expectancy.

Instruction Manual

Before using the battery, please read the instruction manual and often read when needed.

7.2 charging

Use the dedicated charger and charging method recommended in the recommended environmental conditions to charge the battery.

For the first time

The first time using the battery, if found that the battery is not clean and smell and other irregularities, not to continue to the battery used in mobile phones or other devices, the battery should be returned vendors.

Children

Children before using the battery, should be subject to parental guidance, and under the supervision of properly in use.

Avoid contact with children batteries

The battery should not be placed in the position of children. Avoid children to remove the battery from the charger or phone, play.

Note Leak

If the battery leaks stick to the skin or clothing, rinse with water to avoid skin irritation.

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

SAR Information Statement

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. * Tests for SAR are conducted with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output. Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is 0.058W/Kg and when worn on the body, as described in this user guide, is 0.214W/Kg(Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). The maximum scaled SAR in hotspot mode is 0.214W/Kg. While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure. The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RFexposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on

FCC ID: 2ADVCZ5 Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) web-site at <http://www.wow-com.com>.

* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 10mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.