



A	Power button
B	LED digital display
C	Fast charging/recharging indicator
D	USB-C output & input
E	USB-A output
F	Wireless charging indicator
G	Wireless charging output
H	AC pins

Charge your device (power bank)

Recharge your device(s) by connecting a compatible cable into the USB-C output or USB-A output. Press the power button, and your device(s) should begin to charge. When you are finished charging your device(s), remove the cable from your power bank and it will turn off automatically. Alternatively, turn off the power bank by double pressing the power button. A green fast charging indicator will light up when your device is being fast charged.

To check the remaining charge on your power bank, press the power button once. The LED digital display will show the remaining charge.

Recharge your power bank (USB-C)

To recharge your power bank, use the included USB-C to USB-A cable with a compatible charger. Then, insert the USB-C connector into the USB-C input. When recharging, the LED digital display will flash, indicating the remaining charge levels. A green fast charging indicator will light up when the power bank is being fast recharged.

Recharge your power bank (wall outlet)

Recharge your power bank by flipping out the AC pins and plugging into a wall outlet. When recharging, the LED digital display will flash, indicating the remaining charge levels. Using the power bank as a wall charger for your devices Flip out the AC pins and plug it into a wall outlet. Then, recharge your device(s) by connecting a compatible cable into the USB-C output or USB-A output.

Wirelessly charge your device

Place your wireless charging device onto the wireless charging output and ensure it is positioned on the centre of the wireless charging output. Press the power button and your device should begin to wirelessly charge. See below for wireless charging indicator states:

Status	Description
Solid red	Powered on and ready for wireless charging
Solid blue	Wirelessly charging a device
Flashing purple	Foreign object detected on the wireless charging output

For optimum charge speed, adjust your device so that it is aligned to the centre of the wireless charging output. Ensure that the case on your phone is not affecting wireless charging by removing it and checking the performance. Some cases may interfere with wireless charging if they contain metallic material or are overly thick.

Product Specifications

Name	Exo 3-in-1
Item Number	CY3912PBCHE
FCC ID	2AEDZCY3912PBCHE

WALL CHARGER	
Input	AC 100-240V, 50-60Hz, 0.5A Max
USB-A Output	5.0V~3.0A (15.0W)
USB-C Output	5.0V~3.0A (15.0W)
Wireless Output	5.0W Max
Total Output	15.0W Max

POWER BANK	
Battery Capacity	10000mAh/37Wh
USB-C Input	5.0V~3.0A (15.0W), 9.0V~2.0A (18.0W)
USB-C Output	5.0V~3.0A (15.0W), 9.0V~2.22A (20.0W), 12.0V~1.67A (20.0W)
USB-A Output	5.0V~3.0A (15.0W), 9.0V~2.0A (18.0W), 12.0V~1.5A (18.0W)
Wireless Output	5.0W, 7.5W, 10.0W, 15.0W Max
Total Output	20.0W Max

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to connect the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution
Please read all warnings for your safety and optimal user experience. Please read and follow these instructions carefully and retain for your records.

1. Disposal of a battery into fire or a hot oven, mechanically crushing or cutting of a battery, can result in an explosion.
2. Leaving a battery in an extremely high temperature can result in an explosion or the leakage of flammable liquid or gas.
3. A battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas.
4. The power bank will generate heat when charging. Always charge in a well-ventilated area. Do not charge under pillows, blankets or on flammable surfaces.
5. Keep the power bank away from heat sources, direct sunlight, combustible gas, humidity, water or other liquids.
6. Do not disassemble, open, microwave, incinerate, paint or insert foreign objects into the power bank.
7. Do not subject the power bank to mechanical shock such as crushing, bending, puncturing or shredding. Avoid dropping or placing heavy objects on the power bank.
8. Do not short circuit the power bank or store it in a receptacle where it may be short circuited by other metallic or conductive objects.

Caution
9. Do not operate the power bank if it has been wet or otherwise damaged, to prevent against electric shock, explosion and/or injury. Contact the dealer or authorized agent.

10. Usage of power bank by children should always be supervised.

Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Cygnett takes no responsibility for damages caused by incorrect use of its products. Made in China.

Cygnett and the Cygnett logo are trademarks of Cygnett Pty Ltd. Other brands and product names are trademarks or registered trademarks of their respective holders.

Cygnett Pty Ltd, 858 Lorimer St, Port Melbourne, Victoria 3207 Australia	Cygnett USA Inc, 3838 W Carson St, Ste 220, Torrance, CA 90503
Cygnett UK Limited, 71-75 Shelton St, London, WC2H 9JQ	Cygnett EU, Office 2, Goudstraat 65, 2718RD Zoetermeer, The Netherlands

CYGNETT

EXO 3-IN-1

USER MANUAL