

Zettaly

Smart Speaker Tablet, SoundTab

ZA-407


User Manual

To Our Valued Customers


Thank you for choosing Our Smart Speaker. Before using any of our products, please read the user manual coming with the package to avoid any damage.




Important Safety Instructions




WARNING
RISK OF ELECTRIC SHOCK
DO NOT OPEN



WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR DISASSEMBLE THE PRODUCT. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrow head symbol, within an equilateral triangle is intended to alert the user that parts inside the product constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user that important operating and servicing instructions are in the papers with the appliance.

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Pay attention to all warnings.
- 4 Follow all instructions.
- 5 Do not modify the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 6 Protect the power cord from being walked on or pinched.
- 7 Only use accessories specified by the manufacturer.
- 8 Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled on or objects have fallen into the unit, the unit has been exposed to rain or moisture, does not operate normally, or has been dropped.

- 9 Do not install the product near any heat sources such as radiators, stoves, or other appliances that produce heat.
- 10 Unplug this product during lightning storms or when unused for long periods of time.

Warning

- All packing materials such as internal bags, plastic collars, plastic films, and carton inserts are not part of this product and should be discarded.
- Do not try to disassemble the product.
- Only charge the product using the power adapter that came with the device.
- Do not expose the product to moisture or water.
- To prevent hearing damage, never use the product at excessive volume levels. Listening to loud sound for an extended period may cause temporary or permanent hearing loss.
- Never use the product while operating a motor vehicle or bicycle.
- If you feel discomfort in your hands or any pain using the product, please stop immediately.
- In case of long period of use, take frequent breaks.
- If any small part is loosening, do not try to remove it. Keep it away from small children.
- Never force a connector into a port of the product. If a connector and a port do not join with reasonable force, make sure that the connector matches the port and that you have positioned the connector in the correct direction.
- To clean the screen, simply use a soft damp cloth. Do not use alcohol, solvent, aerosol spray or abrasive cleaners to clean the product.
- The product and the adapter should be periodically examined for conditions that may result in the risk of fire, electric shock, or injury to persons and that, in an event of such conditions, the product or adapter should not be used until properly repaired.
- Operate the product in temperature between 0° and 35°C (32° to 95°F). Low or high temperature might temporarily shorten battery life or cause the product to temporarily stop working properly. Avoid dramatic changes in temperature or humidity, as condensation may form on or within the product.
- Store the product in temperature between -20° and 45°C (-4° to 113°F). Don't leave the product in a parked vehicle where temperatures can exceed this range.
- It is normal for the product to get mildly warm when it is in use or charging.
- The rechargeable battery in the product should be replaced only by the manufacture or its authorized agents.
- Do not expose installed batteries to excessive heat such as sunshine or fire.
- If you do not use the product frequently, we recommend keeping the battery level at around 50 percent and fully charge and discharge the battery every three months in order to maximize the battery lifespan.
- This device is restricted to indoor use when operating in the 2.4 to 2.483 GHz frequency band.
- Never remove or insert a microSD card while the the product is powered on.
- The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this product. Such modifications could void the user's authority to operate the product.



Content

 
Package Contents	2
Product Specifications.....	3
Remote Control.....	4
Illustration	4
Installing Battery in the Remote Control.....	4
Understanding Your Smart Speaker.....	5
Connections and Expansion.....	7
Connecting Power Adapter.....	7
Connecting HDMI	7
MicroSD card	8
Connecting USB	8
LINE OUT.....	8
RESET	8
Basic Operations.....	9
Using Touch Navigation	9
Turning on Your Smart Speaker for the First Time.....	9
Unlock the Screen.....	9
Home Screen and Adding Apps	10
Troubleshooting	11
Device displays network or service error message	11
Touch screen response is slow or incorrect.....	11
Device is frozen or a serious error appears.....	11
Device gets warm	11
Appendix.....	12
Certification and Compliance	12

1 Package Contents


The following items are included with the product:

NOTE

- *Images throughout this User Manual are for illustrative purposes only and may differ from the actual product.*

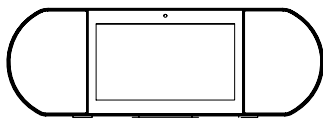


Smart Speaker

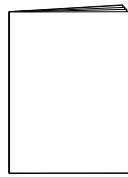 


User Manual



 IR Remote Controller

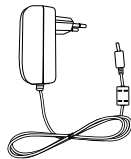

AC/DC Power Adapter

 

Micro-USB Cable

NOTES

- *The power adapter may vary by country.*

2 Product Specifications

Dimensions (mm)		350 × 117 × 120	
Weight (KG)		1.0 net, 1.5 gross	
Storage		8GB	
Screen diagonal size (inch)		7	
Screen resolution		1024 × 600 (multi-touch)	
Power supply	Battery	2000mAh 7.4V	
	Adapter	DC 12V-1.5A adapter	
	Charging time	2.5 hours	
	Standby time	72 hours (Wi-Fi and Bluetooth Off)	
	Working time	video streaming (default volume)	2.5 hours
		Music streaming (screen off)	7 hours
		Bluetooth streaming (screen off)	6 hours
		Web viewing using Wi-Fi	2.5 hours
Memory card		microSD 2-32GB (not included)	
Environment Conditions		Working temperature 0 ° and 35°C	


Audio	Play format	MP3, WMA, FLAC, WAV, OGG, OGA, AAC, AMR, MIDI
Video	Play format	MPEG- 1 / 2, MPEG- 4, DIVX- 4 / 5 / 6, H. 2 6 4, H. 2 6 3, VC- 1, MJPEG, VP6 / 8
	Max resolution	1920 × 1080P
Image		JPG, JPEG, GIF, BMP, PNG

NOTE


- Features, appearance and specifications are subject to change without notice.

3 Remote Control

 • Illustration

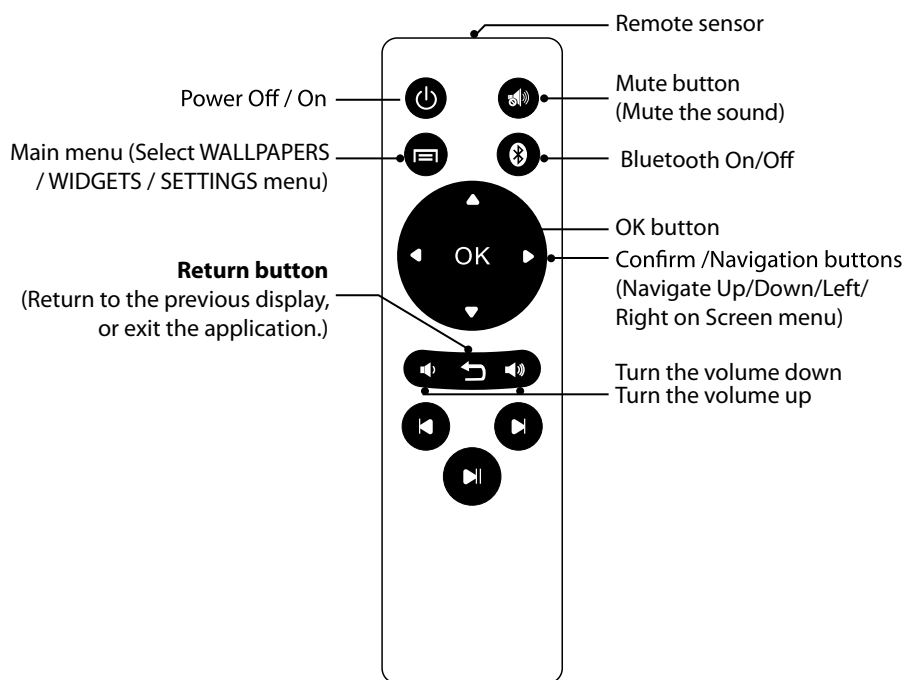

 
• Installing Battery in the Remote Control

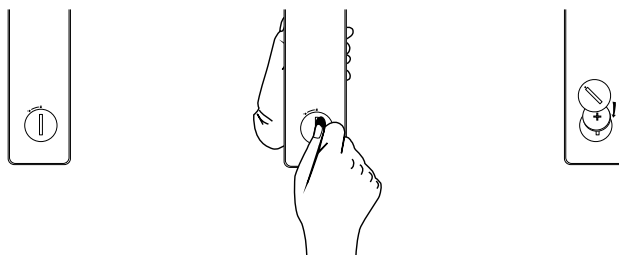

✓ NOTES

- The batteries shall not be exposed to excessive heat such as sunshine or fire.
- Remove depleted batteries immediately to prevent battery acid from leaking into the battery compartment.
- If you do not use the remote control for a long time, remove the batterie.
- Battery chemicals can cause a rash. If battery leaks, clean the battery compartment with a cloth. If chemicals touch your skin, wash immediately.
- Dispose batteries in a designated disposal area. Do not throw batteries into a fire.

 4 Understanding Your Smart Speaker

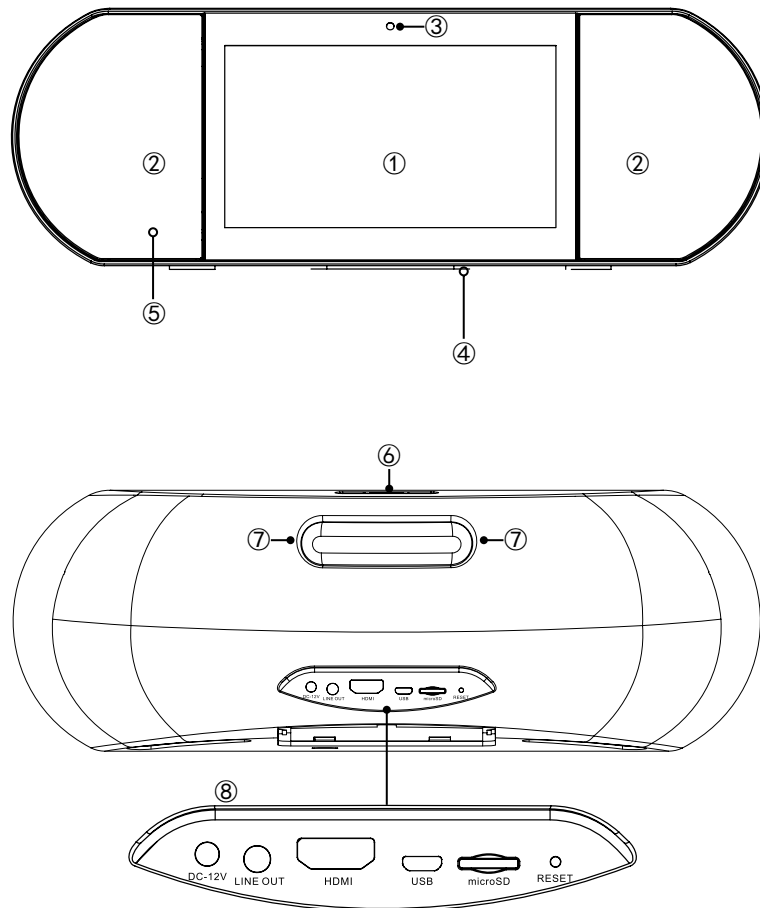


1	Screen	7 inch multi-touch screen.
2	Speakers	Two 5W speakers.
3	Camera	VGA front-facing camera.
4	Microphone	
5	IR receiver head	Receives remote signals from the remote control.  NOTE Do not block the sensor.
6	⏻ Power Button	Power On: Press for about 3 seconds. Power Off: When the device is on, press for 3 seconds, it pop up with "Do you want to shut down?"; choose "OK". Lock the screen: Press Power On/Off button Unlock the screen: Press Power On/Off, the screen will be the way when you start the device. Slide the unlock button to left side to unlock the screen. Or press the Menu on in the IR remote controller to unlock.
	Volume +	Press to increase the volume.
	Volume -	Press to reduce the volume.
7	Handle	
8	Port	RESET RESET the product
		HDMI Output through HDMI to other devices.
		microSD microSD port: Insert microSD card (up to 32G).
		USB Connect to a computer, keyboard or other accessories with the included micro-USB cable or compatible 3rd-party USB hub or OTG cable.
		LINE OUT Audio output.
		DC-12V Power input

5

Connections and Expansion

• Connecting Power Adapter

 Plug the included power adapter into a wall outlet and connect the other end to the DC input of the product.

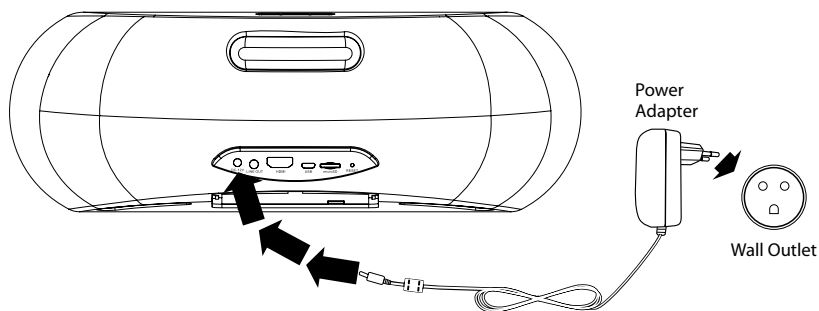


- The built-in battery will start charging and the product will show the battery level on the screen.
- For the first use, please fully charge the device.

✓ NOTES


- To optimize for battery life, please charge the product before putting it away for long-term storage and recharge it every three months.
- If the product shuts down after low battery, you may need to wait a little while for the device to recharge before it restarts.
- The power adapter may vary by country.

 • Connecting HDMI




Connect to an external TV or display using a standard HDMI cable (not included).

 - **microSD card**



Insert a microSD card into the microSD port with the metal contacts facing down.
To check the storage of the card, go to Settings > DEVICE > Storage.

 - **Connecting USB**

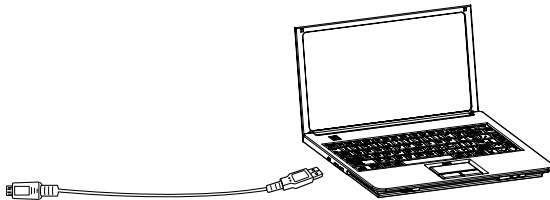


Connect the product to a computer or other USB host devices using the included micro-USB cable.




Connect the product to other USB accessories such as a mouse or USB storage using an USB OTG cable (not included).

 - **LINE OUT**



Connect to a headphone or external speakers.

 - **RESET**



Forced shutdown and reset the product.

6 Basic Operations

• Using Touch Navigation

Tap or Double Tap



To select a feature or item, quickly touch the screen.

Double tap your finger quickly on an item to bring up more details.

Press and Hold



Touch the screen and hold it there for 2 seconds.

In many situations, pressing and holding will open a menu.

Slide or Drag



Touch the screen and slide your finger to another location.

Press and hold on an object and slide it to another location on the screen.

Rotate



Place two fingers about an inch apart on the screen. Rotate them in clockwise or counter-clockwise.

Zoom



Place two fingers about an inch apart on the screen. Slide them together to 'zoom out'.

Slide your fingers apart to 'zoom in'. Place two fingers about an inch apart on the screen. Slide them together to 'zoom out'.

Slide your fingers apart to 'zoom in'.

• Turning on Your Smart Speaker for the First Time

To start, turn on the product by pressing and holding Power button until the start up logo appears. After the animation, you will find the home screen after a while.

• Unlock the Screen

Press Power On/Off, the screen will be the way when you start the device. Slide the unlock button to left side to unlock the screen. Or press the Menu key on the IR remote controller to unlock.










- **Home Screen and Adding Apps**

Start the device and unlock the screen, you will come to the home screen.

You can easily add your favorite Android apps such as Spotify, Pandora, Netflix from millions of choices on the Google Play store.

Notification and Status Bar

- At the top of the screen, you'll see indicators that inform you about the status of your device. You can open the Notification Tray or the Quick settings by pressing the Notification or Status bar and dragging it down.
- Notifications can come from the system or an app such as Google Music.
- The table below lists icons that appear frequently in the Notification and Status Bar.

 Alarm	An alarm is set.
 Alert	Install/update/enable Google Play service.
 Bluetooth	The function is activated
 Downloaded	Received files
 Uploaded	Sent files
 Calendar	Task reminders.
 Music	Play Music application is running.
 Silent mode	Silent mode is on.
 Wi-Fi	The device is connected to a Wi-Fi network. has a Wi-Fi Internet connection. The more bars, the stronger the connection.

Back button

Tap this button to open the previous screen you were working in, even if it was in a different app. Once you go back to the Home screen, no further history will be available.


Home button

Tap this button to return to the Home screen.

Recent Apps

Tap this button to view recently used apps. Tap an app to use it again or close it.

Main menu

Press the Main Menu  button to enter the Main Menu screen. This is where you can see all your apps, including those downloaded from Google Play. You can tap the app to open it or drag the app or widget to the Home.

7 Troubleshooting

When there appears to be an issue with your device, refer to the tips below for a resolution. If the problem still cannot be solved, then contact Manufacturer or its local authorized agents.

- **Device displays network or service error message**

When you are located in places with poor wireless signals, the device may not be able to connect. Try to move to other places to get a stronger signal .

- **Touch screen response is slow or incorrect**

If the device's touch screen response is incorrect, please try the following:

- Remove any protective film of the touch screen. The protective film may prevent the device from recognizing input correctly.
- Make sure that your fingers are dry and clean.
- Restart the device to clear any temporary software issues.
- Make sure that the device's software has been upgraded to the latest version.

- **Device is frozen or a serious error appears**

- If the device is frozen or suspended, you may need to close the app , restart the device, or reset it.
- To reset the device, press and hold the RESET for 8 seconds.

- **Device gets warm**

When you use your device for a long period of time, it may get lukewarm. This is normal and will not affect the life or performance of the unit.



Appendix

Certification and Compliance

• Europe - EU Declaration of Conformity

A copy of the EU Declaration of Conformity is available at www.zettaly.com/legal.



Български Zettaly Inc. декларира, че това Zettaly Avy е в съответствие със съществените изисквания и другите приложими правила на Директива 1999/5/EC.

Česky Společnost Zettaly Inc. tímto prohlašuje, že tento Zettaly Avy je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES.

Dansk Undertegnede Zettaly Inc. erklærer herved, at følgende udstyr Zettaly Avy overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.

Deutsch Hiermit erklärt Zettaly Inc., dass sich das Zettaly Avy in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befinden.

Eesti Käesolevaga kinnitab Zettaly Inc., et see Zettaly Avy vastab direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.

English Hereby, Zettaly Inc. declares that this Zettaly Avy is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

English Hereby, Zettaly Inc. declares that this Zettaly Avy is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Español Por medio de la presente Zettaly Inc. declara que este Zettaly Avy cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.

Ελληνικά Με την παρούσα, η Zettaly Inc. δηλώνει ότι αυτή η συσκευή Zettaly Avy συμμορφώνεται προς τις βασικές απαιτήσεις και τις λοιπές σχετικές διατάξεις της Οδηγίας 1999/5/EK.

Français Par la présente Zettaly Inc. déclare que l'appareil Zettaly Avy est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.

Islenska Zettaly Inc. lýsir því hér með yfir að þetta tæki Zettaly Avy fullnægir lágmarkskröfum og öðrum viðeigandi ákvæðum Evróputilskipunar 1999/5/EC.

Italiano Con la presente Zettaly Inc. dichiara che questo dispositivo Zettaly Avy è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.

Latviski Ar šo Zettaly Inc. deklarē, ka Zettaly Avy ierīce atbilst Direktīvas 1999/5/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.

Lietuvių Šiuo „Zettaly Inc.“ deklaruoja, kad šis Zettaly Avy atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas.

Magyar Alulírott, Zettaly Inc. nyilatkozom, hogy a Zettaly Avy megfelel a vonatkozó alapvető követelményeknek és az 1999/5/EC irányelv egyéb előírásainak.

Malti Hawnhekk, Zettaly Inc., jiddikjara li dan Zettaly Avy jikkonforma mal-htigijiet essenzjali u ma provvedimenti oħrajn rilevanti li hemm fid-Direttiva 1999/5/EC.

Nederlands Hierbij verklaart Zettaly Inc. dat het toestel Zettaly Avy in overeenstemming is met de essentiële eisen en de andere bepalingen van richtlijn 1999/5/EG.

Norsk Zettaly Inc. erklærer herved at dette Zettaly Avy-apparatet er i samsvar med de grunnleggende kravene og øvrige relevante krav i EU-direktivet 1999/5/EF.

Polski Niniejszym Zettaly Inc. oświadcza, że ten Zettaly Avy są zgodne z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 1999/5/EC

Português Zettaly Inc. declara que este dispositivo Zettaly Avy está em conformidade com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.

Română Prin prezenta, Zettaly Inc. declară că acest aparat Zettaly Avy este în conformitate cu cerințele esențiale și cu celelalte prevederi relevante ale Directivei 1999/5/CE.

Slovensko Zettaly Inc. izjavlja, da je ta Zettaly Avy skladne z bistvenimi zahtevami in ostalimi ustreznimi določili direktive 1999/5/ES.

Slovensky Zettaly Inc. týmto vyhlasuje, že toto Zettaly Avy spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 1999/5/ES.

Suomi Zettaly Inc. vakuuttaa täten, että tämä Zettaly Avy tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.

Svenska Härmed intygar Zettaly Inc. att denna Zettaly Avy står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.

This device can be used in the European Community

● Disposal Information



This symbol indicates that your product must be disposed of properly according to local laws and regulations. Dispose of batteries according to your local environmental laws and guidelines.

Deutschland: Dieses Gerät enthält Batterien. Bitte nicht in den Hausmüll werfen. Entsorgen Sie dieses Gerät am Ende seines Lebenszyklus entsprechend der maßgeblichen gesetzlichen Regelungen.

Nederlands: Gebruikte batterijen kunnen worden ingeleverd bij de chemokar of in een speciale batterijcontainer voor klein chemisch afval (kca) worden gedeponeerd.

European Union: Disposal Information



This symbol means that according to local laws and regulations your product and its battery should be recycled separately from household waste. When this product reaches its end of life, take it to a collection point designated by local authorities for the recycling of electronic equipment. The improper disposal of waste electronic equipment from the consumer may be subject to fines. The separate collection and recycling of your product and its battery at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

Union Européenne-informations sur l'élimination

Le symbole ci-dessus signifie que vous devez vous débarrasser de votre produit sans le mélanger avec les ordures ménagères, selon les normes et la législation de votre pays. Lorsque ce produit n'est plus utilisable, portez-le dans un centre de traitement des déchets agréé par les autorités locales. Certains centres acceptent les produits gratuitement. Le traitement et le recyclage séparé de votre produit lors de son élimination aideront à préserver les ressources naturelles et à protéger l'environnement et la santé des êtres humains.

Europäische Union-Informationen zur Entsorgung

Das Symbol oben bedeutet, dass dieses Produkt entsprechend den geltenden gesetzlichen Vorschriften und getrennt vom Hausmüll entsorgt werden muss. Geben Sie dieses Produkt zur Entsorgung bei einer offiziellen Sammelstelle ab. Bei einigen Sammelstellen können Produkte zur Entsorgung unentgeltlich abgegeben werden. Durch das separate Sammeln und Recycling werden die natürlichen Ressourcen geschont und es ist sichergestellt, dass beim Recycling des Produkts alle Bestimmungen zum Schutz von Gesundheit und Umwelt beachtet werden.

Unione Europea-informazioni per l'eliminazione

Questo simbolo significa che, in base alle leggi e alle norme locali, il prodotto dovrebbe essere eliminato separatamente dai rifiuti casalinghi. Quando il prodotto diventa inutilizzabile, portarlo nel punto di raccolta stabilito dalle autorità locali. Alcuni punti di raccolta accettano i prodotti gratuitamente. La raccolta separata e il riciclaggio del prodotto al momento dell'eliminazione aiutano a conservare le risorse naturali e assicurano che venga riciclato in maniera tale da salvaguardare la salute umana e l'ambiente.

Europeiska unionen-uttjanta produkter

Symbolen ovan betyder att produkten enligt lokala lagar och bestämmelser inte får kastas tillsammans med hushållsavfallet. När produkten har tjänat ut måste den tas till en återvinningsstation som utsetts av lokala myndigheter. Vissa återvinningsstationer tar kostnadsfritt hand om uttjanta produkter. Genom att låta den uttjanta produkten tas om hand för återvinning hjälper du till att spara naturresurser och skydda hälsa och miljö.

Türkiye

EEE yönetmeliğine (Elektrikli ve Elektronik Eşyalarda Bazı Zararlı Maddelerin Kullanımının Sınırlandırılmasına Dair Yönetmelik) uygundur.

Brasil—Informações sobre descarte e reciclagem



O símbolo acima indica que este produto e/ou sua bateria não devem ser descartadas no lixo doméstico. Quando decidir descartar este produto e/ou sua bateria, faça-o de acordo com as leis e diretrizes ambientais locais.

FCC Information and Copyright

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates,

uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference

to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does

cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is

encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC RF warning statement: the device has been evaluated to meet general RF exposure requirement , The device can be used in portable exposure condition without restriction.