



TW1001-01 Tablet
Quick Start Guide




Thank you for your choosing 3nStar Tab TW1001-01 Windows Tablet .

This guide serves to enable users to get to know and get familiar with our product. We have made a brief introduction to the key layout and definitions in figures and words.

Contents

| | |
|-------------------------------------|----|
| I . Precautions before Use | 03 |
| II. Introduction to Desktop | 04 |
| 1. Windows 8.1 Start Screen | 04 |
| 2. Image Slide Application | 05 |
| 3. Introduction to app Interface | 06 |
| 4. Charm Menu Column | 08 |
| 5. Double Screen Application | 09 |
| III. Descriptions of Keys | 10 |
| I V . Basic Operations | 11 |
| 1. Dormancy, Restart, and Power off | 11 |
| 2. Security Management | 11 |

I . Precautions before Use

1. The TW1001-01 is suitable for use in non-tropic areas below 2,000 meters, and the ma  in the nameplate indicates the product is suitable for use in non-tropic areas.
2. Prevent the Tablet from falling to the ground or being strongly impacted.
3. Do not use it in the long term in any environment where the air is too cold, too hot (<35°C), too humid or with too much dust. Do not expose the Tablet to sunlight.
4. Avoid using it in the strong magnetic and strong static environment as much as possible.
5. Once any water or other liquid splashes onto the Tablet , close it immediately and do not use it until it dries out.
6. Do not clean the Tablet with any detergent containing chemical element or other liquid to avoid causing damage due to corrosion and becoming damp. If cleaning is really necessary, clean it with dry soft cloth tissue paper.
7. Our company shall not bear any and all responsibilities for loss or deletion of material inside the machine caused due to abnormal software and hardware operation, maintenance or any other accident.
8. Please back up your important material at any time to avoid loss.
9. Please do not disassemble the Tablet by yourself; otherwise you will lose the right to warranty.


11. Replacement with incorrect type batteries may cause explosion. Make sure to use original batteries.



III. Introduction to Desktop

1. Windows 8.1 Start Screen: you can see many programs fixed in the image. These application programs are displayed in the form of “magnet”. As long as you click them, you can easily visit them.

You need to log on your Microsoft account before the application program completely runs.

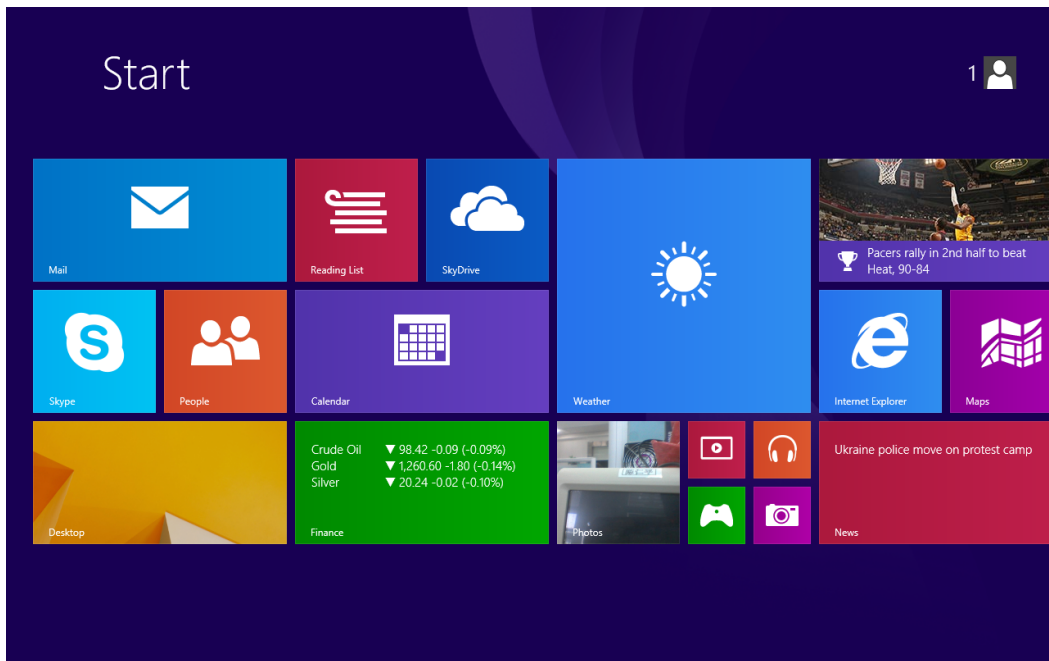

2. Image slide applications

Slide to right



Slide to the right from the left side of the screen to start the application program in running.

Slide to left



Slide to the left from the right side of the screen to start Charm menu column.

Reduce



Enlarge



On the touch screen, narrow two fingers to reduce the image.

On the touch screen, widen two fingers to enlarge the image.

Slide downward



In start screen, slide from the top of the screen to view all application programs

Slide with finger



In start screen, slide finger right and left to move the image.


Slide upward




In the start screen, slide upward from the bottom of the screen to visit all application program (APPS) interfaces.

3. Introduction to app Interface


Besides the application programs already fixed on the start screen, you can also start other application programs in all application programs, such as other software application programs attached to the Tablet .

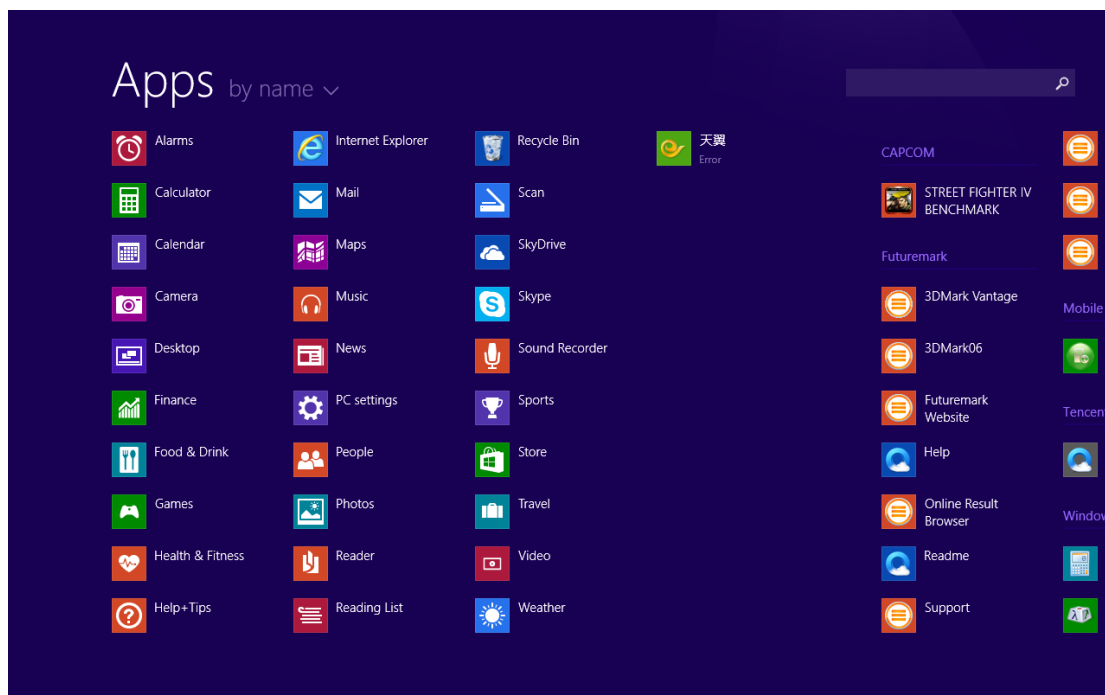

If you want to fix more application programs on the start interface, see the operation in the figure below, (1) lightly touch, press and hold the application program magnet for about one second and then let go, and select (2) to fix to the start screen.

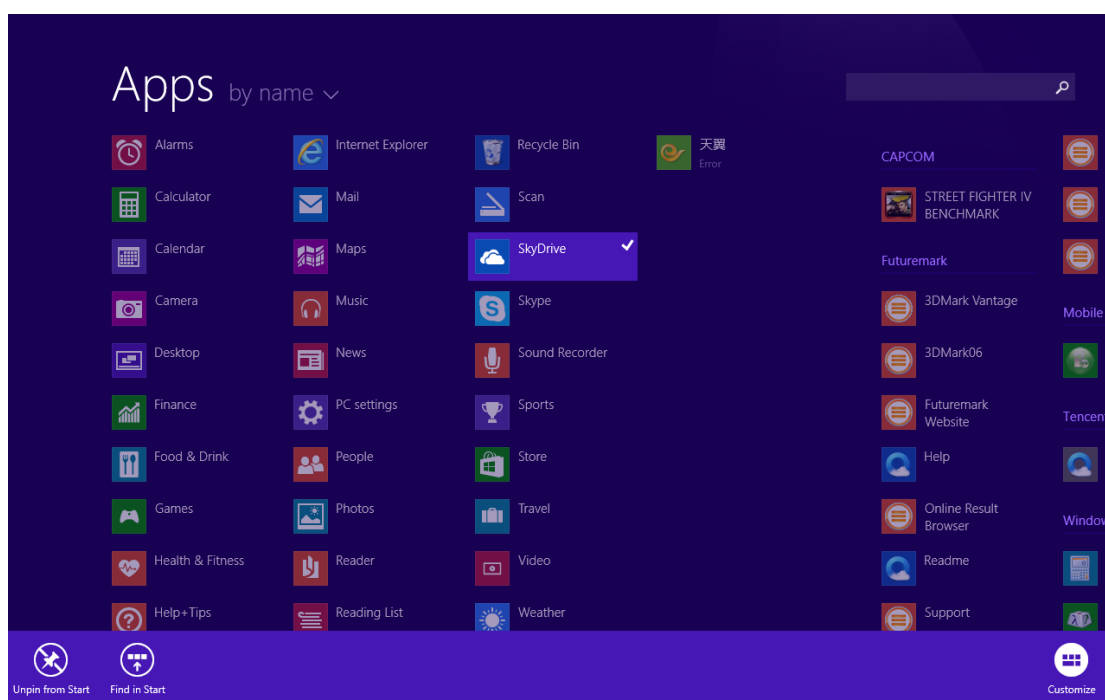

Conversely, if you want to cancel or delete a certain application in the start screen, (1) lightly touch, press and hold the application program magnet for about one second and then let it go and run, and select (2) attribute column to cancel the programs such as fixation and deletion and then it can be completed.

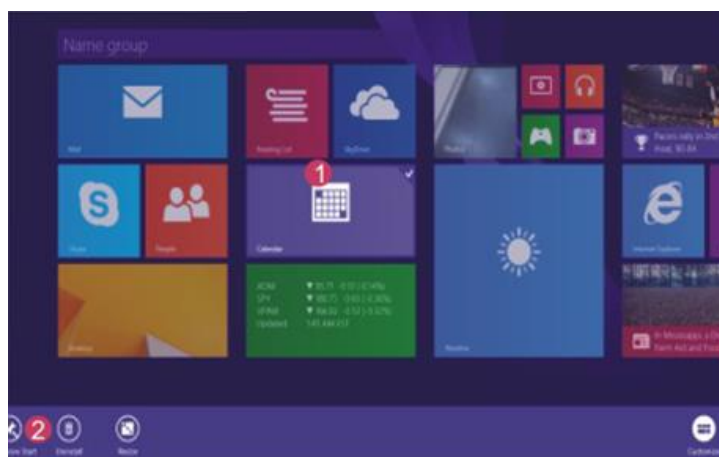

4. Charm menu column

Slide it to the left from the right side of the screen to start Charm menu column, including: Start, Device, Setup, Share, and Search Program.



Slide it to the left from the right side of the screen to start Charm menu column, including: Start, Device, Setup, Share, and Search Program.



Search icon will let you search the files and application programs in the Tablet .



Share icon will allow you to share the program through social exchange website or e-mail.



Star icon allows you to return to the start screen. From the start screen, you can also use this function to return the application program that is opened in the latest.



Devices icon will allow you to read, write and share files, connect external screen or printer with the device connected to the Tablet .




Settings icon will allow you to set up the Table .

Search menu



Share menu

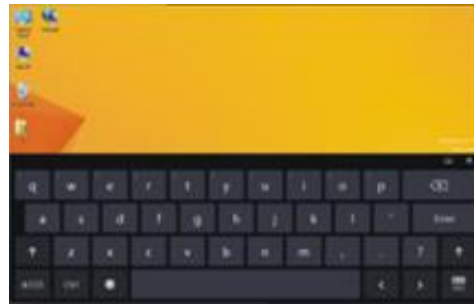

Device Menu



Set up Menu




5. Double Screen Application

On my computer in (Figure 1), slide it inward from the left side of the screen, drag it and hold. Let go when seeing double interfaces appear.

In (Figure 2), press the partition button on the middle partition line and drag right and left to partition the display proportion of the double screens.




(Figure 1)

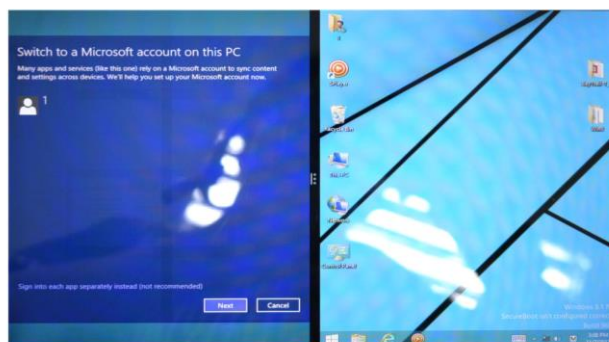

(Figure 2)


II. Descriptions of Keys

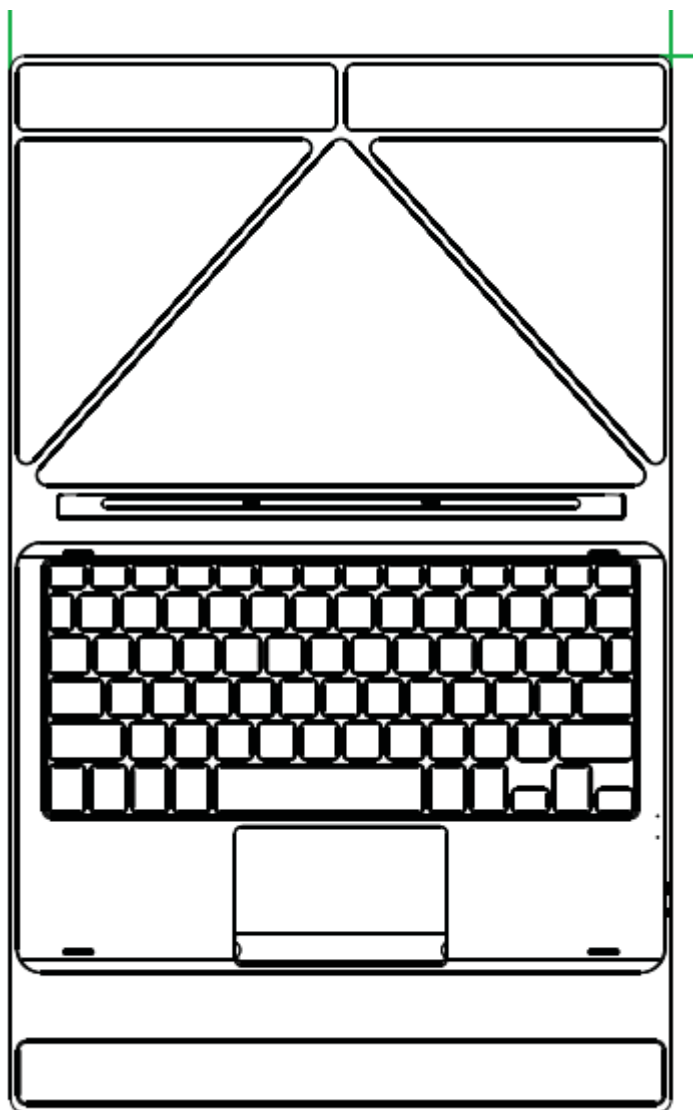

- ① Movable base keyboard interface: which is convenient for alignment the Table and the keyboard.
- ② Keyboard group: The keyboard group provides full size QWERTY key and best typewriting comfort ability.
- ③ Base: Folding base of Tablet .


IV . Basic Operations

1. Dormancy, restart and power off

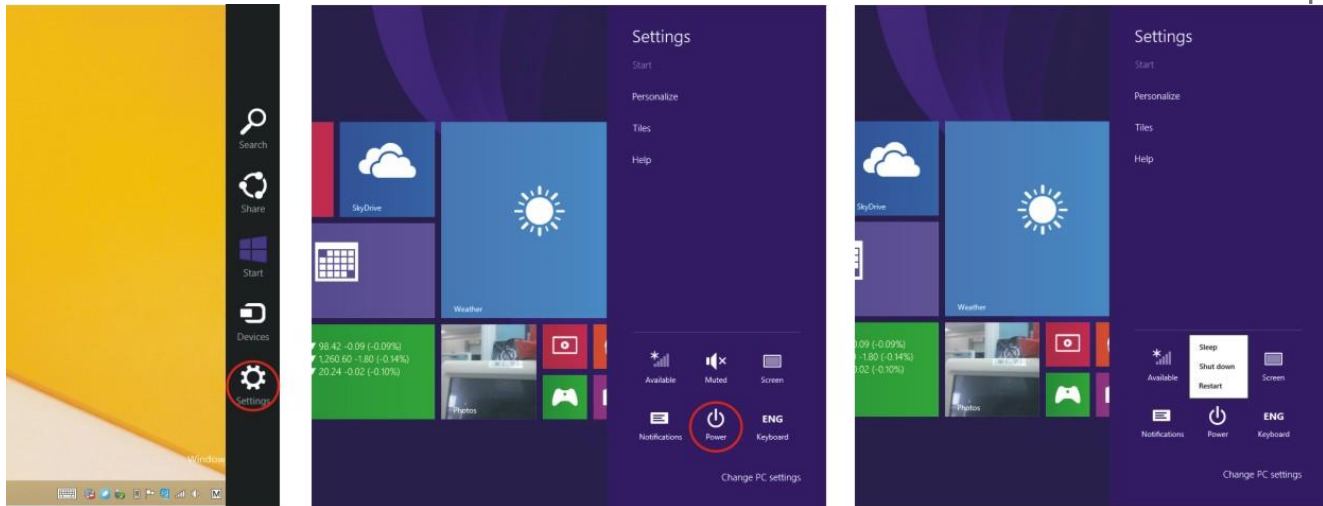

2. Security Management

User and password setup

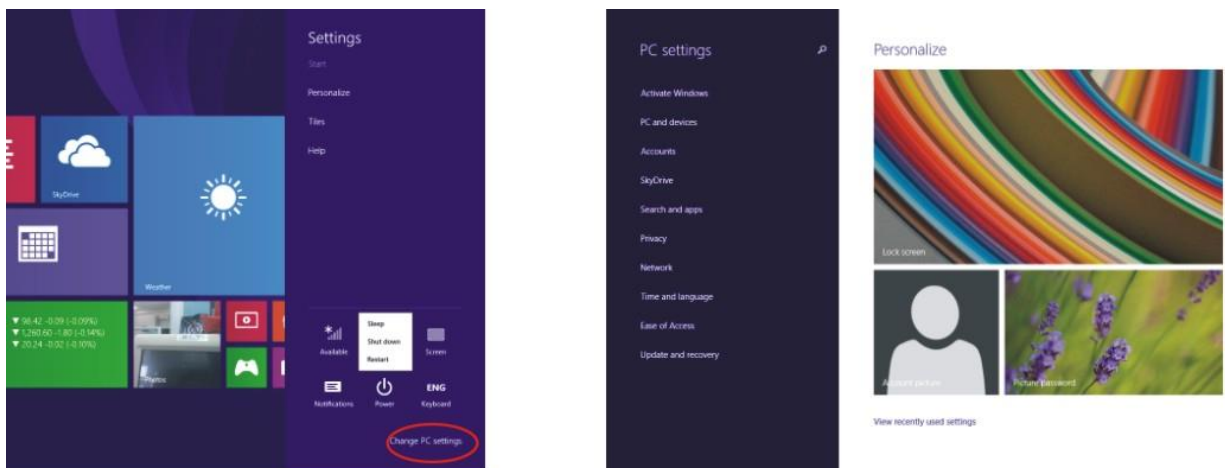

Method for quick setup:

Click the “Setup” button in “Charm” setup, and select “Change computer setup”. Select “User” on the left and click “Create local account” in “Your account” on the right side. After inputting the password of Complete Windows Live Id Account, input username, password, confirm password and password prompt.

FCC Information and Copyright

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates,

uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference

to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does

cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is

encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC RF warning statement: the device has been evaluated to meet general RF exposure requirement , The device can be used in portable exposure condition without restriction.