




WAVE RC BREAKER

Instruction Manual


Please read carefully before operation.

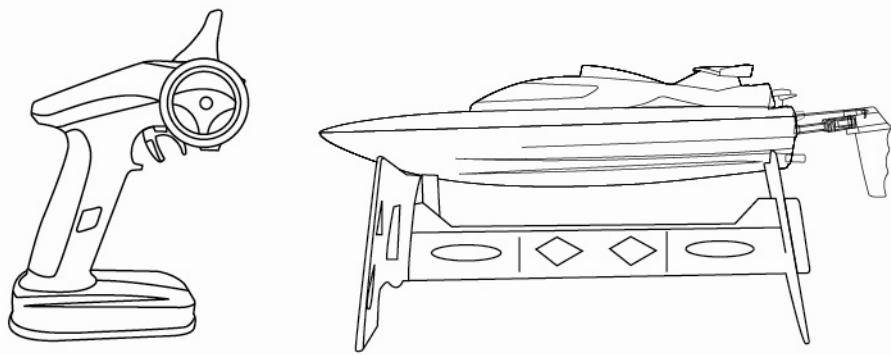


RC Boat Diagram

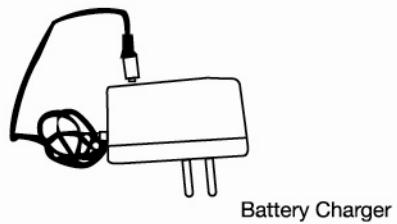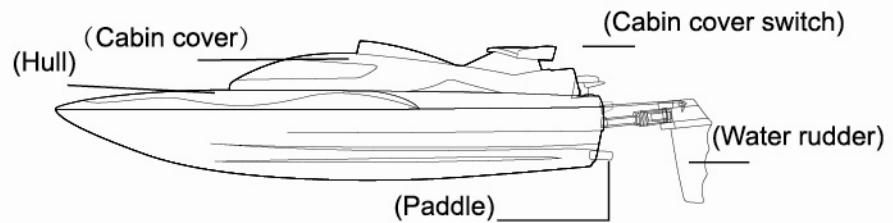

Battery Charger

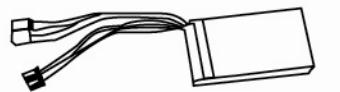


Lithium Battery

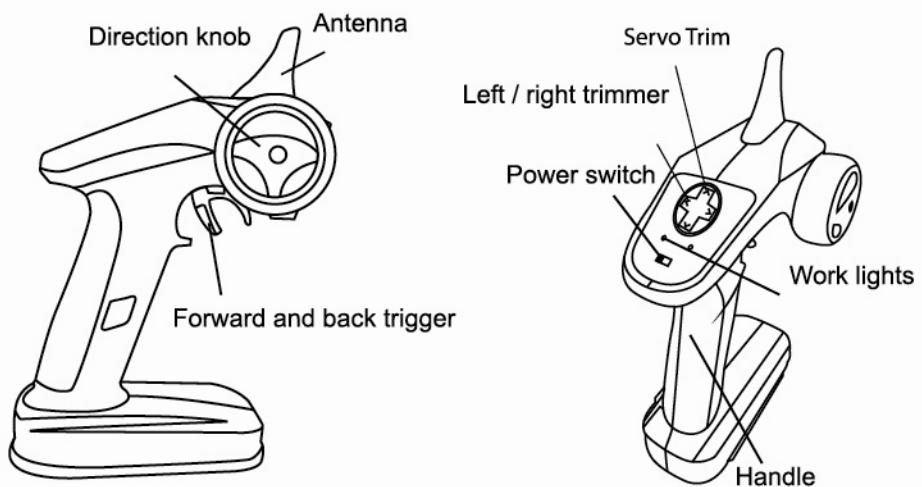


Remote Controller Battery Installation

Open battery cover on the remote control and insert 4.5V "AA" batteries in the correct polarity. Close the battery cover. (See Figure)

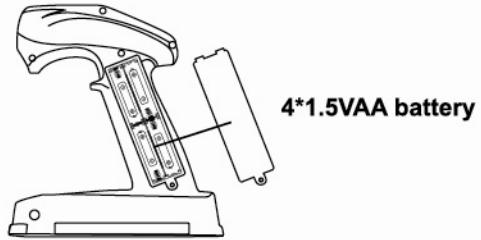


Charging the Battery


Connect the battery to the charger. Then connect the charger to a power outlet. It should take 90 minutes to charge. Once the charge is full, remove the battery.

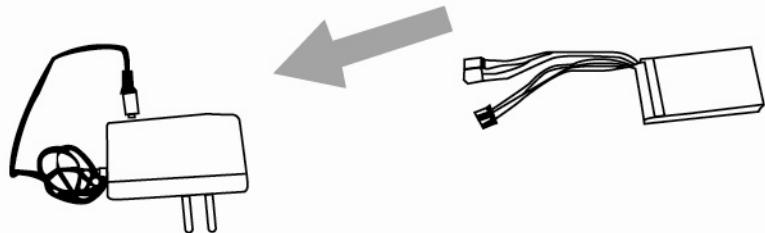


Assembling the Boat's Base

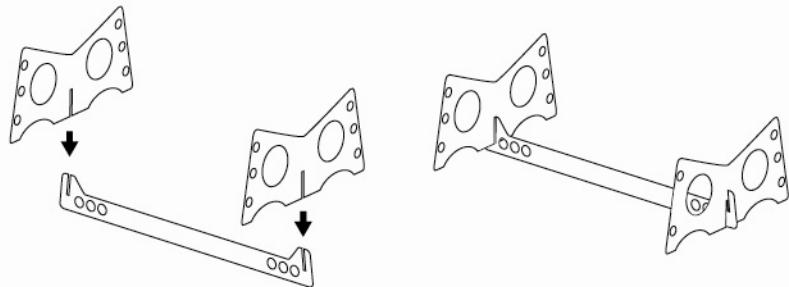


RC Boat Battery Installation

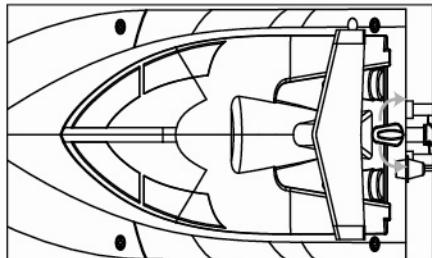


1. To open cabin cover, open switch holding down cabin door. Then firmly remove cabin cover.

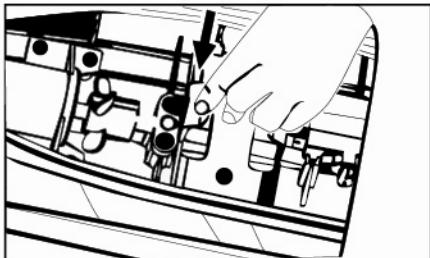

2. Insert lithium-ion batteries into the battery compartment hull.

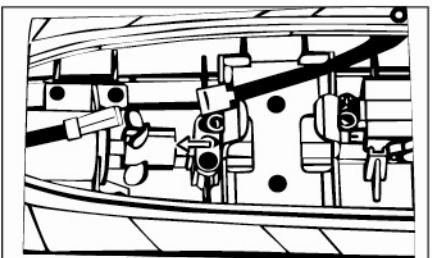

3. Connect the battery to the JST plug.

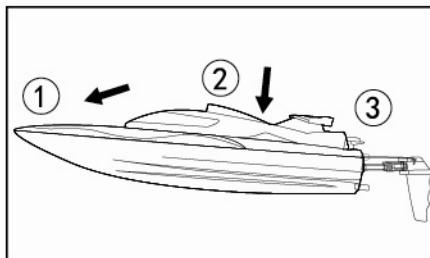

4. Reattach the cabin cover by snapping it into place. Then turn the switch to close it.



Do not leave battery cable routed on the side.
Cable can get stuck in the motor.

Syncing the Remote and Boat

After inserting fully charged battery in boat, turn on the remote control and the green indicator light will light up. Turn the wheel on the remote back and forth in order to sync the boat and the remote. Place boat in water. Motor will not function if boat is not in water.

Warnings

1. Batteries should be replaced by an adult.
2. Wait until battery cools after use to recharge.
3. Only use 1.5V "AA" batteries.
4. Carefully follow instructions for installing batteries.
5. Do not mix old and new batteries or different types of batteries.
6. Do not try to charge non-rechargeable batteries.
7. Charge rechargeable battery before use.
8. Only recharge battery under adult supervision.
9. Remove dead batteries from boat.
10. Do not store battery near fire or other high temperature or humid places.
11. Avoid short circuits to prevent damage to battery and charger.
12. Keep battery pack and charger out of reach of children when charging.
13. Do not touch propeller body. Only handle boat when turned off in order to prevent possible injury.

1. This product uses a 370 magnetic motor driving system and uses 2.4 G technology for longer range.


2. This boat uses lithium-ion batteries, giving it a maximum speed of 12 mph.

3. Specification of the Hull length: 14"

Hull width: 3.5"

Hull height: 3.25"

4. This boat features an uprighting flip function. No need to worry about capsizing your boat anymore!

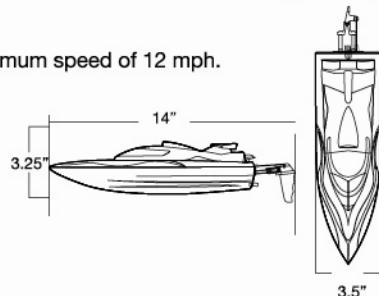

Operation Controls

Pull trigger:

Forward

Push trigger:

Backward


Turn wheel forward:

Turn Right

Turn wheel backward:

Turn Left

*When remote control battery is low, the power indicator light will start to blink. Please replace with new batteries.

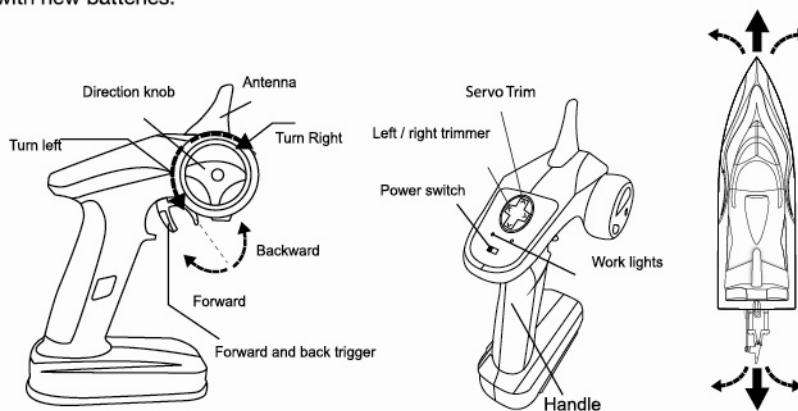

Note: 1. Users under 14 years old must operate boat under adult supervision.

2. Do not drive boat near someone in the water to avoid injury.

3. Avoid driving boat in water with too much debris. Boat's propeller may become entangled in debris.

Please remove boat and remote control batteries when not in use.

Do not exceed remote range of ~104 feet to avoid runaway.

Fine Tuning


When the boat propeller is no long in the water, the propeller will automatically stop.

Use the directional pad on remote for fine tune trimming. When the boat is favoring to the left, press right on the d-pad until the boat drives straight and vice versa. (See Figures 1 and 2)


If the ship overturns in the water, pull the trigger backward and push it forward quickly in order to flip the boat upright. (See Figure 4)




Low-voltage protection: When the speed suddenly drops, this indicates the battery's low power with only 1 minute of battery life remaining. Return the boat in this time and recharge the battery.

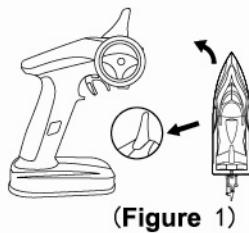

(Figure 1)

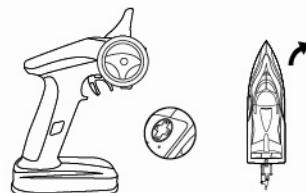

(Figure 2)

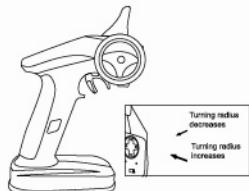

(Figure 3)



(Figure 4)

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

BATTERY WARNING:

- Do not mix alkaline, standard (carbon zinc), rechargeable (nickel hydride) batteries.
- Do not mix old and new batteries.
- Non-rechargeable batteries should not be recharged.
- Rechargeable batteries should be removed from the appliance before being charged.
- Rechargeable batteries should be charged under adult supervision only.
- Exhausted batteries should be removed.
- The supply terminals should not be short-circuited.
- Only batteries of the same or equivalent type are recommended to be used.
- Batteries should be inserted with the correct polarity.

AWW INDUSTRIES™ is an innovative division of DGL Group, Ltd.
Other trademarks and trade names are those of their respective owners.



AWW INDUSTRIES,
195 Raritan Center Parkway, Edison, NJ 08837.
Specifications, colors and contents may vary from illustrations.
MADE IN CHINA

PROP 65 WARNING

WARNING: This product may contain a chemical known to the State of California to cause cancer, or birth defects, or other reproductive harm.

Tested to comply with FCC standards.
FOR HOME OR OFFICE USE.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference; and
(2) This device must accept any interference received, including interference that may cause undesired operation.

⚠️ WARNING:
CHOKING HAZARD-Small parts.
Not for children under 3 years.

Manufactured in China.
Batch Ref: 150605AWW
Model Number: AW-RCB-FLIP



FCC ID: 2AFAQ-1501