


型号 PXN-Ravine Pro (308A英文版) 尺寸 72*172 MM **PXN** 材质/克数/效果 书纸/100克/无膜 折成方式/页数 风琴折 / 10页 说明书 印刷颜色 四色CMYK+PANTONE 151C ● 版本 修改点备注 "Pulse pro 3" 修改 "Ravine Pro" 制作人 廖海燕 内容总审核人 周灯航 发出日期 2023-6-29

正面

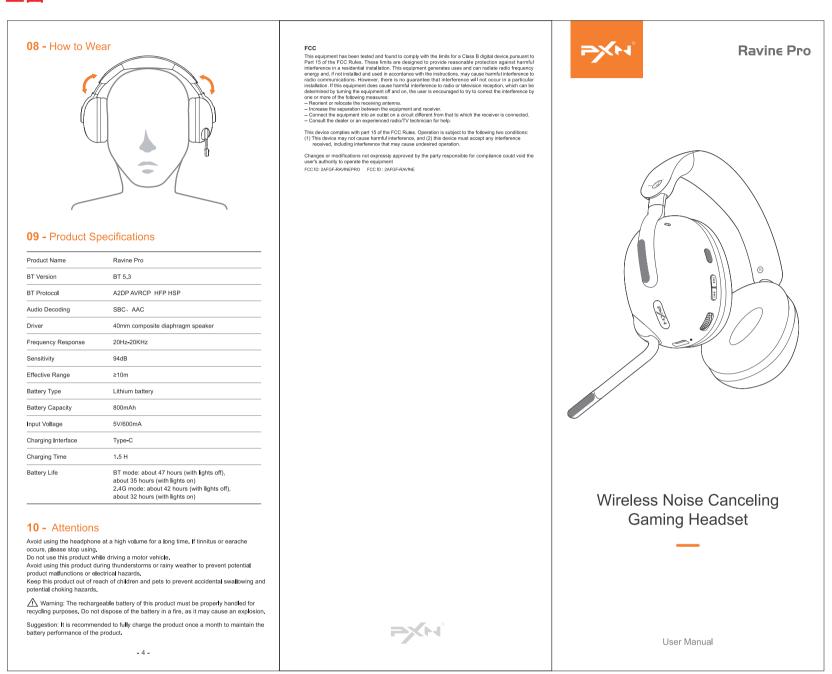

反面

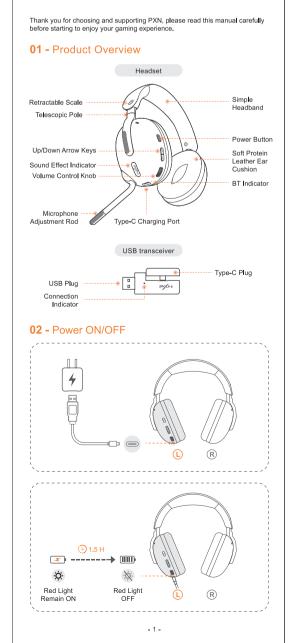

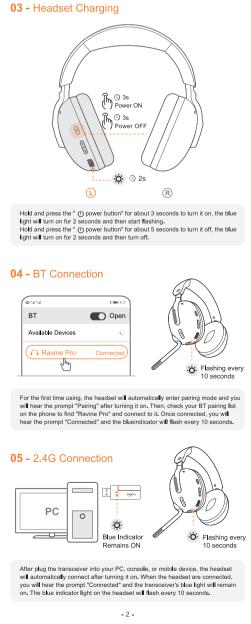



07 - Button Functions

Main Control Functions	Button Functions	Gesture
Power ON	Press and hold the power button when the headset is under OFF state	(fm) [©] 3s
Power OFF	Press and hold the power button when the headset is under ON state	(h) (9 5s
Play/Pause	Press the power button once	Ĵħy (Ú ×1
Answer/Hang up calls	Press the power button once	(Ĭħy (Ú ×1
Reject calls	Hold and press the power button	(lm) (U) 1s
Previous track	Press the up arrow button once	į̇̃lm̃y ₹ ×1
Next track	Press the down arrow button once	ĺḣ́n ₹ ×1
Volume up/down	Moving the volume knob upwards increases the volume Moving the volume knob downwards decreases the volume	1 1+
Music mode (green light) Game mode (blue light) Movie mode (ice blue light)	Double-click the down arrow button to switch to another sound effect You will hear a prompt when the sound effect has been changed	(jh) ¥ ×2
ANC mode Transparent mode Normal mode	Double-click the up arrow button to switch to another working mode You will hear a prompt when the mode has been changed	(jh) ₹ ×2
Microphone on/off	Pull down to open/Pull back to close You will hear a prompt when it switches on and off	
Forced pairing	Hold and press the up arrow button You will hear a prompt	(Îm) ₹ 2s
LED light on/off	To turn off the light, press and hold the down arrow key To turn on the light, press and hold the down arrow key once more	(Îm) ¥ 2s

- 3 -