

User Manual

Content:

- 1 x Glow-in-dark plush doll
- 3 x AA batteries
- 1 x USB cable
- 1 x Instruction manual

Getting started

WARNING! Remove all packaging before giving to a child

Inserting/exchanging batteries

The batteries included in your plush toy are intended for in-store demonstration purpose only. Please replace these batteries with new alkaline batteries before you use this product for the first time.


The toy can be operated with three "AA" 1.5V batteries or use USB cable (provided) directly connect to any USB power supply (suggest to keep the battery box empty before connecting to the USB power supply)

Batteries may only be fitted and removed by an adult or under the supervision of an adult.

- + Battery compartment is located at the bottom of item. Remove the battery cover screw and then pull off the cover.
 - + Insert batteries per illustration. Ensure batteries have correct polarity.
- Adult supervision is recommended when changing batteries

DEMO Mode (Switch to DEMO)

- + Press the (M) button, the snowman will play the DEMO music and light up.
- + Press the (V) / (V) button to control the Volume.
- + No function on (P) and (P) button in DEMO mode

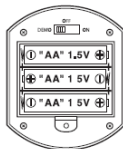

Bluetooth Mode (Switch to "ON")

Pairing the Toy

Pairing is a process, which connects the toy to a smartphone, tablet or any other Bluetooth enabled device. Follow the below steps to pair your toy with a device.

- + Activate Bluetooth on your phone or device you intend to connect with the toy. (Refer to the user manual of your device to turn on the Bluetooth and pairing instructions)

- + Turn on the plush doll, you will hear a sound "DoDuDo" and the plush doll is lighted up.
- + Go to your device Bluetooth settings. Select "Snowman plush" from the list of Bluetooth device shown on your device (if you have bought the different character, please select the certain name which you can find on the packaging box).
- + The plush doll will make a sound "Do", which indicates successful pairing.
- + If no device can be connected after 10 minutes, it will turn off automatically in order to save power. Press the "Play/Pause" button to wake up the plush doll again.

Now you are ready to streaming the music via your Bluetooth device

You can pair more than one Bluetooth enabled device, but can have only ONE active connection at a time

Keep the Bluetooth connection and pause the music, your plush doll will become a Night Light.

Volume Increase and Decrease

- Press the (V) button to increase the audio volume
- Press the (V) button to decrease the audio volume
- You will hear a "beep" sound, once you reach the Volume Limits.

Play Forward and Backward

- Press the (P) button to play the next song
- Press the (P) button to play the previous song

Power Off (Switch to "OFF")

Troubleshoot:

If you Bluetooth device can't connect to the plush doll:

- Make sure you have inserted the correct batteries (alkaline type AA)
- Make sure that the batteries are inserted properly.
- Replace the old batteries with new ones if these are low power.
- Make sure your plush doll is NOT connected to other Bluetooth device nearby
- Turn Bluetooth off for both devices, then turn it on again for the devices to re-discover each other.

1.

2.

Model: PA64639AR

<p>Caution:</p> <ul style="list-style-type: none">+ Non-rechargeable batteries are not to be recharged.+ Rechargeable batteries are only to be charged under adult supervision.+ Rechargeable batteries are to be moved from the toy before being charged.+ Different types of batteries or new and used batteries are not to be mixed.+ Batteries are to be inserted with the correct polarity.+ Exhausted batteries are to be removed from the toy.+ The supply terminals are not to be short-circuited.+ Do not dispose of the batteries in fire; batteries may explode or leak.+ Dispose of batteries responsibly.+ Please do retain this information for future reference. <p>Washing instruction:</p> <p>Surface can be cleaned with a damp cloth. Keep moisture away from the battery compartment!</p> <p>Packing has to be kept since it contains important information.</p> <p>USB Warning</p> <p>The USB cable could be a strangulation hazard. Keep out of reach of children under 3 years of age. The USB cable must be used only by an adult when charging the battery and removed by the adult prior to the use of toy by a child. Do not allow child to play with the toy when the USB cable is attached. Do not leave the toy unattended in the crib with USB cable</p> <p>RF warning statement:</p> <p>The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.</p> <p>Ages 3+</p>	<p>Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p>
3.	4.

Model: PA64639AR