This device complies with Part 15 of the FCC Rules.

(1) this device may not cause harmful interference,

Note: This equipment has been tested and found to

pursuant to Part 15 of the ECC Rules. These limits are

designed to provide reasonable protection against harmful interference in a residential installation. This

equipment generates, uses and can radiate radio

frequency energy and, if not installed and used in

is no guarantee that interference will not occur in

accordance with the instructions, may cause harmful

interference to radio communications. However, there

If this equipment does cause harmful interference to

radio or television reception, which can be determined

encouraged to try to correct the interference by one

by turning the equipment off and on the user is

Regrient or relocate the receiving antenna

Increase the separation between the equipment

Connect the equipment into an outlet on a circuit

or more of the following measures:

comply with the limits for a Class B digital device.

and (2) this device must accept any interference

received, including interference that may cause

Operation is subject to the following two conditions:

FCC ID: 2AFXXGG-ABS

undesired operation.

a particular installation.

and receiver

equipment.

Please read the manual before operating this product

M&S Accessory Network declares that radio equipment DC-ABS-DCC is in compliance with Directive 2014/53/EU.

The EU Declaration of conformity is available at https://gabbagoods.com/pages/compliance-documents

Contents 1.Introduction

1 Introduction ······ 1 Thank you for purchasing the 2 Package Contents · · · · 2 Diet Coke Bluetooth Bottle Speaker! 3 Product Diagram ····· 2 In order to get the best use 4 How To Use 3 of this speaker, please read 4.1 General functions ····· 3 this user manual to get yourself 4.2 Pairing to mobile phone 4 4.3 Charging your speaker 5

4.4 Radio mode 5

5 Product Specifications 6

6 FAQ------ 7

Compatible with all devices, Bluetooth® &

Non-Bluetooth with included AUX cable

The Bluetooth® word mark and logos are registered

trademarks owned by the Bluetooth SIG, Inc.

Safety Rules

1 Please follow the rules depicted in this manual closely to ensure your safety. Before using the product, we would strongly encourage you to read through this user manual.

familiar with the speakers

features and functions!

2 Be wary of any edges, uneven surfaces, metal parts. accessories, and its packaging to prevent any possible injury or damage.

3 Do not modify, repair, or dismantle the product. Doing so may result in fire, electric shock, complete breakdown of the product, etc. All of which are not covered under warranty.

4 Do not use any diluent or volatile liquid to clean the

5 Do not use the product in a hazardous location.

4. How To Use

4.1.General Functions

Desired Result

1X USB-C Cable	Turn on & Enter the pairing mode / Turn off	Press and hold the power 2-3 seconds to on / off the
1X Instruction Manual		Use a Bluetooth® enable phone or other Bluetooth device to perform necess

3.Product Diagram

Wireless Speaker

2. Package Contents



wer hutton for the product. led mobile th® enabled ssary pairing

Required Action

When there is an incoming call, press the Call Call Control button to accept the call, and press it again to hang up. If you press and hold the button, it will reject the call instead of nicking it up

Music Control When playing music, press the Play/Pause buttor (Play/Pause) to pause the music, press again to resume playin

Press the Volume / Track button to increase soun (Volume / Track) volume, press and hold the button to reduce volume. Press the button twice to advance to the next music track. Quickly tap 3 times to return to the previous track.

> Press the Mode button 3 times quickly to switch to radio mode. Then, double-press the same. button to automatically search for stations.

> To navigate through channels, double-press the Track button to advance to the next channel, and triple-press the same button to return to the previous channel.

different from that to which the receiver is connected Consult the dealer or an experienced radio/TV technician for help.

could void the user's authority to operate the

Caution: Changes or modifications not expressly approved by the party responsible for compliance

This equipment complies with FCC radiation exposure

limits set forth for an uncontrolled environment. This

transmitter must not be co-located or operating in

conjunction with any other antenna or transmitter.

Support

If you have problems with your device, please consult the instructions in this manual

Manufacturer Warranty

We stand by our products! That's why we guarantee them from any functional defects for one year from the original date of purchase. Should you have an issue please call us at (877)995-8505 or email us at info@mnsbrands.com





COCA-COLA, COKE, DIET COKE, FANTA, SPRITE. the Contour Bottle Design, the Dynamic Ribbon Device and the Red Disc Icon are trademarks of The Coca-Cola Company and, in Canada, Coca-Cola Ltd. ©The Coca-Cola Company. All rights reserved. Produced by M&S Accessory Network Corp. under a trademark license from The Coca-Cola Company.

New York, NY 10001

Designed in the U.S.A | Made in China. For support call: (877) 995-8505 or Email: info@mnsbrands.com

www.mnsbrands.com FC (E 🎗

4.2. Pairing to a mobile phone

- To use your Wireless Speaker, you must first pair your Speaker to a Bluetooth® enabled device. Once your Wireless Speaker is paired to a smart device, they will remain paired and automatically recognize each other whenever they are in range.
- · Pairing to a Bluetooth Enabled Smart Device: Turn on your smart device/Phone and ensure the Bluetooth® function is turned on / activated.
- · Long Press the on/off button for 2-3 seconds and the LED lights will start to blink Blue, you are now in pairing mode.
- In your Bluetooth® settings under search devices the smart device will list the "Coca-cola Speaker" as discovered device, tap or select "Coca-Cola Speaker" and your wireless speaker should now be connected.
- . The LED light will start to flash solid Blue once you are paired successfully.

4.3 Charging your Speaker

- . Use the USB-C cable provided with your Wireless Speaker. Connect the USB-C plug to the USB-C charging port on the speaker.
- · Connect the USB end to a USB port on a PC/Laptop or wall adapter in order to start charging the speaker.
- * Make Sure to Charge the Speaker for 3-4 hours before initial use.

4.4 Radio mode

This speaker includes a radio feature. For detailed operation instructions, please refer to 4.1: General Functions - Radio Mode.

If you experience poor signal reception while in radio mode, connecting the speaker to a charging cable can help improve the signal.



5.Product Specifications

Driver Diameter	50mm
Speaker output	3w
Impedance	4Ω
Bluetooth® Version	5.3
Battery Capacity	400 mAh
Receiver Distance	10m
Playing Time	3 hours at 50% volum
Charging Time	2 hours
Charge Type	USB-C



6.FAQ

1. Why is there no power when I try to power on the speaker?

Ans: Ensure the battery has been charged up to 3 hours for initial use.

2. There is no sound during playback?

Ans: Check the connection between the speaker and the phone or smart device, if the connection is not established, please try the pairing mode again. Make sure the Speaker is paired with your Bluetooth® enabled device.



STYLE











DC-ABS-DCC

Designed in the U.S.A. | Made In China

Manufactured, marketed, and distributed under license by M&S Accessory Network Corp., 10 W. 33rd St.,

