

Content

Content.....	1
1 Introduction.....	2
1.1 Acknowledgement.....	2
1.2 Announcements.....	3
1.3 Safety Instruction.....	3
1.4 Abbreviation/Terminology.....	4
2 Phone Introduction.....	4
2.1 Phone Operation and Preparation.....	4
2.2 Phone Status and Reminder.....	5
3 Quick Start Guide.....	5
3.1 Keys Function.....	5
3.2 Startup and Shutdown button.....	6
3.3 Open and Close of the Screen.....	6
3.4 Usage of Touch Screen.....	7
3.5 Home Page.....	8
3.6 Visit Application Procedures.....	10
3.7 USB Connection.....	11
3.8 Typing words.....	12
3.9 Operation Technique.....	13
4 Basic Setting.....	15
4.1 SIM Management.....	15
4.2 Wi-Fi.....	16
4.3 Bluetooth.....	18
4.4 Data Usage.....	20
4.5 More.....	21
4.6 Audio profiles.....	24
4.7 Display.....	27
4.8 Storage.....	29
4.9 Battery.....	31
4.10 Apps.....	32
4.11 Location.....	33
4.12 Security.....	34
4.13 Language & input.....	36
4.14 Backup & reset.....	38
4.15 Add account.....	39
4.16 Date & time.....	40
4.17 Accessibility.....	41
4.18 Developer options.....	41
4.19 About phone.....	42
5 Multi-Media.....	43

5.1 Music.....	43
5.2 Videos.....	43
5.3 Gallery.....	44
5.4 Camera.....	45
5.5 FM Radio	45
6 Communication Function.....	47
6.1 Phone.....	47
6.2 Text Message.....	47
6.3 Contact List.....	48
7 Internet	49
7.1 Browser	49
7.2 Email	50
8 Other Application Procedures	52
8.1 Clock.....	52
8.2 Calculator	53
8.3 File Manager	53
8.4 Sound Recorder.....	56
9 Installation of Procedures.....	57
9.1 Installation.....	57
9.2 Uninstall.....	57
10 Troubles Shooting	59

1 Introduction

1.1 Acknowledgement

Thanks for your purchase of our product. MEDIA PHONE is high performance phone. Its CPU is MT6572, which apply the Cortex-A7 (QuadCore) , dominant frequency is 1.3GHz, it is based on Android 4.4.2 operation system, and easy to expand the third application procedure.

The product is designed with various functions, including WIFI, BT, GPS,FM, voice call and so on. It is easy to achieve wireless communication and internet, you have access to surf the internet anytime and anywhere; it is also built with high accuracy GPS module, so that it can be used for navigating through installing map software. There are many sensors which offer you

brand-new operation and entertainment; besides, it has camera shooting, which leads electronic consumption to enter into a fresh palm internet entertainment time.

The manual systemically introduces the functions, use techniques and announcements, please read this manual carefully before your operation.

1.2 Announcements

Preventive maintainance

- Please always keep the Phonedry. To avoid the device short trouble, corrosion fault and electric short, please prevent the device, battery and charger from water and moisture, and don't operate the device or charger by wet hand.
- To avoid failure of device, battery and charger, please prevent the device, battery, charger from violent shock or shake.
- To avoid failure of device, battery and charger, please prevent the device, battery, charger of all over heating or too cold circumstance
- Never shock, throw, prod the Phone, or drop, extrude, bend the Phone.
- Never disassemble the device and accessories arbitrarily, otherwise the device and accessories are not in our company warranty scope.

1.3 Safety Instruction

Before the operation of the Phone, please read this chapter and teach your kids about these information. For further details, please refer to the safety instructions and announcement.

- Never use the Phonewhen driving car, in order to ensure safe driving.
- In the medical area, please abide by related rules and regulations. Please shut down the Phonewhen it is near to the medical area.
- To avoid the wireless signal to interrupt the plane- controlled signal, please shut down the Phoneor using airplane mode when you are boarding a flight,
- To avoid electronic equipment failure, please shut down the Phonein the vicinage of high-accuracy electronic equipments.
- Please don't disassemble the Phoneand accessories. Only authorized agent has access to service the Phone.

- Please keep the Phonefar away from magnetic equipments, the radiation of Phonemay erase the data stored in the magnetic equipments.
- Never use the Phonein the vicinage of high temperature, inflammable gas (gas station).
- Protect the Phoneand accessories from kids reach scope, and avoid the kids to use the Phonewithout parents’ supervision.
- Please comply with related rules and regulations, and respect others’ privacy and legal rights while using the Phone.
- Please strictly adhere to related instructions in the manual when using USB cable to ensure the safety of the Phoneor PC.
- Never use the Phonein bathroom or other huPhoneenvironment, and please protect the Phonefrom liquid wash or wet.

1.4 Abbreviation/Terminology

Abbreviation/Terminology	Full Name	Description
WIFI	Wireless Fidelity	Base on IEEE 802.11bgn standard wireless LAN
T F	TransFlash	Alternative name Micro SD,super miniature memory card

2 Phone Introduction

2.1 Phone Operation and Preparation

Battery Charging








If this navigator is first used, please use AV adaptor to fully charge it.

Apply the power adaptor to charge for Phone.

2.2 Phone Status and Reminder

Reminder icons

When some remind message appears in your reminder window, please click column and slip the screen to open the reminder list. Choose the menu you need, and confirm the information. Then you can close the reminder window through clicking the column to slide up. Please refer to below status icons:

	New email		Airplane Mode on
	USB connected		USB debugging connected
	Downloading		WIFI connected, internet is available
	Current electric volume.		

Reminder board

Reminder icons will work while receiving emails, WIFI is open, you can open the reminder board to view the detailed information.


Open the reminder board

When the reminder column shows new reminder icon, please hold the column and slip down your finger, then the reminder board is opened.

3 Quick Start Guide

3.1 Keys Function

Keys Function Description:

Power button	Short press to sleep/wake up, long press to startup and shutdown.
Volume + (up)	increase the volume
Volume - (down)	decrease the volume
HOME (home)	Click it in any interface will return to main interface.
Menu button 	This button will display in menu interface.

3.2 Startup and Shutdown button

Startup

Long press **POWER key for three seconds**, you can enter into startup picture. The system enters into screen lock status, please unlock it

Notice: When the Phone has crashed, long press **POWER key for eleven seconds** to reset.

Shutdown

1. Long press POWER, it will popup shutdown window.
2. Shutdown window contains Power off, Airplane mode and Audio profiles three options.
3. Click Power off is the last step.

 
3.3 Open and Close of the Screen

Screen will be closed on its own when no operation happens.

1. Screen will be closed on its own if no operation happens for some time to save battery power
2. When screen is open, press POWER key, the screen will be closed immediately.

Open the screen when it is closed.

If the screen is closed, short press POWER to open the screen. The screen will be locked open it, it will show the picture as below picture 3.1, slide around to unlock the screen.

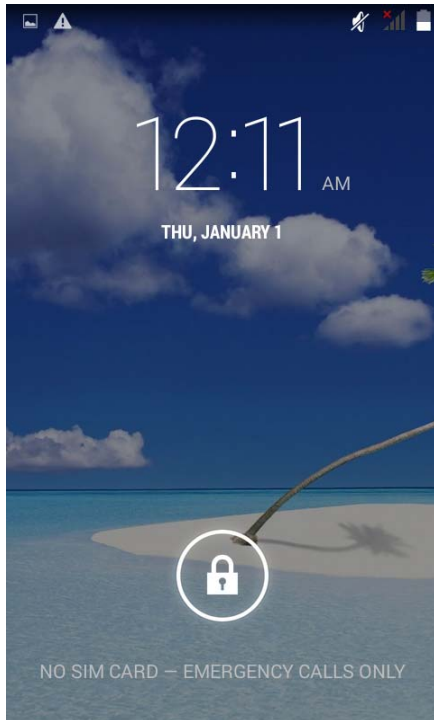

Picture 3.1

3.4 Usage of Touch Screen

Phoneoperating methods

There are below methods to view the main screen, menu and application procedure in your MID.

Click

When you want to use the screen keyboard typing or choose application in the main interface, you only need to touch it by your finger.

Press on

If you want to open some item(textbox or the link in the webpage), or shortcut and main procedure move, you can press on this item.

Quickly slide or slide

Quickly slide or slide indicates make quick vertical or horizoncial movement by finger.

Pull

 
Before you pull, you need to hold the it with strength until you pull it into the position you want.

Rotate

For most pictures, you only need to rotate the Phonesidewise to change the screen direction from horizontal to vertical. For instance, when you are typing works, and watching movies.

3.5 Home Page


Main interface as below picture 3.2, long press the blank and it will popup windows to set wallpaper.

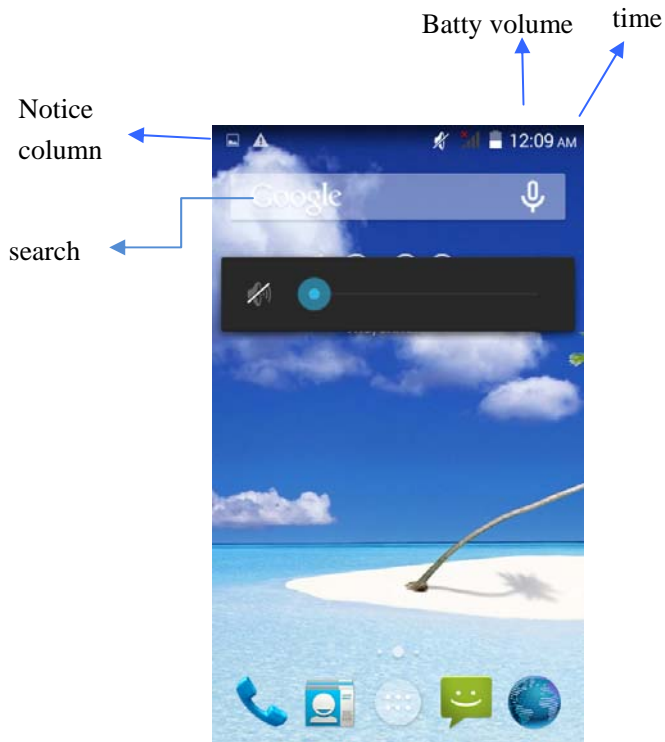

Picture 3.2


The extended home page

 The home page can be extended beyond the wideness of screen to provide more space, which you can put new-added shortcuts and widgets. Click the blank space in home page then slide right or left to extend to the right or left of the screen. In the home page, there are two extended pictures, as Picture 3.3.

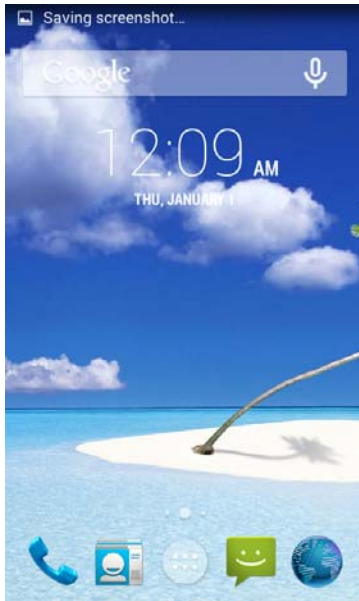


Picture 3.3

 
The shortcut icons management in desktop application.

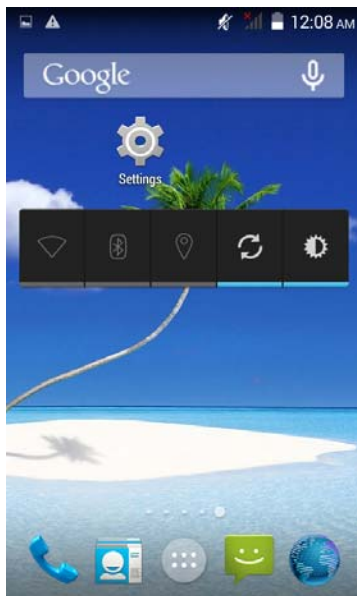

Picture 3.4

Remove the icons in desktop

 1. Long press the icons need to be remove, then on the right above of the screen, it will appear  icons.
2. Drag the icon to the above of the remove icon, till the icon become red, then move your finger to delete the icon.

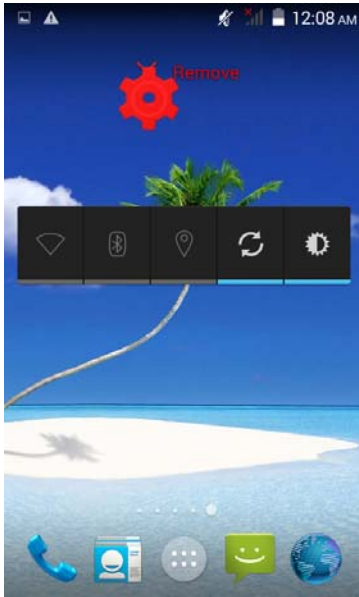


Picture 3.5

Change the wallpaper of desktop

1. In home page, long press any blank space in main screen, it will popup a window to change the wallpaper.
2. Click the gallery or wallpaper gallery to select the wallpaper.

3.6 Visit Application Procedures



Click  in right top of Picture 3.2, enter into main interface as Picture 3.6, choose the application procedure you want to visit.



Picture 3.6

3.7 USB Connection

Phonestorage configuration

Before transmitting documents, you have to conduct storage configuration for your MID:

1. Connect the Phone and computer by USB cable, the reminder column will show the remind information.
2. Open the reminder board; please view the Phonestatus and reminder to learn how to open the board.
3. In the reminder board, click the “USB Connected”, it will as below Picture 3.7, then click “open USB storage configuration”.
4. Now the USB is connected successfully.



Picture 3.7

Copy the document into memory card

1. Connect the Phoneto computer with USB cable.
2. As Phonestorage configuration, it is connected with computer successfully.
3. Open the “My computer” in your computer, check the items in “removable disc”.
4. Copy the documents you need into “removable disc”.
5. After copying finishes, click “shutdown the USB storage configuration” to uninstall.

Notice: When the Phone is connected with USB cable, and you open the USB storage configuration, you can't view the memory card through the MID. Only after you detach the USB cable, you can view the memory card in the MID.

3.8 Typing words

Use the screen keyboard

When you start the procedure or choose the words or numbers edition, it will show the screen keyboard. The keyboard contains below typing options:

Android keyboard

Choose the typing method you want

1. Click setting application in main menu interface.
2. Click Language and Keyboard.
3. In the text setting area will reveal all the installed words-typing methods in your MID.
4. Tick the typing method you want.

Use and switch of input method




Picture 3.8

1	switch the capital and small letter
2	click to insert the space
3	click input to execute
4	delete the character in the left of cursor, click and hold to delete all the characters in the left on the cursor.

3.9 Operation Technique

Enter widgets interface

 In the application interface,click widgets on the above of screen, or slide the screen, it will switch into widgets interface. Long press any widget to create its shortcut, then you can enter into the application through the shortcut icon.

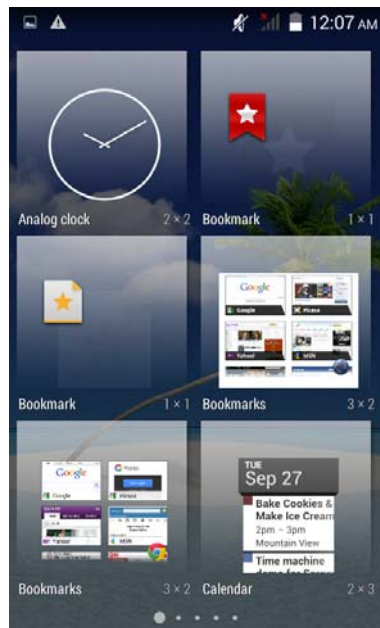

Create application shortcut icons in the desktop

 
In the application interface or widgets interface, long press any icon to switch into desktop automatically, drag and hold the icon, you can move to any position in the desktop.

Remind: If the target position has no space, the widget won't be add in the main screen.

4 Basic Setting

4.1 SIM Management


Click settings in main menu, choose SIM Management, as Picture 4.1

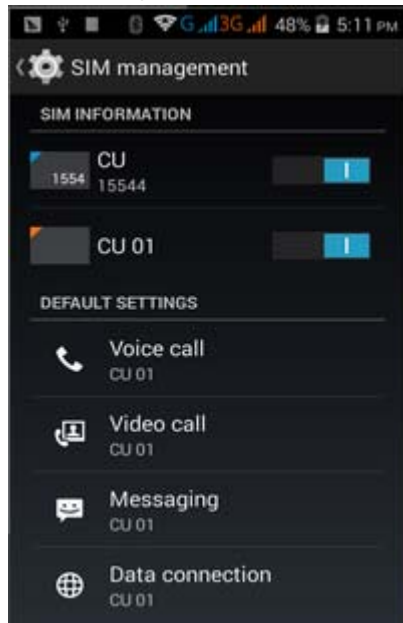

Picture 4.1

Data Connection

 Click setting application in main menu, choose SIM management, click data connection, choose off or on, as Picture 4.2

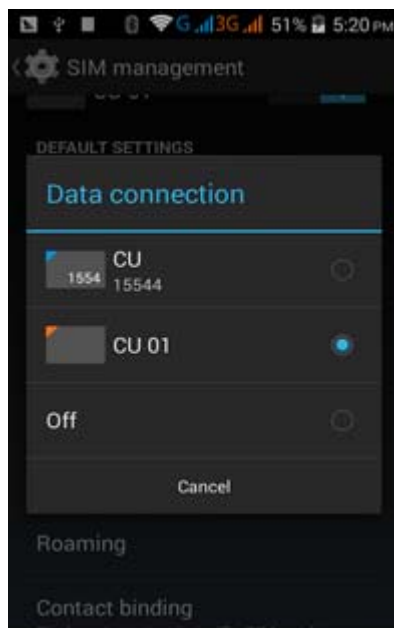

Picture 4.2

4.2 Wi-Fi

1. Connect Wi-Fi


- 1) In the main menu or interface, choose **setting** application procedure.
- 2) Click WLAN, open wifi, Phonewill automatically search the available Wifi wireless internet. As Picture 4.3
- 3) Choose the Wi-Fi internet you want to connect, if it has password, it will popup the password window, enter password, click connect.



Picture 4.3

2. Add Network

 - 1) Click  icon, as Picture 4.4

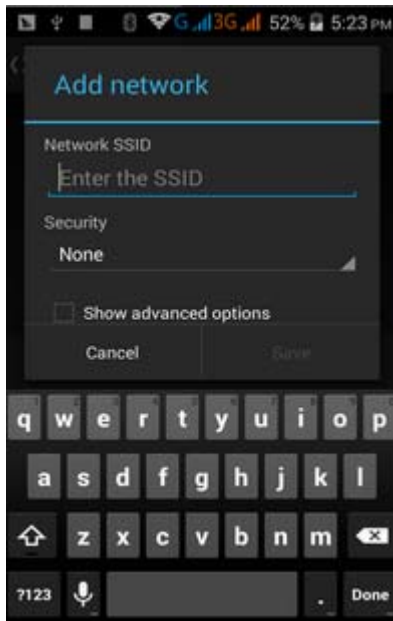

Picture 4.4

- 2) Input network SSID, the wireless network name, click save.
- 3) Click user name already saved, click connect to use network, as Picture 4.5




Picture 4.5

3. Network Notice

If you open Network Notice, when WIFI signal appears, the right bottom will remind you available WLAN network.

4. Keep WI-FI on during sleep

1. Click  icon in right bottom of Picture 4.5, select **advanced**.
2. Click **Keep WI-FI on during sleep**, as Picture 4.6




Picture 4.6


4.3 Bluetooth

Bluetooth function operation

 
1. Click setting application in main menu interface
2. Click bluetooth and open it.
3. If somebody open bluetooth in your surroundings, click search device in right above, then Phonewill automatically search the bluetooth device nearby. As picture 4.7

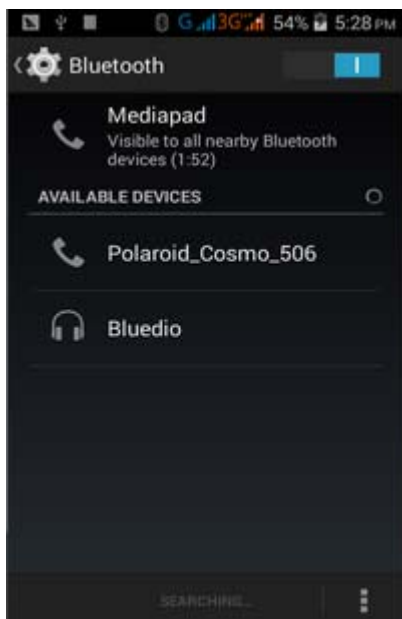

Picture 4.7

4. Click the available Bluetooth device, it will popup request window, enter into related password, and match the device to connect.
5. After match successfully, choose the operation you want to, click  to enter into

 
Picture 4.8.

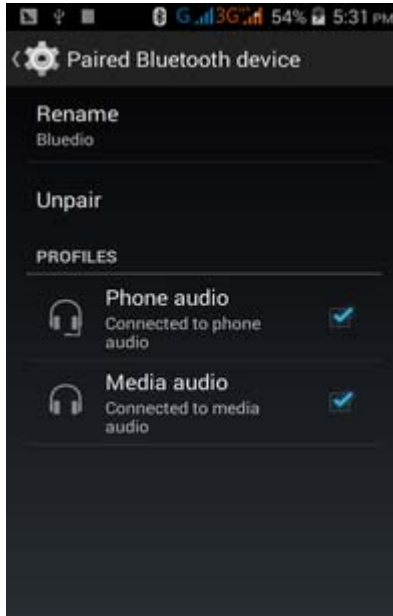


Picture 4.8

Bluetooth setting

1. Rename tablet

 
Click  icon in right bottom of Picture 4.7, as Picture 4.9, select rename tablet, you can rename it as you want

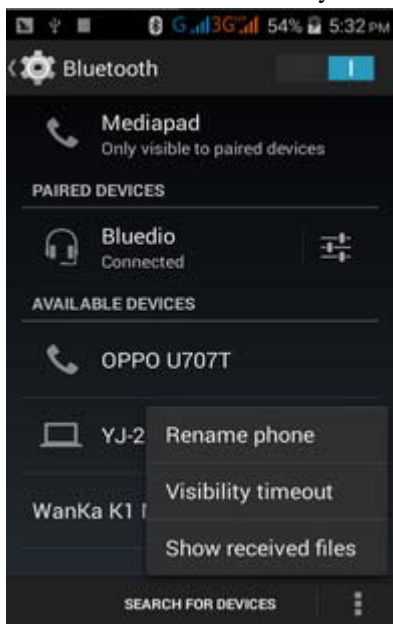

Picture 4.9

2. Check visibility timeout

 Select **visibility timeout** setting in Picture 4.9, choose the time you want to set, as Picture 4.10 (Note: check overtime setting is the time setting when Bluetooth is checked)

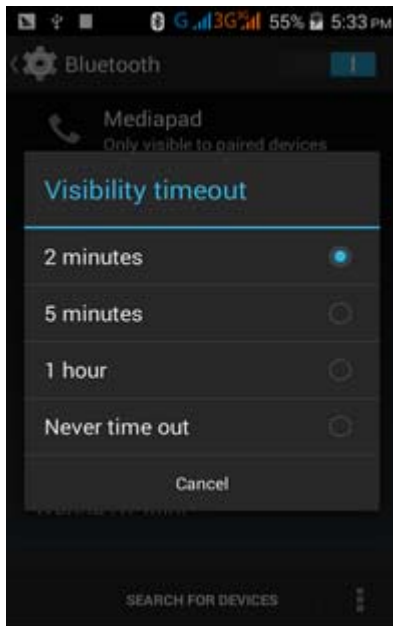


Picture 4.10

3 Display the file you received

Choose display the file you received in Picture 4.9, you can view download and upload files.


4.4 Data Usage

 Check SIM card data usage, as Picture 4.11

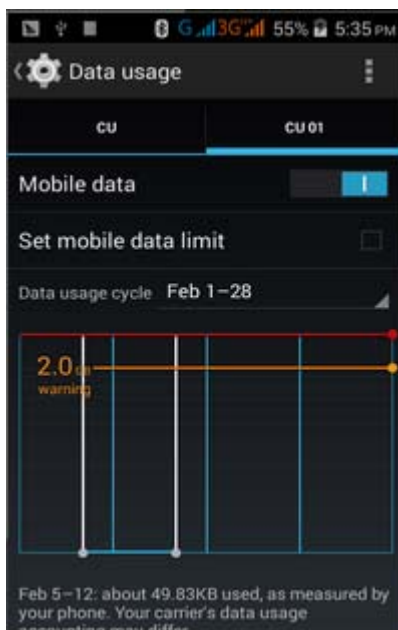

Picture 4.11

Check WIFI data usage

Click  icon in right top of Picture 4.11, click **Data Usage**, as Picture 4.12



Picture 4.12

 
4.5 More

4.5-1 Airplane Mode

Airplane Mode can turn off WIFI and GSM card function quickly, when airplane mode is turned on, WIFI and GSM can't get any signal, then airplane mode is turned off, WIFI and GSM module will recover to previous state.


4.5-2 VPN

Open VPN, click **add VPN network**, as Picture 4.13. Input **name** and server address, then save.

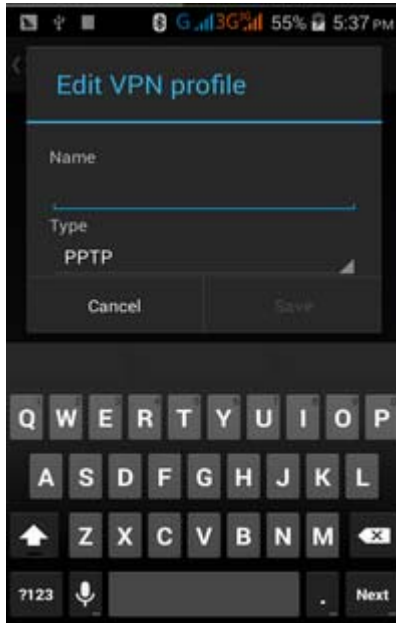

Picture 4.13

 Click VPN, as Picture 4.14, input VPN user name and password, click connect.

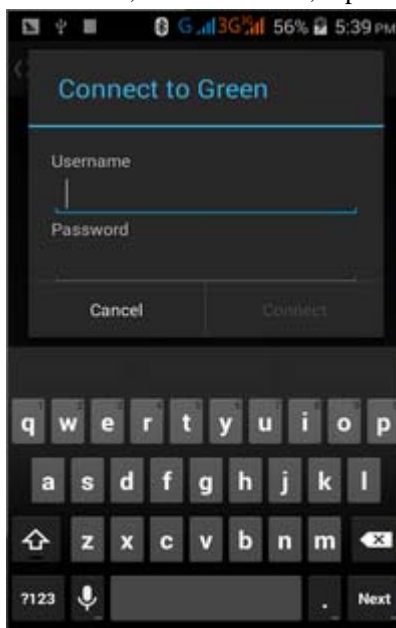


Picture 4.14

4.5-3 Network sharing and portable hotspots

Portable WI-FI hotspots

 1. Click setting application in main menu.
2. Click more when wifi is well connected, open Tethering & portable hotspot

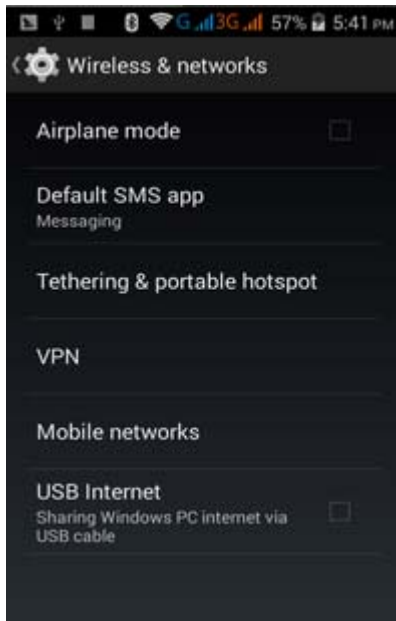

Picture 4.15



Picture 4.16

3. Click **keep WI-FI hotspots on**, choose open time.
4. Return to previous menu, open portable WLAN hotspots, click configure WI-FI hotspots.




Picture 4.17

5. Set passwords you want to, password should be more than 8 numbers.


4.6 Audio profiles

 1. Open settings, click contextual model, as Picture 4.18,

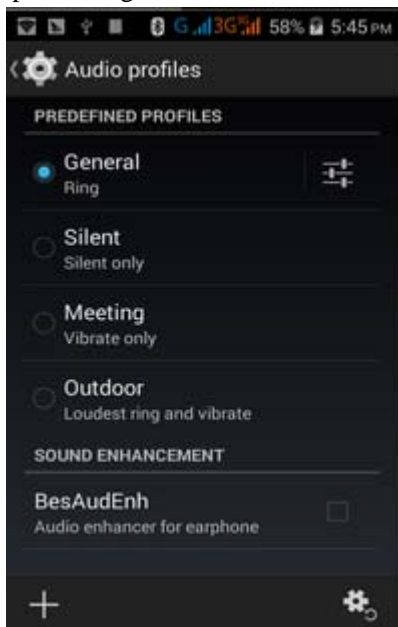

Picture 4.18

 2. Click **General** to enter into Picture 4.19

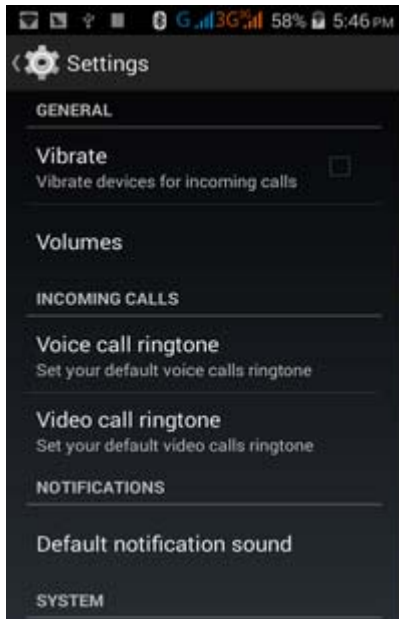


Picture 4.19

1. Vibrate

In picture 4.19, click **vibrate**, Phonewill vibrate when someone calls you.

2. Volume

 
In picture 4.19, click volume, you can set ringtone, notice, and alarm volume, as Picture 4.20

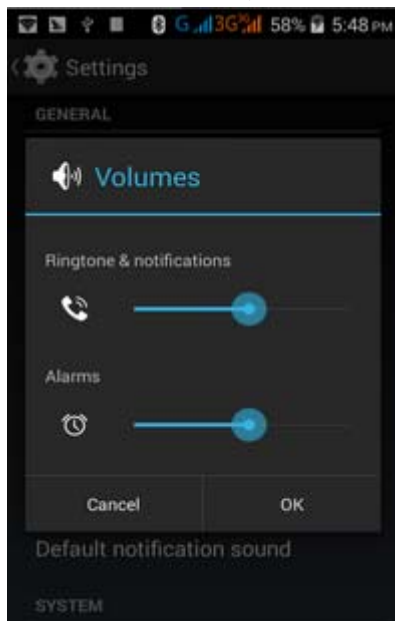

Picture 4.20

3. Voice call Ringtone

 
In picture 4.19, click **voice call ringtone** to choose voice call ringtone, as Picture 4.21

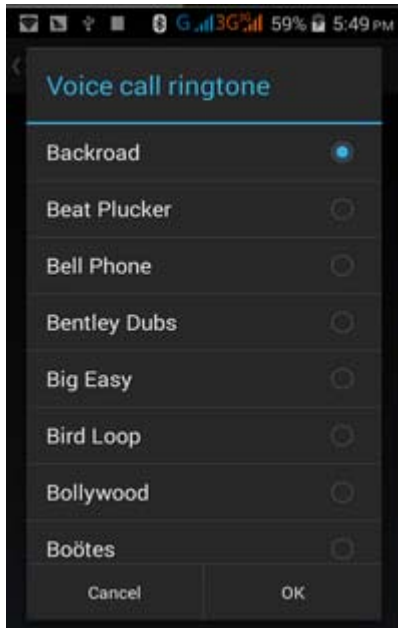

Picture 4.21

4. Video call ringtone

 In Picture 4.19, click video call ringtone to choose video call ringtone, as Picture 4.22

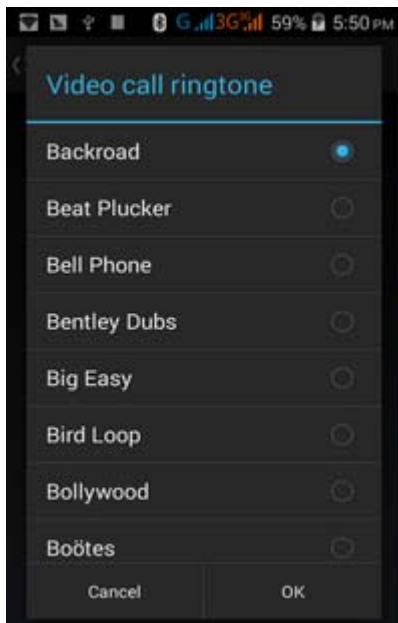


Picture 4.22

(Note: Except general, silent, meet, outdoor are only for selection, they can't be set.)

4.7 Display

4.7-1 Adjust the screen brightness

 1. Click **Setting** application procedure.
2. Click **display**, choose brightness,
3. Drag the portlito to adjust the brightness volume.As Picture 4.23

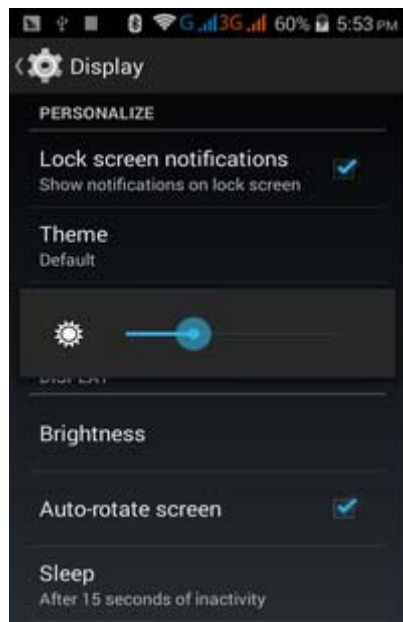


Picture 4.23

4. Click OK after brightness is adjusted.

4.7-2 Wallpapers

 1. Click **setting** application.
2. Click **display**, click **wallpaper**.
3. You can choose different wallpapers as you like---gallery(user defined)---Live wallpapers---wallpaper, as Picture 4.24

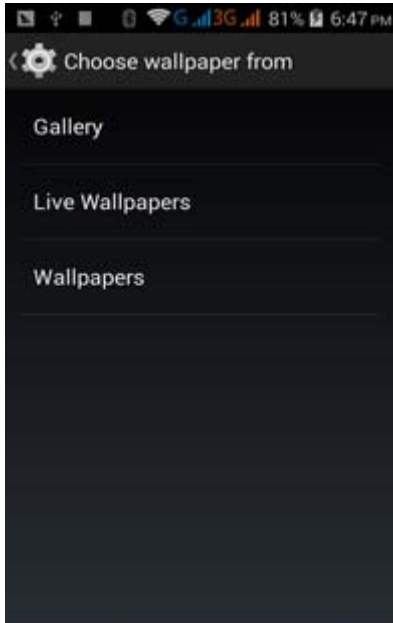


Picture 4.24

4.7-3 Auto rotation

System is defaulted as open auto rotation, when it is turned off, system won't rotate Phonescreen by G-sensor.

4.7-4 Sleep

 
1. Click setting appliation.
2. Click display.
3. Click sleep.
4. Set the sleep time as you want, as Picture 4.25

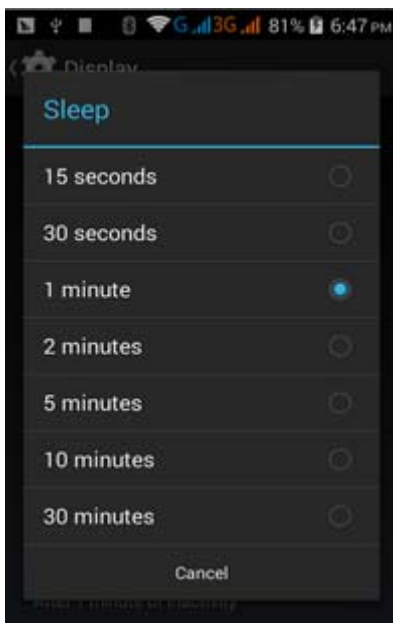

Picture 4.25

4.7-5 Font size

 Click **font size** to adjust the font size, as Picture 4.26

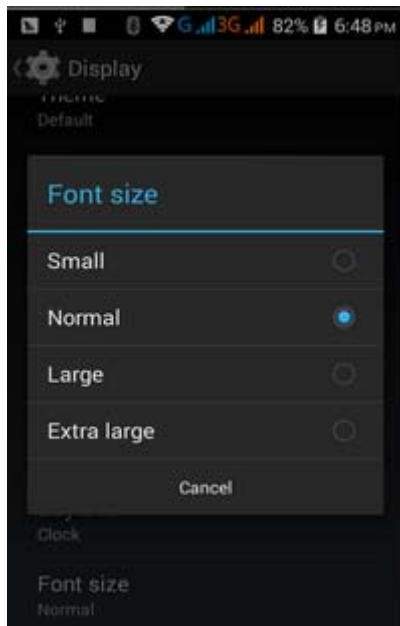

Picture 4.26

4.8 Storage

Open setting function, click memory, click preferred install location, you can choose install new application to choose preferred install location.

Check SD card and Phone storage space.

1. Enter into setting application.
2. Click storage, check storage space.

1. Internal storage

(1) System storage

System storage is the space Phoneleave for system file, as Picture 4.27. it can't be viewed.



Picture 4.27

(2)Internal storage

Internal storage is Phonelocal NAND storage, as Picture 4.28, if you need to check the storage content, you can check it in main menu.



Picture 4.28

2. SD card

You can check storage space, SD card available space, unmount SD card and erease SD card, as Picture 4.29



Picture 4.29

Safely remove SD card

1. Click setting application.
2. Click memory.
3. Click uninstall SD card.
4. Now you can remove SD card safely.

Note: Removing SD card safely can protect SD card and increase its lifetime.

4.9 Battery


Click setting function, select battery, you can view the battery situation, as Picture 4.30



Picture 4.30


4.10 Apps

 1. Click setting application in Apps.
2. Select application, after enter, you can manage and delete installed application and check system used storage space and left space. (As Picture 4.31)

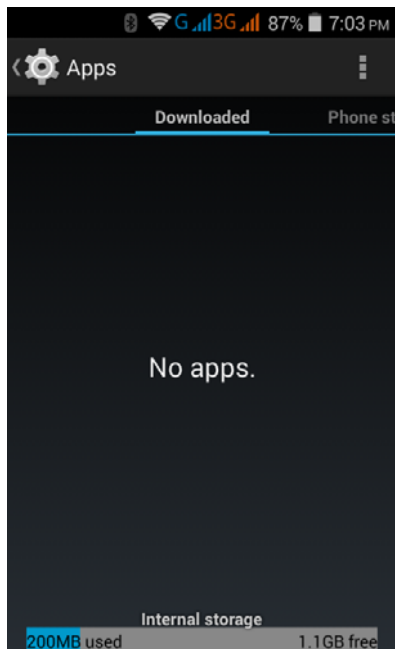


Picture 4.31

 3. View internal storage used space and left space, as Picture 4.32

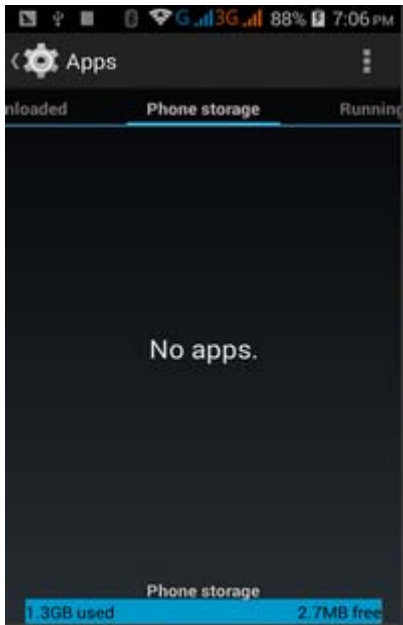

Picture 4.32

 
4. View the working device, used space and available space, as Picture 4.33

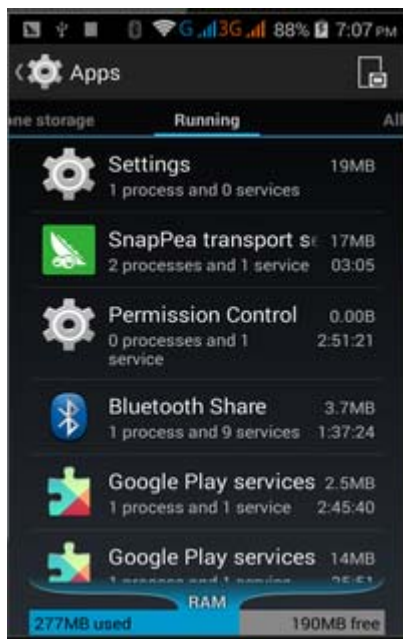

Picture 4.33

4.11 Location

 Click **setting**, select **location**, as Picture 4.34

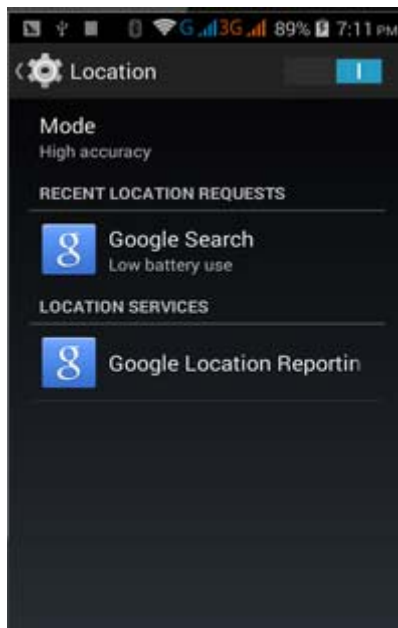

Picture 4.34

4.12 Security

Set locked screen

Lock the touch screen by unlock icon or password to protect your MID.

Note: After setting screen locked, you should enter the passcode each time when you startup or screen is locked

Set unlocked picture

1. Click setting application in main interface.
2. Click security
3. Click **locked the screen**.
4. Choose **picture** in text setting area.
5. Click next following the remind message.
6. The unlocked pattern board pop up, there are nine touch spots, connect 4 points from vertical, horizontal or diagonal direction. Move your finger from the screen when finish. The system will record yous new unlock pattern.
7. Click **continue**.
8. When you see the reminder, enter the unlock pattern, then click **confirm**.



Picture 4.35

Set unlock PIN code

 
1. Click **setting** application in main interface.
2. Click **safe**.
3. Click **screen locked**.
4. Choose **PIN** in text setting area.
5. Enter new PIN code(numbers) and click **continue**.
6. Enter new PIN code again and click **confirm**.

Set unlock password

1. Click **setting application** in main interface.
2. Click **safe**.
3. Click **screen locked**.
4. Set password in text setting area.
5. Set new password(letters and numbers) and then click **continue**.
6. Enter the password again and then click **confirm**.

Unknown sources

1. In main interface, click **setting**.
2. Click **security**
3. Click **unknown source**, as Picture 4.36

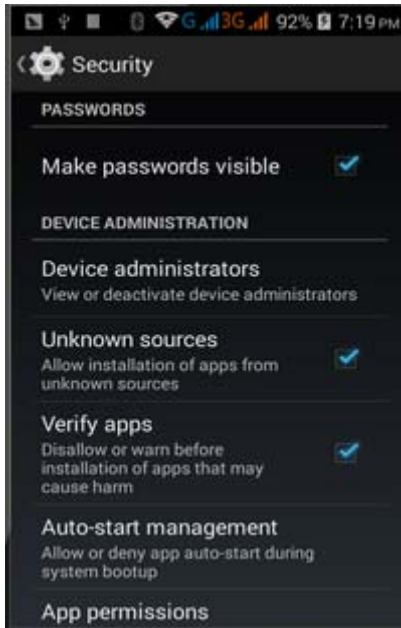

Picture 4.36

Note: Manual installing APK files needs to turn on unknown source.

4.13 Language & input

Click setting, select language and input method, choose language to switch language, as Picture 4.37



Picture 4.37

Click **setting**, choose **language and input**, choose **Android keyboard setting**, click input language, as Picture 4.38



Picture 4.38

Choose the language you want to change in the language list, as Picture 4.39



Picture 4.39

Return to **language and input method**, click **default**, as Picture 4.40, select input method you want to use



Picture 4.40

4.14 Backup & reset

Connect WIFI and login your google account, choose **backup my data**, system will backup your data into google server.


If you need to recovery factory reset, please click **Factory data reset**, as Picture 4.41, if you need to formulate NAND, please click **DRM reset**.



Picture 4.41


4.15 Add account

 1. Click **add an account**, as **Picture 4.42**, Select setting application

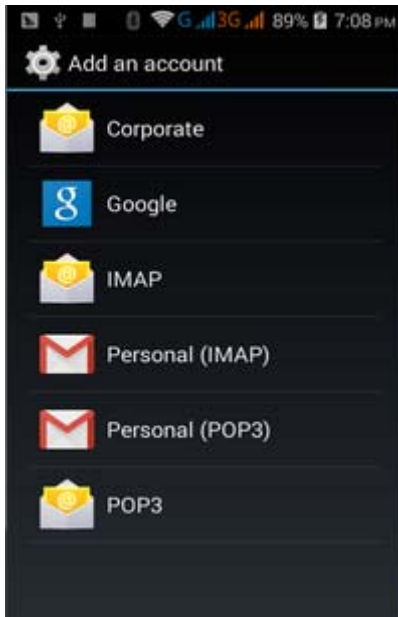

Picture 4.42

 2. For example: choose IMAP, after successfully load, it will open the sync function, as **Picture 4.43**

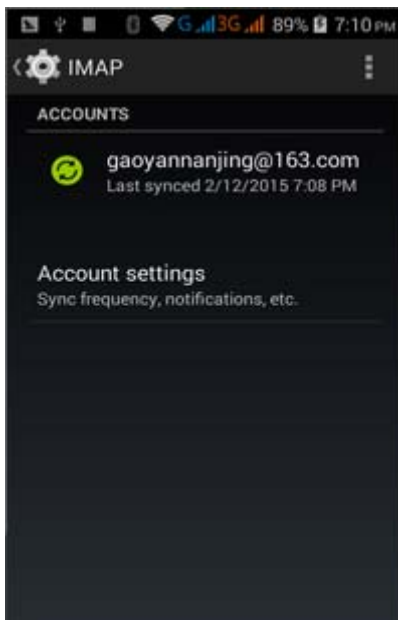

Picture 4.43

4.16 Date & time

According to the preset, system will voluntarily apply the date, zone, and time provided by internet.

Manual set date, time and zone

1. Click Setting application procedure.
2. Slide down the screen, then click **date and time**.
3. Turn off “auto setting of date and time”.
4. Turn off “auto setting zone”.
5. Click Zone Selecting, then choose the zone lists. Slide down the list to view more zones.
6. Click **Date setting**, then click upper or down button to adjust date, month, and year, click **setting** when you finish selection.
7. Click **Time setting**, then click upper or down button to adjust hour and minute, click AM or PM to change morning or afternoon (there is no such selection when you set 24-hour format). Click **Setting** to finish.
8. Click **24-hour format**, switch between 12-hour or 24-hour format, the time format you choose will be used on the alarm clock.
9. Click date format setting, then choose the time format you want to show on MID.



Picture 4.44

Note: If you use the time internet provided, you will not able to set the date, time and time zone.

4.17 Accessibility

1. Large text

 
Click it to make system font large size

2. Power button to ends call

When Click call, press “power” button, call will end but not hold.

3. Touch and hold delay

Click touch and hold delay to increase time, as Picture 4.45

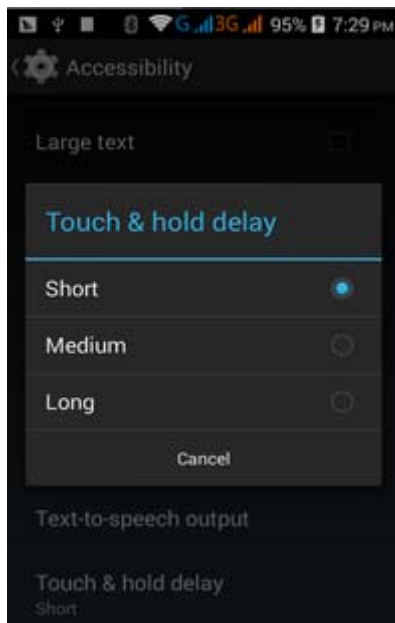

Picture 4.45

4.18 Developer options

4.18-1 USB adjustment

After opening USB adjustment, you can use some software to read Phonesoftware, but when USB adjustment is turned on, USB storage needs to manual adjust.

4.18-2 Desktop backup password

Click Desktop backup password,you can set and change password.

4.18-3 Stay awake

If you open keep awoken state, it will never auto sleep when your Phoneis charging.

4.18-4Pointer Location

If you open pointer location, it will display touch vertical and horizontal direction.

4.18-5Show touches

 
If you open display touch screen operation, it will display touch operation on the screen. It is suggested to use with same direction as pointer location.

4.18-6 Show layout bounds/Show GPU view updates/Show surface updates

If you open these functions, The system will reset, it will display related area when the area is refreshing.

4.18-7 Show CPU usage

After open CPU usage, in the right top of Phone will show CPU usage situation. as Picture 4.46

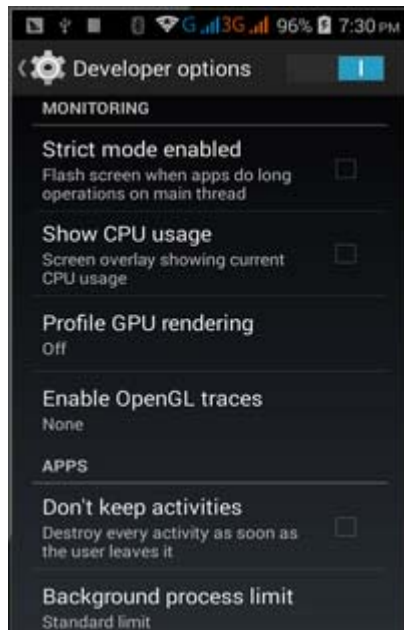

Picture 4.46

4.19 About phone

Check Phonestate

1. Check **Setting** application.
2. Click **about tablet**, check **system updates, status, model number, Android version** and so on.
3. Click **status**, check **battery status, battery level, SIM status, IMEI number, IP address** and so on.

5 Multi-Media


5.1 Music



Enter into music player: in menu or desktop click music icon to enter into music player, click the music you want to play, as Picture 5.1:



 Picture 5.1

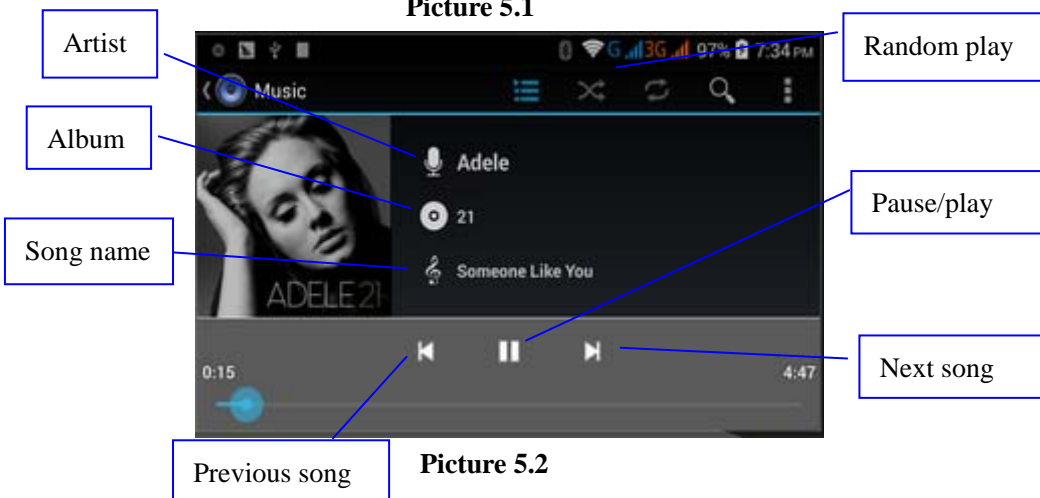

Picture 5.2

- Drag the progress bar to adjust play progress.
- Operation of music player button as Picture 5.2

5.2 Videos



- Enter video player: choose Videos application in main menu, choose the video you want to play.
- Operation of video player button as Picture 5.3



Picture 5.3

5.3 Gallery

gallery application can auto search photos and video files in SD card, and photo gallery will classify these photos and videos in folder. You can apply photo gallery to view and edit photos, set the photos as wallpaper and watch the video.

View pictures

1. Click gallery application in main interface.
2. Enter into gallery, click the folder you want to view.
3. Click the picture you want to view, the system will play it in full screen mode automatically.
4. The pictures can be zoom in and zoom out, put two fingers on the screen, the separate the fingers(gather up the fingers, the picture will be zoom in) or double click the screen.

Note: when you browse the pictures, slide left or right to view more pictures.

Edit and set pictures

When check the pictures in full screen mode, click menu key to display menu selection, you can choose the selection you need to edit and setting pictures.

- **Slide Show**

1. Open a picture, use virtual key to click menu key, display menu selection.
2. Click **slide show**, it will auto loop play


- **Crop**

1. Click **menu** key to display menu selection.
2. Then click crop, click and drag related area to adjust the cropper.
3. Click cropper and drag it inside and outside to adjust the image.
4. After adjust the size you want, click **crop**.
5. If you wish to give up to crop, click **cancel** to return to picture browse.

- **Edit**
 1. Click **menu** key, display the menu selection.
 2. Click **edit**.
 3. Adjust the brightness, style, color, antialias setting in selection.
 4. Click **save**.
 5. If you want to give up edit, click **return** key, click **not** to return to picture browse.

5.4 Camera



In the main interface or desktop, click camera application procedure , enter into camera

- Operation of camera ,Switch camera: choose **Menu** key, click **switch front/back camera**, as Picture 5.4



Full screen play mode.

Switch front/back camera

View the pictures and videos

Click it to take pictures

camera shooting mode

Camera mode


Picture 5.4

5.5 FM Radio



Click  in the main interface or desktop to enter into FM radio interface:

 - Radio button operation instruction as Picture 5.5:

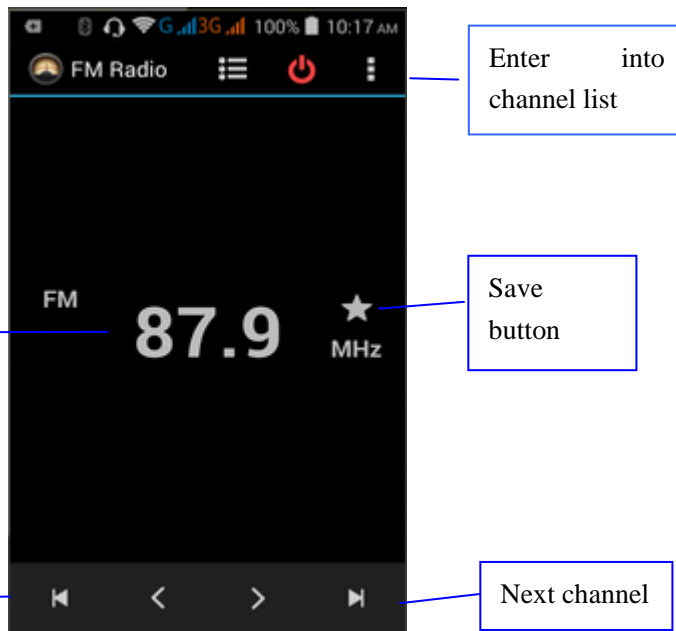


Picture 5.5

Click search to search FM band, as Picture 5.6



Picture 5.6

- Save channels: Click  button in the main interface to save the channel, and the channel will be saved in channels list.

 
Note: You need to insert earphone as antenna when using FM radio, If no antenna, your Phone can't search any frequency band.

6 Communication Function

6.1 Phone

1 Click **Phone** application procedure

2 Operate as Picture 6.1

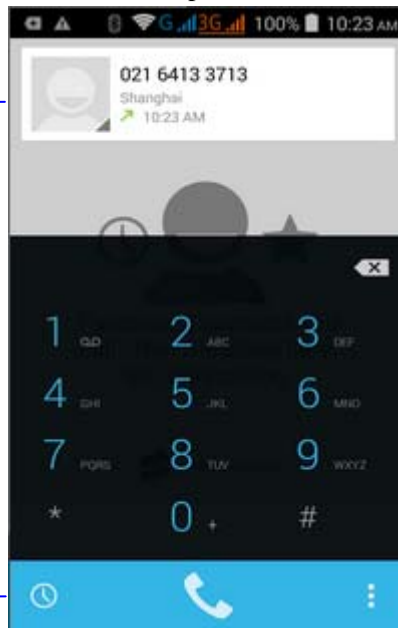


Display phone numbers


The area of dial phone


Call history

Picture 6.1

6.2 Text Message

1 Enter into main menu, choose  application procedure.

 
2 choose 

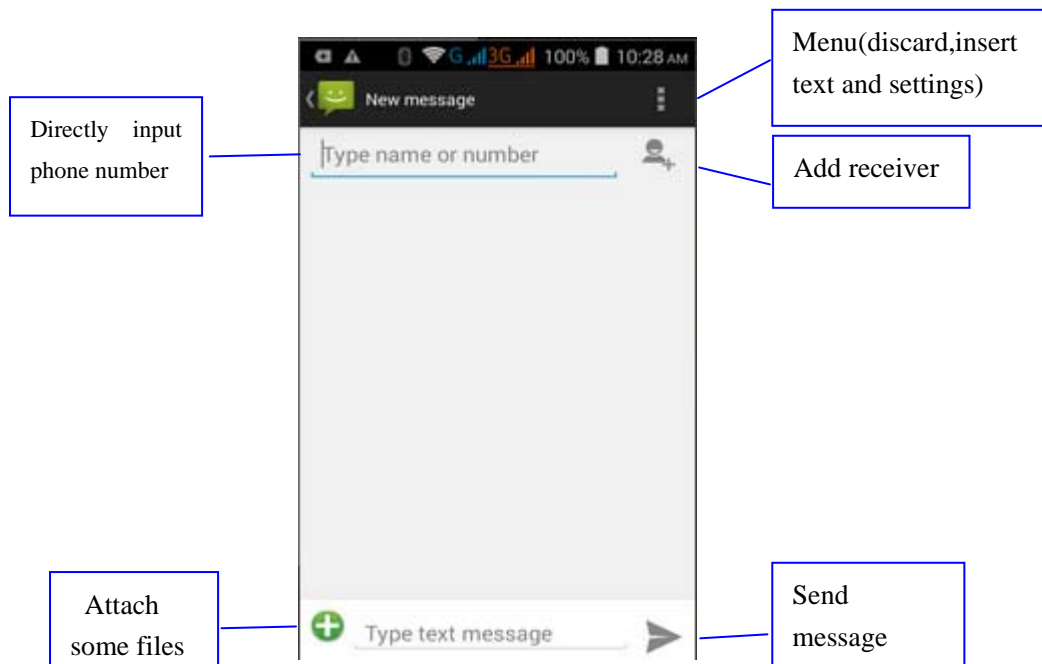


Picture 6.2



  6.3 Contact List



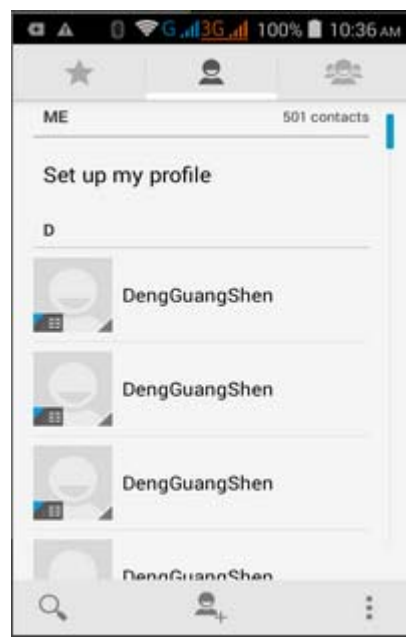Click Contact list  in the main interface, enter into the contact list as Picture 6.3




Picture 6.3

- Search contact: click  button, enter into search function
- Add contact: click  button, enter into add contact interface.


7 Internet

7.1 Browser

In case of Wi-Fi or mobile internet is connected well (Please refer to Chapter 4.1 for wireless and

internet setting), click IE browser  in the main menu or desktop to enter the IE interface, as

 Picture 7.1

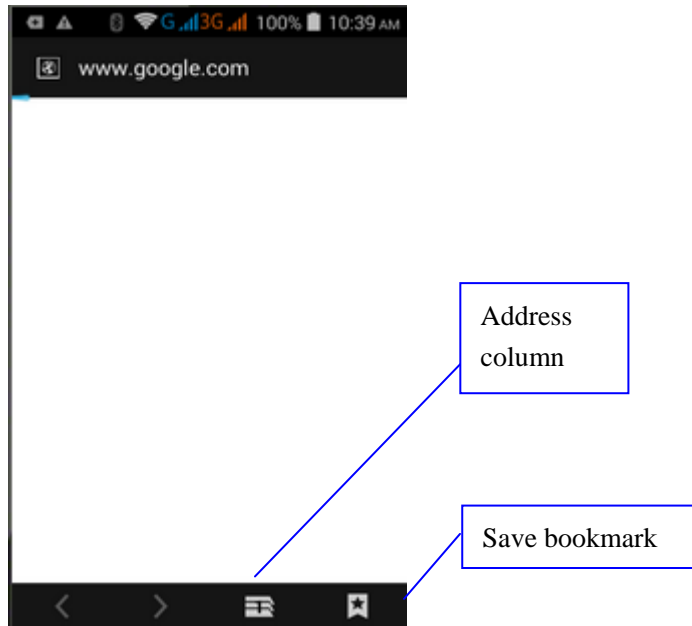

Picture 7.1


Click address bar to input the website, click start, enter into related webpage, then you can browse the website information, as Picture 7.2 and you can click the menu you can refresh ,save to bookmarks,,share page,bookmarks,,history and setting the webpage.



Picture7.2

7.2 Email

 Email application procedure contains email setting guide, you can add the external POP3 OR IMAP email account of normal web email service provider (For instance, Yahoo, Gmail, Hotmail and 163),as Picture 7.3

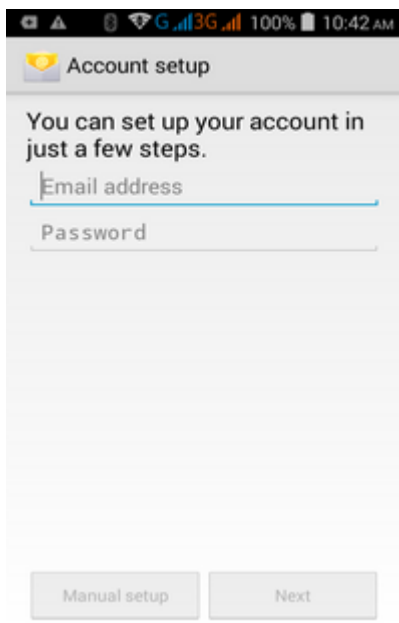

Picture 7.3

a. Email Setting

1. After you click the sending email icon  , you can see the email setting guide,

which can help you to set.

2. Input your email address and password.
3. Click “Next step” button, choose your email type is POP3 or IMAP.
4. Click “Next Step” button to check whether the email box servicer can receive or send emails
5. Input the email account and display the email subject, and click **finish**.
6. If the email box is available, you will enter into your mail box automatically.

b. Delete the email account

You can delete setted POP3 or IMAP email account from your MID.

 



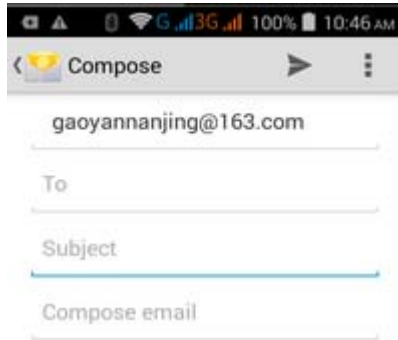 
Click .

1. Enter into your mail box.
2. Press Menu key.
3. Click Account
4. Press the account you want to delete.
5. Click confirm to remove.

c. Send E-mail



1. Click  to display your mail box.
2. Click the inbox, it will refresh the new emails automatically; click it to read new email.
3. Press Menu key. Menus will popup.
4. Click **Edit**  to enter into new email editing interface.
5. Input the receiver’s email address.
6. Input the subject and email content.
7. If you want to add attachment, click menu key, the menu popup.
8. Click “Attach file” (photo,music, video,contacts).
9. Click “send” to send the email out.




Picture 7.4

8 Other Application Procedures

8.1 Clock

Click **Clock** procedure, enter into below interface as Picture 8.1.

 There are clock, picture, music and homepage buttons.

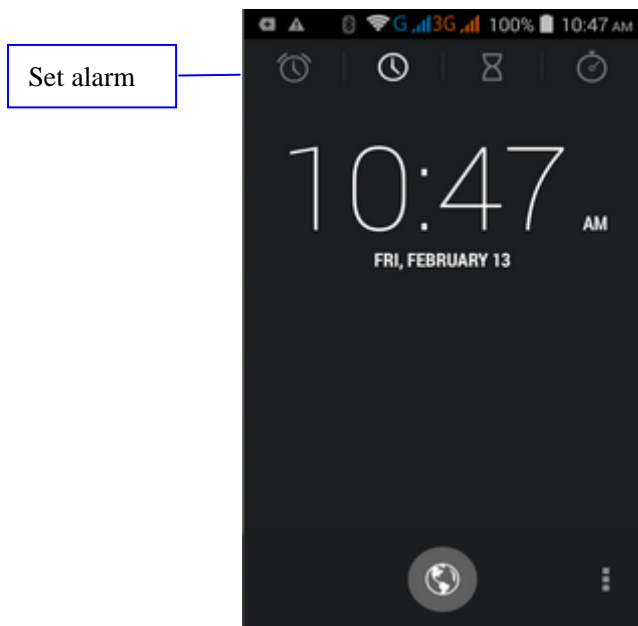


Picture 8.1

8.2 Calculator



 1. Click **Calculator**.
2. Enter into the basic board of calculator.
3. Soft touch the numbers or operator in calculator to calculate.

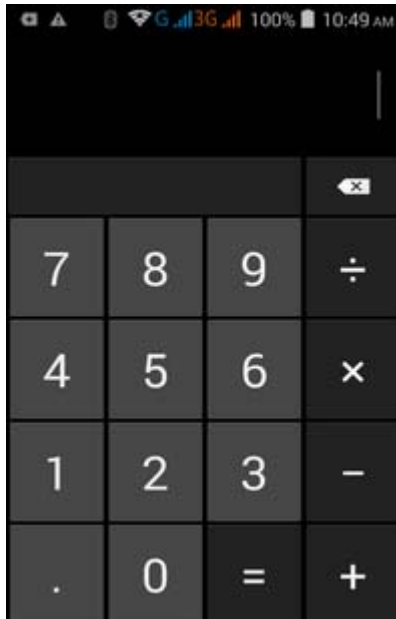


Pictuer 8.2

8.3 File Manager



 
File manager will copy, cut, delete, rename the documents or the folder in the TF card, it also will share the files, install apk etc.

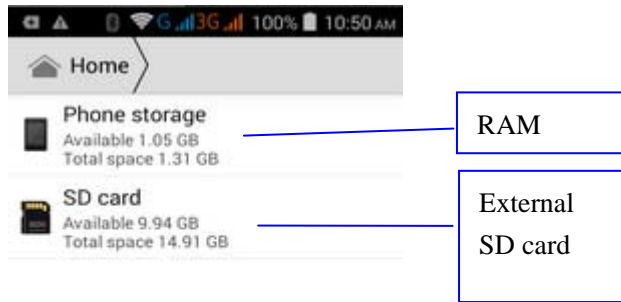


In the main menu or desktop, click the document manager icon **File Manager** to enter into documents manager.




Picture 8.3

 a、 Choose right top  icon to paste file, choose right top  icon to cut file Picture 8.4, choose right top  icon to enter into Picture 8.5

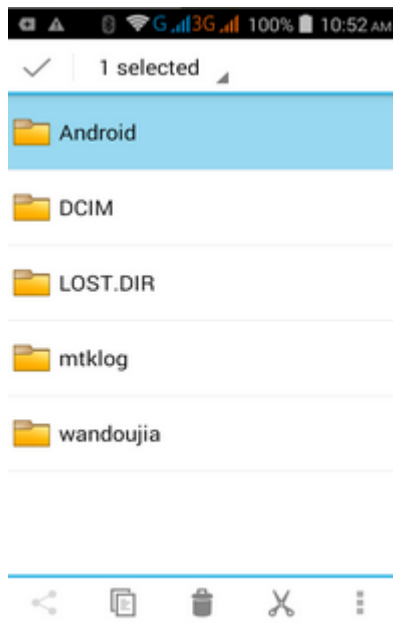


Picture 8.4

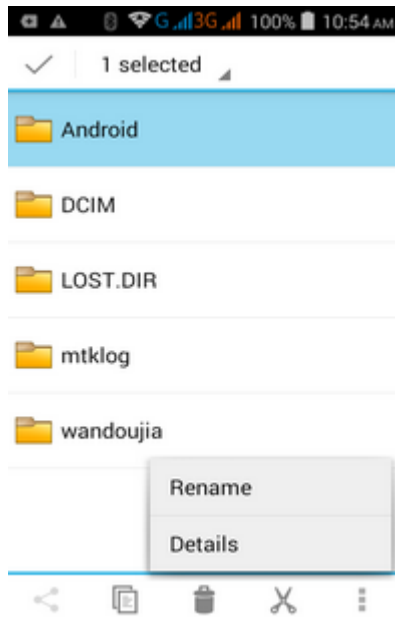 


Picture8.5

 b. Share file: choose any file, long press it, it will popup “share”, choose the share way you want in the list as Picture 8.6

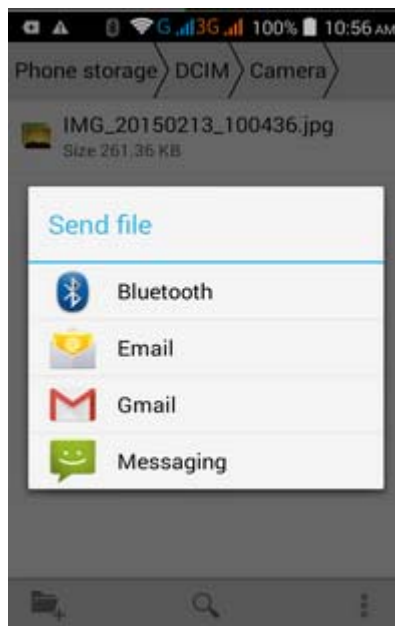





Picture 8.6

c. Install apk file: Choose the file suffixed .apk in the file manager, you can install the third part software as reminder.

 
d. Build new folder: Choose the menu you want to build the file, click  icon in right top, choose new folder, you can build new folder as reminder.

8.4 Sound Recorder



In the main interface or desktop, click recorder icon  to enter into record interface as picture8.7, click record key  to start record. Click Stop key  to stop recording. Click Play key  to play the recorded sound. The system will auto remind you to use or abandon this record, please choose it manually.


 
Play the record: choose the video player to play the recorded sound, choose the recorded sound in the source manager, and click it to play.

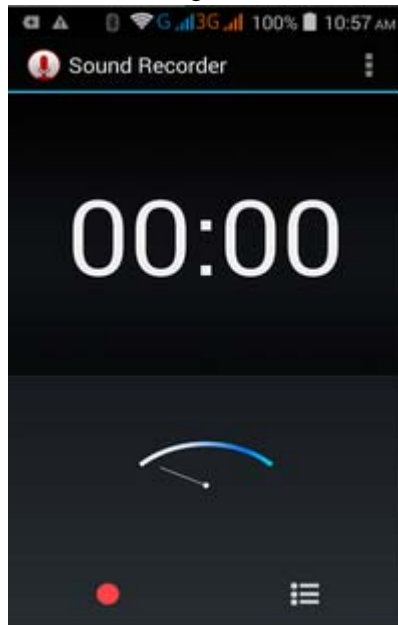


Picture 8.7

8.5 Calendar



 Click calendar icon  to into calendar interface as picture8.8. Click icon  to choose the type.

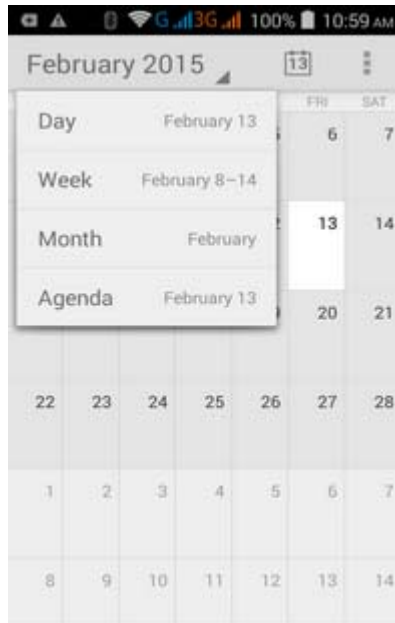

Picture 8.8

9 Installation of Procedures

9.1 Installation

Install the third party application procedure

1. Click “file manager” application procedure; choose the application procedure you need to install.
2. Hold the application procedure you need to install.
3. It popup install, click install apk.
4. Finish the installation as guide, it will operate.

Note: The third party procedure searched from internet to use on the system are all suffixed with .apk.

9.2 Uninstall

Uninstall application procedure

1. Click setting icon in main interface.
2. Click **manage application procedure**, list all the application procedures

insralled in the system.

3. Click the APK you want to uninstall, click **uninstall**.
4. Click **confirm** to finish uninstallation.

Skill: The procedure manager installed by system has many convinent methods to uninstal after opening procedure manager, click uninstall, it will list all the application procedures installed by system.

10 Troubles Shooting

1. The first startup of Phone is slow

After the Phone system upgraded, the first startup need to install the pre-installed application softwares, the lead time is around 2-3 minutes, the startup afterwards will be much quicker.

2. Phone can't connect Wi-Fi

- Make sure the wireless router of internet service can work in normal.
- Ensure the Phone and wireless router in certain distance, and no wall or other barrier between them.
- Ensure the user name and password both correct.

3. Phone feels hot

When many application procedures are used in meanwhile, or the brightness of screen open to the lightest or under charging, Phone may feel fever. It is normal.

4. Email can't be set or Registration of application procedure.

- Ensure your internet is well connected.
- Make sure your email setting way is correct.
- Keep your system time and local time consistent.

5. The system is abnormal and can't work.

When you install some third party application procedure, it may cause abnormal work, you can press **Reset key**(next to power port) to reset the system.

6. The webpage can't be opened

- Please keep the distance between from route to Phone in effective range.
- Please restart WIFI and try again.

7. Phone works terribly slow sometimes

It is normal phenomenon. Please turn off some application you don't need in advanced task management, or uninstall some third party application to release more system resource.

FCC RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types Mobile Phone (FCC ID: 2AG7M-G26A) has also been tested against this SAR limit. The highest reported SAR values for head, body-worn accessory, wireless router(hotspot) , and simultaneous transmission conditions are 0.462W/kg, 1.101W/kg , 1.339W/kg, and 1.434W/kg respectively. This device was tested for typical body-worn operations with the back of the handset kept 10mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 10mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.