

SPECIFICATION

Bluetooth Specifications: Bluetooth® version 4.1
Support profile: HSP, HFP, A2DP, AVCTP
Transmission distance: up to 10 m (This may vary based on environmental factors or the type of Bluetooth® device being used)
Built-in battery: Lithium Battery 2000mAh
USB Recharge voltage: 5V
Output power: 10W
Frequency Response: 150Hz – 1800Hz
Signal to Noise Ratio (SNR): >90dB

PACKING LIST


- Bluetooth® Speaker
- USB Charging Cable
- 3.5mm AUX cable
- User Manual
- Gift Box

Brookstone
Cinder Bluetooth® Speaker

Instruction Manual

Back Cover

GENERAL FUNCTIONS

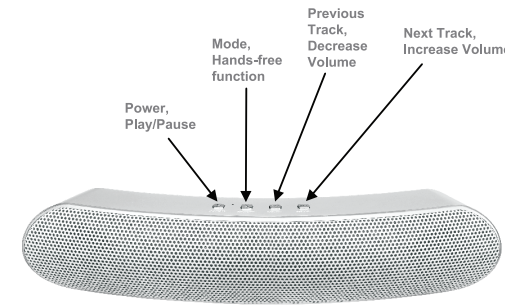

page 02

BLUETOOTH OPERATION

1. Please ensure that the Bluetooth function has been turned on in the settings of your Bluetooth enabled device.
2. Turn the speaker on by pressing and holding the Power button Ⓞ for several seconds. The indicator light will flash to detect Bluetooth enabled devices near you and will enter pairing mode. The indicator light will go off if no Bluetooth devices are detected within 5 minutes.
3. "BRKSTN SPKR" will appear on the Bluetooth device list, select "BRKSTN SPKR" to establish pairing. If instructed to enter a PIN code, please enter '0000'.
4. When you want to play audio from another Bluetooth device, disconnect the speaker from the original device and follow steps 1-3 to re-pair the speaker with a new Bluetooth enabled device.
5. Press the Power Button Ⓞ to play/pause audio. Press |<< once for previous track, press and hold |<< to lower the volume. Press >>| once for next track, press and hold >>| to increase the volume.

page 03

SPEAKERPHONE OPERATION

1. If you receive a call during Bluetooth mode, press the Ⓞ button to answer the call. Press the button again to end the call.
2. To reject a call during Bluetooth mode, press and hold the Ⓞ button.

AUX PLAYBACK OPERATION

1. Turn on the speaker.
2. Connect the speaker to a smartphone, audio device, or laptop with the 3.5mm AUX cable (included).
3. The volume, play/pause, and next/previous song button can only be adjusted on the device that is connected through the 3.5mm AUX cable.

CHARGING THE SPEAKER

1. When the battery is low, please charge via the included USB cable. The charging time is approximately 2 hours and provides up to 3-5 hours of continuous operation.
2. The LED indicator light will be red during charging and will turn off once it is fully charged.

page 04

WARNING

1. Do not disassemble, repair, or modify the speaker.
2. Do not place product in or near fire to avoid danger, as it uses a lithium battery.
3. Avoid storage at extreme temperatures, this can shorten the battery life and may affect the speaker.
4. Keep the speaker dry and do not store the speaker in damp areas to avoid damage to the speaker.
5. Avoid dropping the speaker as it may damage the speaker.

KIND REMINDER

1. To prolong the speaker's life span and to avoid hearing damage, please do not listen to music under high volume for long periods of time.
2. When an error occurs with the speaker, please turn off the speaker and restart it to troubleshoot.
3. When the speaker's power is low, the Bluetooth range may be affected. Please charge the speaker to avoid disruptions during use.

page 05

PROBLEM	TROUBLESHOOTING METHOD
Unable to pair the speaker with a mobile device	1. Inspect whether the speaker is searching for a Bluetooth enabled device to connect to. If not, restart the speaker. 2. Difficulty in searching and connecting to a desired device can be affected if multiple devices are equipped, turned on, and in range for Bluetooth connectivity. Please turn off or disable the Bluetooth function on the other devices. 3. The power of the battery is insufficient, please recharge the speaker.
The music stops from time to time	1. Inspect the distance between the speaker and the Bluetooth enabled device, it may exceed the Bluetooth transmission range. 2. Inspect if there is an obstacle between the speaker and the Bluetooth enabled device. 3. The power of the battery is insufficient, please recharge the speaker.

page 06

PROBLEM	TROUBLESHOOTING METHOD
The sound is low or distorted	1. Inspect the volume of the connected speaker or Bluetooth enabled device and adjust the volume as needed. 2. The power of the battery is insufficient, please recharge the speaker.
The Bluetooth indicator light remains OFF	1. The power of the battery is insufficient, please recharge the speaker. 2. Restart the speaker.

page 07

#70264B_Brookstone® Cinder Bluetooth® Speaker Instruction Manual

Please read the following clearly before you do the printing of all kind of our instruction sheets.

- 1) The folded size should be 3"W x 3"H.
- 2) Please exactly follow all the trim marks and fold marks.
- 3) Please exactly follow the page in proper order.(The page numbers do not need to print.)
- 4) The color of this kind instruction is : 1C(Cool Gray 10C) + 1C(Cool Gray 10C)
- 5) Use 90gsm gloss art paper for bulk production.
- 6) There are gradient colors inside this file.
- 7) 8PP Book Binding with saddle stitching.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.