


# User Manual

## BS-10

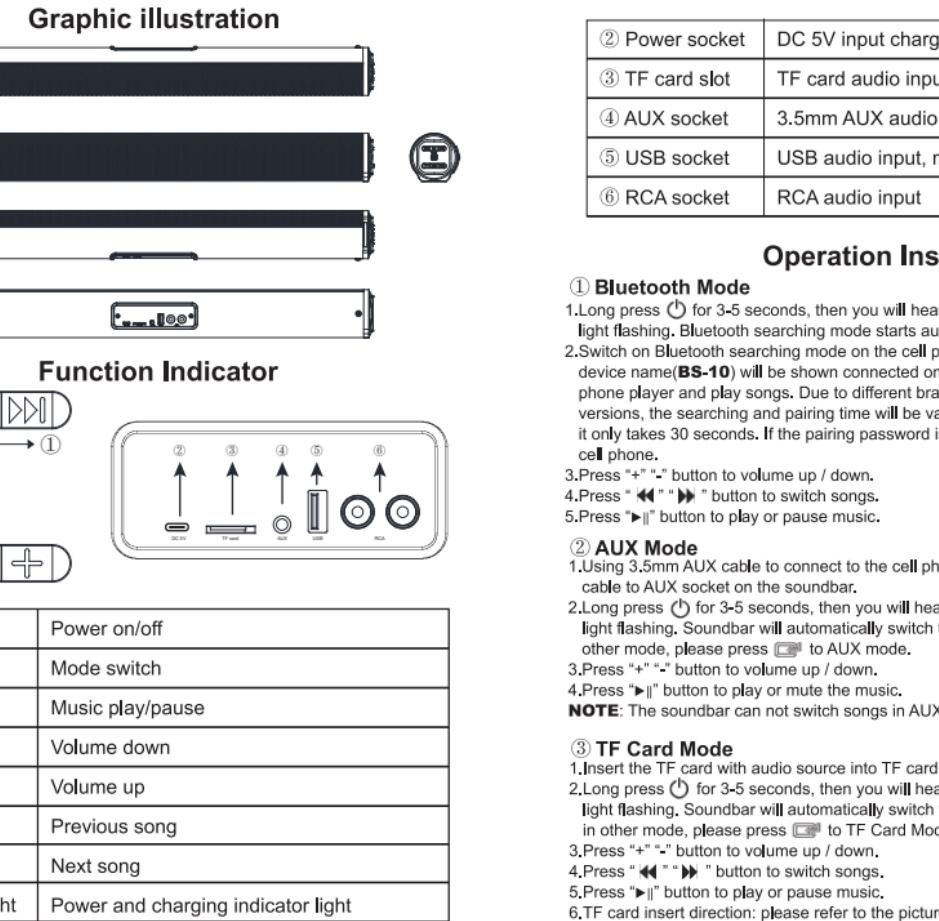

② Power socket	DC 5V input charging socket
③ TF card slot	TF card audio input, maximum support 32G
④ AUX socket	3.5mm AUX audio input
⑤ USB socket	USB audio input, maximum support 32G
⑥ RCA socket	RCA audio input

### Operation Instruction

#### ① Bluetooth Mode

- 1.Long press for 3-5 seconds, then you will hear the voice prompt with the indicator light flashing. Bluetooth searching mode starts automatically after power on.
- 2.Switch on Bluetooth searching mode on the cell phone. After pairing successfully, the device name(BS-10) will be shown connected on the cell phone, then you can open phone player and play songs. Due to different brands of mobile phone and Bluetooth versions, the searching and pairing time will be various. Under normal circumstances, it only takes 30 seconds. If the pairing password is needed, please type "0000" on the cell phone.
- 3.Press "+" "-" button to volume up / down.
- 4.Press "◀" "▶" button to switch songs.
- 5.Press "▶||" button to play or pause music.

#### ② AUX Mode

- 1.Insert 3.5mm AUX cable to connect to the cell phone / MP3 / PC, then connect the cable to AUX socket on the soundbar.
- 2.Long press for 3-5 seconds, then you will hear the voice prompt with the indicator light flashing. Soundbar will automatically switch to AUX Mode. If the soundbar is in other mode, please press to AUX mode.
- 3.Press "+" "-" button to volume up / down.
- 4.Press "▶||" button to play or mute the music.

#### NOTE:

The soundbar can not switch songs in AUX Mode.

#### ③ TF Card Mode

- 1.Insert the TF card with audio source into TF card slot.
- 2.Long press for 3-5 seconds, then you will hear the voice prompt with the indicator light flashing. Soundbar will automatically switch to TF Card Mode. If the soundbar is in other mode, please press to TF Card Mode.
- 3.Press "+" "-" button to volume up / down.
- 4.Press "◀" "▶" button to switch songs.
- 5.Press "▶||" button to play or pause music.
- 6.TF card insert direction: please refer to the picture .

#### ④ TV Mode

1.Using RCA cable to connect to the RCA audio output socket on the TV, then connect the cable to RCA socket on the soundbar.

2.Long press for 3-5 seconds, then you will hear the voice prompt with the indicator light flashing. Then press to TV Mode.

3.Press "+" "-" button to volume up / down.

4.Press "▶||" button to play or mute the music.

**NOTE:**

1) Make sure the TV has RCA audio output socket.

2) Make sure the RCA plug connect correctly to the TV RCA audio output socket.

3) If the TV has 3.5mm audio output socket, please refers to **AUX Mode** connect method.

4) The soundbar can not switch the TV channels and songs in AUX Mode or RCA Mode.

#### ⑤ FM Mode

- 1.Insert the charging cable into the charging port of the speaker as a radio antenna, and then press the mode switch button to switch to FM mode.
- 2.Long press for 3-5 seconds, then you will hear the voice prompt with the indicator light flashing. Then press to FM Radio Mode.
- 3.FM auto searching mode: long press "▶||" button to start searching. When the soundbar finished searching, it will automatically stop searching. Or you can short press "▶||" button to stop searching.
- 4.Press "+" "-" to volume up / down.
- 5.Press "◀" "▶" button to switch radios.
- 6.Press "▶||" button to mute or play the radios.

#### ⑥ USB Mode

1.Insert the USB drive with audio source into USB socket.

2.Long press for 3-5 seconds, then you will hear the voice prompt with the indicator light flashing. When the battery is full charged, the red indicator light will turn off.

Soundbar charging input voltage is 4.5V-5.5V, please do not exceed the safe voltage range, otherwise it will damage the soundbar.

#### ⑦ TWS Mode

1.Turn on soundbar ①&②, enter Bluetooth Mode. Long press for 3 seconds, then you will hear a prompt tone with indicator light flashing.

2.Two soundbars will start to connect to each other. After pairing successfully, Both indicator light will stay on.

3.Open the Bluetooth settings on your phone to connect the soundbar.

4.Two soundbars can be controlled simultaneously by remote control or buttons on soundbar.

**NOTE:**

1) TWS function can be only used on

Bluetooth Mode

and supports 2 devices connection.

2) If two soundbars cannot connect to each other for long time, please turn off two soundbars and repeat the instructions again.

#### ⑧ Remote Control

**NOTE:** 1) next/previous song button will not function in AUX input mode or RCA mode.

2) Power on/off button on remote control only perform soft-on function. Press once the speaker enter soft-off. Press again enter soft-start. Buttons on speaker has no function in soft-off mode, except long press the power on/off button.

3) Switch the EQ sound effects by pressing the EQ button:

① ordinary music

② rock music

③ pop music

④ classical music

⑤ jazz music

⑥ country music

Note: There is no EQ sound effect in RCA, AUX, and FM modes.

4) Only using the remote when the speaker is turned on.

5) The remote controls only match our corresponding speaker products.

6) Please take out the insulation sheet on the back of the remote control for the first time.

### Common problems and solving method

- 1.If the soundbar does not turn on, please charge the soundbar first.
- 2.Connecting for many times still unsuccessful?
  - (1) Check the soundbar whether is in Bluetooth searching mode.
  - (2) If there are too many Bluetooth receivers around, it may cause the difficulty on searching. Please turn off other Bluetooth receivers.
  - (3) Open Bluetooth settings on your phone, cancel pairing and disconnect. Please check the volume settings of your phone and adjust the volume.
  - (4) The volume of soundbar is too low or appear distortion? Please check the distance between your phone and the soundbar.
  - (5) Continuous appear when playing music? Please check the distance between your phone and the soundbar.
  - (6) The buttons have no effect to the soundbar? Please try to use the player on phone or other players.
  - (7) If the soundbar can't be controlled during using, please set the soundbar by appropriate tools. Hardware reset is hide inside the AUX socket.
- 3.When a low battery message appears, please connect the charge immediately to charge and reduce the playback volume to 5%. It can be used while charging.
- NOTE:**
  - 1) If connected to tablet, please refer to the phone connection method.
  - 2) Laptop connection: Due to having many laptop's Bluetooth version, the connecting method would be various. If fail to connect or play at the first time, please download the latest Bluetooth driver.
  - 3) When the soundbar is on and without operating in minutes, it will automatically turn off to save the power.



**FCC Caution.**

(1)§ 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

§ 15.21 Changes or modification warning

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

RF warning for Mobile device:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.