

BYTECH®
THE ART OF TECHNOLOGY

2.4
WIRELESS
TECHNOLOGY



Windows® and Mac® Compatible



WIRELESS OPTICAL MOUSE

4 BUTTONS

BY-MS-WS-134-AC

INCLUDED ITEMS:

- 1 (One) Optical Wireless Mouse
- 1 (One) USB Receiver
- 1 (One) User Manual

FEATURES

- Adjustable DPI: 800/1200/1600.
- 4 buttons with scroll wheel.
- No pairing required, Plug and Play via 2.4Ghz USB receiver.
- Auto power function, saves and prolongs battery life.

USB RECEIVER

- The USB receiver can be found stored in a slot adjacent to the battery bay under the battery bay door.
- Flip the mouse over and remove the battery bay door. You will see a smooth black rectangular object.
 - Remove it carefully by hooking a fingernail into the groove along the surface that faces the battery bay and lift it up slowly to free it.
 - Store the receiver in this slot when the mouse is not in use so that it doesn't get lost.

HOW TO USE

- Insert the USB receiver into your computer's USB port.
- Place 1 (One) X AA 1.5V Alkaline Battery (not included) into the battery compartment of the mouse.
- Your computer should recognize the mouse instantly. Be sure to check your computer's settings if it is not detected.
- Please remember to remove the USB receiver when you are not using the device.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Mouse: FCC ID:2AHN6-MSWS134

Dongle: FCC ID:2AHN6-DE8

TROUBLESHOOTING

- If device won't connect, try the following:
- Be sure the USB receiver is connected to your computer.
 - Be sure the USB receiver is not damaged.
 - Check your computer's input settings.
 - Try new battery in the mouse.
 - Restart your computer.

SPECIFICATIONS:

- Wireless optical mouse
- Adjustable DPI: 800/1200/1600
- 4 buttons with scroll wheel
- No pairing required, Plug and Play via USB receiver
- 2.4Ghz USB receiver
- USB receiver stores conveniently in battery compartment
- Supports Windows® 7-11 and Mac OS®

WARRANTY- 12 MONTH

Please visit our website Bytechintl.com/warranty

©2025 BYTECH NY INC.

Bytech™ is a registered trademark of Bytech NY INC.

*All Trademarks and copyrights are the property of the respective companies.

Windows is a registered trademark of Microsoft Inc.

*Photos are for illustration purposes only.

*Requires 1 (One) X AA 1.5V Alkaline Battery (Not Included).

BYTECH

Contact Info:
2585 West 13th Street,
Brooklyn, NY 11223

Bytechintl.com

© 2025 BYTECH NY INC.



Made in China

⚠ WARNING: TO AVOID BATTERY LEAKAGE

- 1) Be sure to insert the battery correctly, and always follow the toy/game and battery manufacturers' instructions.
- 2) Always remove a weak or dead battery from the product.
- 3) Remove the battery if the product is left unused for a long period of time.