

USER MANUAL



iwave®



WIRELESS
KARAOKE
TROLLEY
SPEAKER



Bluetooth®

MANUAL

CAUTION:

No user serviceable parts inside. Please return to the agents or a similar qualified service center for repair.

SAFETY INSTRUCTIONS

1. Before using, please carefully read the user manual. Retain for future reference.
2. All WARNINGS on the speaker and in the user manual should be adhered to.
3. Do not use the speaker near water.
4. For Ventilation Purposes:
 - ~ Do Not block any of the ventilation openings.
 - ~ Do Not install near any heat sources or fire.
 - ~ Do Not install in an airtight location.
5. Keep the cord and plugs in good order.
6. The speaker may be wiped down with a damp cloth once the unit has been switched off and the plug removed.
7. Unplug the speaker during lightning storms or when not in use for long periods of time.
8. Keep foreign objects and liquid from entering the unit to avoid a short circuit, fire and electrical accidents.
9. Keep the speaker in a dry location.
10. Refer all servicing to the agent or a similar qualified service center for repair.

1

MANUAL

SPECIFICATIONS:

AMP

Power Output -----1500Watt (P.M.P.O)

Impedance -----4ohms

Frequency Response-----45Hz-20 KHz

S/N Ratio-----93dB±3dB

OTHER ITEMS:

Electricity supply-----AC 120V-240V/ 60Hz-50 Hz

PACKING LIST:

Audio cable-----1 piece

Manual-----1 book

Adapter-----1 piece


2

MANUAL

MANUAL

MANUAL

FUNCTION OF CONTROL PANEL

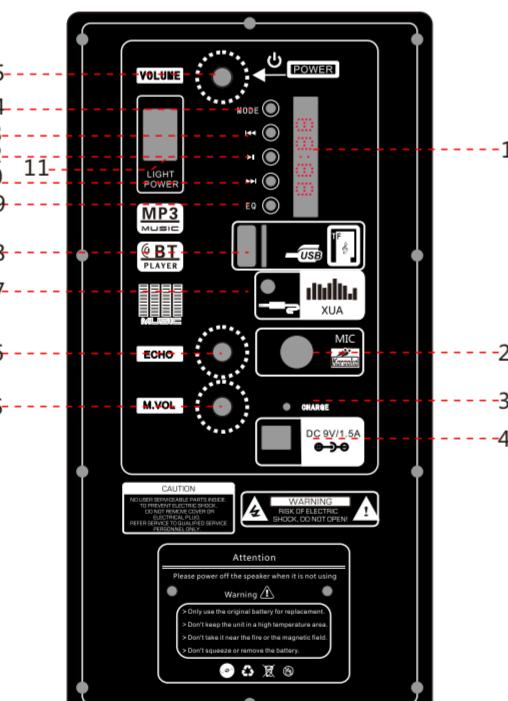

Function of Control Panel

1. Working status display window
2. Mic input jack
3. Charge indicator light
4. Electricity supply DC9V/1.5A
5. Mic volume adjustment
6. Mic echo adjustment
7. DVD/CD/MP3 input
8. USB/TF card connector
9. EQ mode
10. MP3 next song/ FM next frequency / Volume +
11. Light power ON/OFF.
12. MP3 pause or play / FM Auto scan frequency
13. MP3 last song/ FM last frequency / Volume -
14. AUX/USB/ TF/ FM/ BT selected
15. Power ON/OFF, Volume adjustment

3

FCC STATEMENT:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

4

Simple Troubleshooting:

Try the troubleshooting steps below if you are having problems while using your speaker. If problems still exist, please look for a qualified technician or contact our company. To prevent electric shock or expand the scope of the malfunction, do not repair by yourself.

Symptom	Possible Problem(s)	Solution
No function light & no sound	1. Plug is not well connected 2. Speaker power button is not turned on	Insert the plug into electrical outlet Turn on the button
Function light on but no sound	1. Cable is misconnected 2. Speaker is not connected or it is misconnected 3. Audio signal is not transmitted to speaker	Turn off the power, check the input jack to ensure proper audio signal is connected to relevant input jack Power off, then check and confirm the cable connection again Check all speakers to see if there is an audio signal output
		If the problem exists after checking related procedures above, please refer to the appointed service agent or professional technician to fix it. Do not attempt to open the cover, otherwise we assume no responsibility.

5