




# VOICE BROADCAST RC CAR INSTRUCTION

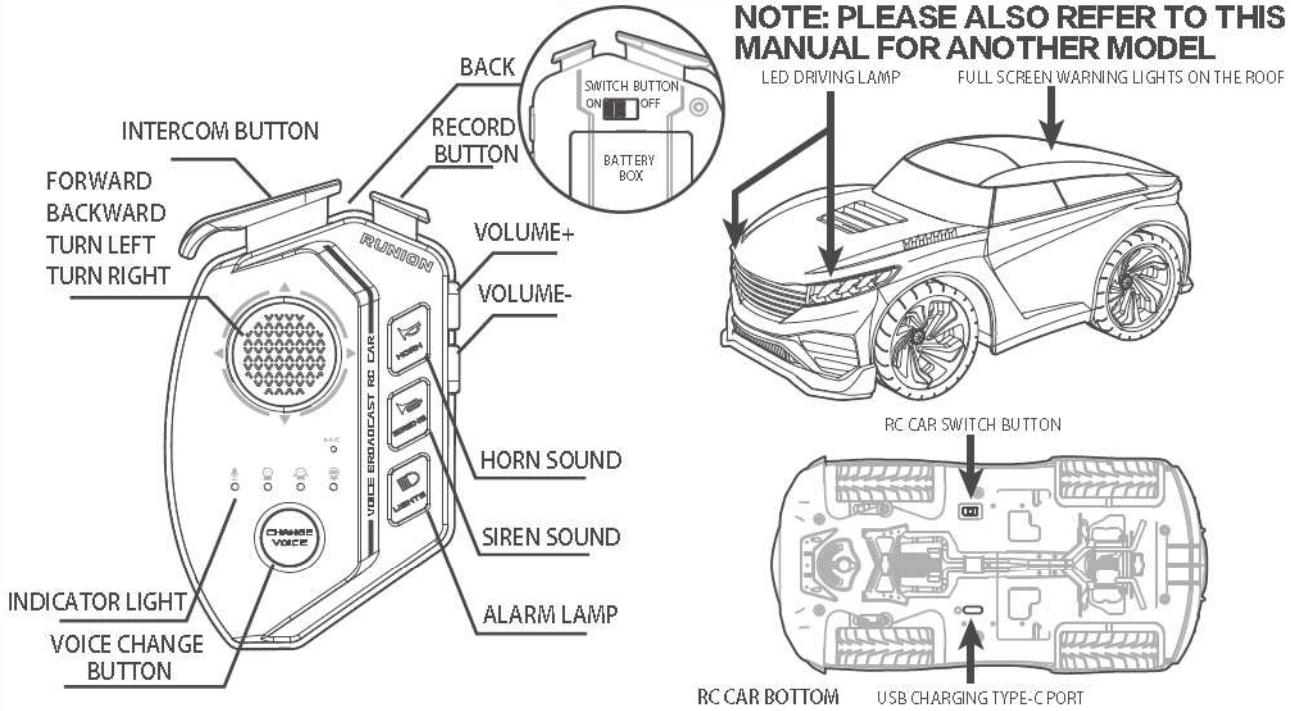

## STEP 1 HOW TO INSTALL BATTERIES

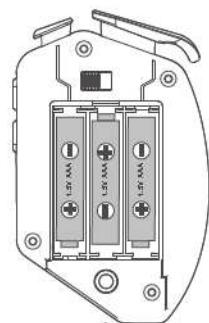


Press the lock button with a screwdriver and remove the battery cover. Loading 3\*AAA batteries according to the positive and negative directions in the picture.  
(Batteries not included in package)

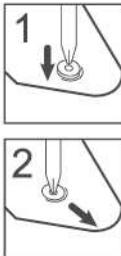


## STEP 2 HOW TO CHARGE

(The charging port is on the bottom of the car)

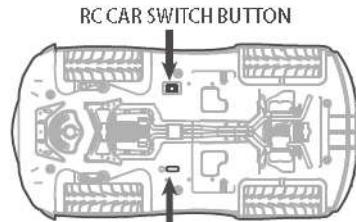


Move the car switch to the OFF side. Plug the USB cable into the computer, and plug the other part into the charging port on the car for charging.

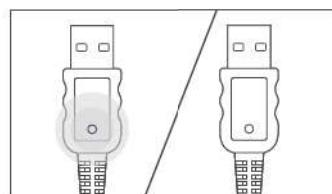


When the LED light on the USB plug keeps lighting up, the car is charging. When the light goes out, the charging is complete.

## STEP 3 HOW TO PLAY

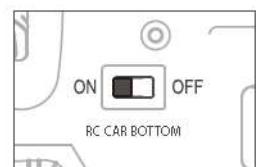

1 Move the car bottom switch to the ON side as shown.

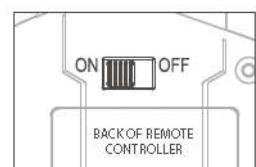

2 As shown on the picture, move the switch on the back of the remote controller to ON. After the sound of "bi", the car starting sound appeared, means the connection is successful. You can start playing with the RC car according to the instructions.


**NOTE: IF YOU STOP PLAYING, PLEASE MOVE THE SWITCH TO OFF AND REMOVE THE BATTERY.**

APPROXIMATE PLAYING TIME: 25-30 MINUTES


APPROXIMATE FULL SPEED CHARGING TIME: 60-80 MINUTES

REMEMBER: WAIT 10-15 MINUTES FOR THE BATTERY TO COOL DOWN BEFORE CHARGING IT.


#### STEP 4 HOW TO CONTROL THE RC CAR

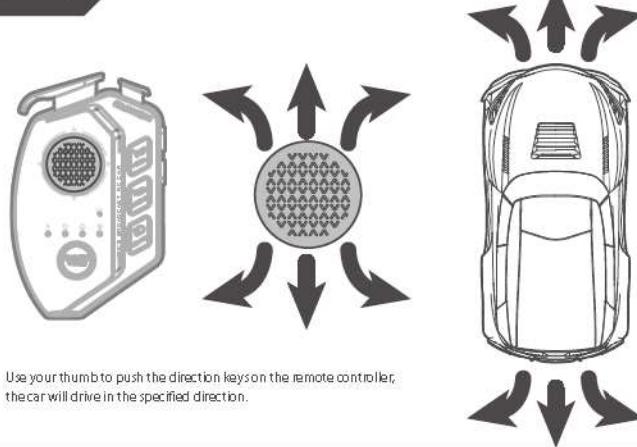

#### STEP 5 HOW TO MAKE THE CAR BROADCAST VOICE

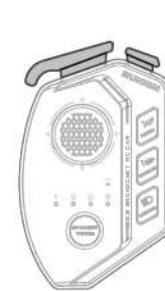


Press the intercom button PTT, the blue light starts to flash, start to speak (the voice is broadcasting in the RC car), then release the button to end the speech.

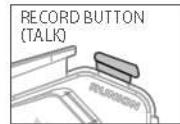

Press the record button TALK, 4 blue lights flash at the same time, start recording, then release the button to end recording. Press the button once to play the recording once.

#### STEP 6 CONTROL THE RC CAR TO MAKE A SIREN SOUND

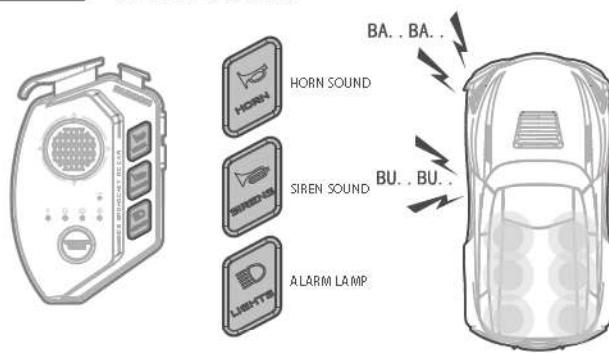

#### STEP 7 HOW TO CHANGE THE BROADCAST VOICE



Original voice      Boy voice      Girl voice      Robot voice



The indicator light will up according to the corresponding voice

VOICE CHANGE BUTTON

Press the voice change button each time, a voice will be change, total 4 voice changes.(Original voice, Boy voice, Girl voice, Robot voice )

#### WARNING FOR THE USE OF VOICE BROADCAST CAR

1. Read the instructions carefully before using remote control toys.
2. Check whether the parts are firm before starting the remote control toy, if loosening phenomenon is found, reinforce it in time to avoid accidents.
3. Remote control toys do not continuously use for too long, otherwise it is easy to cause the engine temperature too high.
4. It is best to use the remote control toys in the sparsely populated outdoors, otherwise it is likely to cause harm to the crowd.
5. Remote control toys had better not to bear load, otherwise it is easy to affect the stability of mechanical structure.
6. Do not disassemble remote control toys without permission.
7. After the use of remote control toys, clean up all kinds of dirt, dust in time. Do not flush with water when cleaning, you can use a semi-dry wet rag or alcohol cotton to clean it.
8. If there is damage on the remote control toys, it should be repaired by a professional after-sales or maintenance department.
9. The spare parts of remote control toy are not edible; children should use it under parental supervision.
10. Do not use remote control toys to do something unethical.

#### THE COMMON FAULT OF VOICE BROADCAST CAR

##### 1.No responding of remote control car

Check the batteries of remote controller and toy, try to replace, if it is still invalid, indicates that the remote controller or toy is out of order, need to go to the after-sales department to repair.

##### 2.Abnormal shaking of the remote control car

Check the wheel or chassis of the remote control car for abnormalities; under normal circumstances, mostly the wheels are deformed, just replace the wheels with new ones.

##### 3.The wheels of the remote control car can turn left and right, but cannot go forward or backward

Under normal circumstances, it indicates that the engine is damaged; just replace the engine with new one. If it is a circuit board problem, it is not recommended to solve it by yourself, and it needs to be repaired by after-sales department.

## FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

### Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement in portable exposure condition without restriction.