

BLUETOOTH SPEAKER LANDSCAPE INSTRUCTION

PRODUCT SPECIFICATION:

Bluetooth version: Bluetooth 4.1

The suggest distance between the master and the bluetooth device is within 15FT.

The suggest distance between the master and the satellite is within 60FT.

Battery: 3.7V 2200mA

Normal volume playing time: 6 hours

Power supply: AC/DC 8-12V

Power: 8W

Nominal impedance: 4 ohms

2.5 inch woofer

Frequency Response: 1 Frequency Response: 130~18KHZ

Sensitivity: 83±3 dB

Bluetooth Mode: A2DP

OPERATING PROCEDURES:

To set up the master and the satellite before power on.

This is integrated master and satellite bluetooth speaker, the speaker bought from regardless of master and satellite, you can set up one of them as the master (To dial the switch key to position M), and the rest as satellite (To dial the switch key to position S)

The master

1. To dial the switch key to position M before turn on the speaker, the suggest distance between the master and player device is within 15FT.
2. Press long ON/OFF button for 3S, there is a voice DoReMi, the blue light flashing.
3. Now start to pairing with player device (Bluetooth name: LV speaker), after connect with the play device, the Blue light stop flashing.

The satellite

1. To dial the switch key to position S before turn on the speaker, the suggest distance between the master and the satellite is within 60FT.
2. Press long ON/OFF button for 2S, there is a voice DI, at this time, the Blue light is off, the Green light flashing, it means not pairing yet.

The master and the satellite pairing

1. To keep the master and the satellite ON.
2. Press long the satellite's **PAIR** button for 2S, there is a voice DI, at this time, the Green light flashing fast.
3. Press long the master's **PAIR** button for 3S-5S, at this time the master's Green light flashing fast. After pairing succeeded, the satellite has a voice DI, the Green light of the master and the satellite stay on, it means pairing completed. The pairing action must be completed within 30S, if not, please repeat STEP 2 and STEP 3.

Power off:

The master: Press long ON/OFF button for 3S, and there is a voice MiReDo.

The satellite: Press long ON/OFF button for 2S, there is a voice DiDi.

(It is not recommended to switch on and off manually, When connected to 12V, which will causes connection failed with the master)

Charge:

Indicator: Charging: RED

Charged: GREEN


Q&A

Q: As a event of power consumption of the satellite, no charge in time and shutdown, how to turn on automaticly?

A: It will power on automaticly when connect to the power

Q: How it power off when low battery?

A: When the power of the master and the satellite is Power is less than 20% will be directly off.

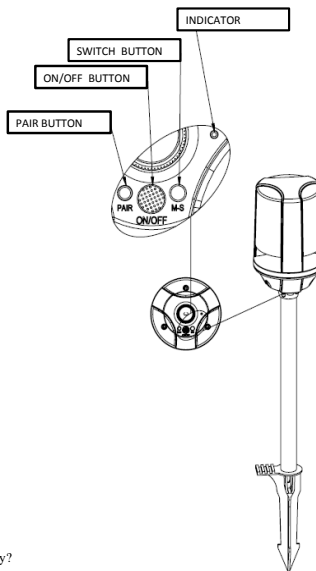

FCC

Caution: The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.