


## BCM External View

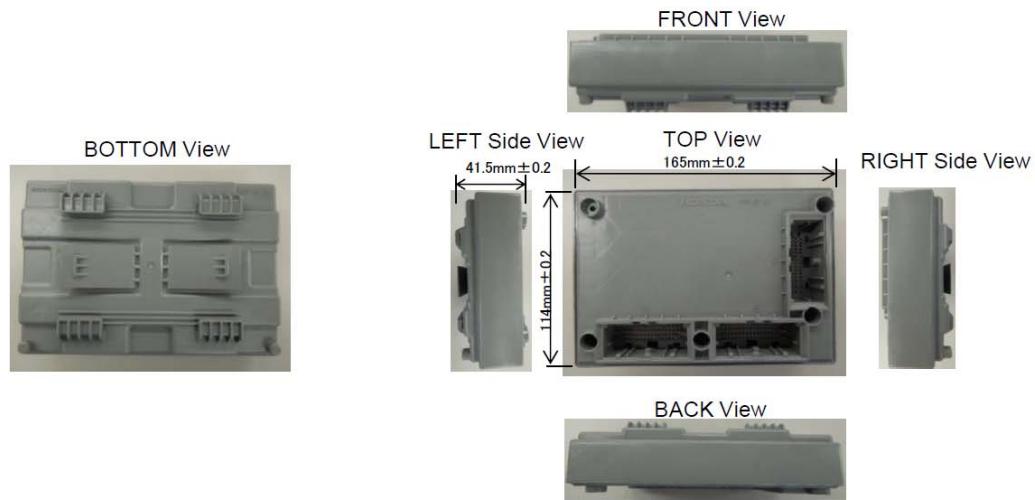

## Configuration Diagram




LF Antenna View  
(1)

External View



inner View

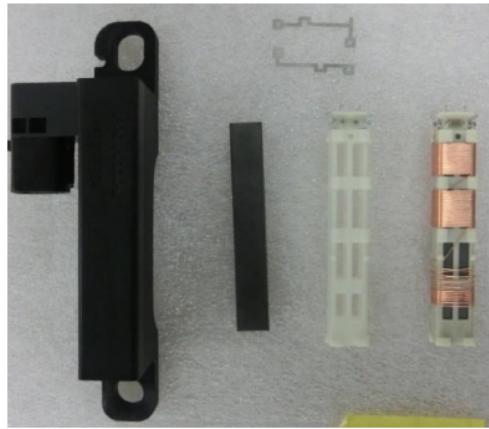

(2)

External View



inner View



Start Button View

Side View



FRONT View

