



User Manual

Designed + care by Joyc™
www.joyc.play

Thank you for Choosing Joyc

Caution

- 1 Please charge this device with a 5V/1A DC output mobile phone charger. Do not use a charger with an incorrect voltage to charge this device, as it may burn out due to voltage mismatch!
- 2 Before using this product, please read the instruction manual carefully and keep it properly for reference.

Product Features

- Phone Dock
- 2x Wireless Microphones
- Multi-Color LED Ring Light
- Selectable Bluetooth Music
- 8h Battery
- Powerful 360° Sound

Product Parameters


Rated input :DC5V 1A SNR :≥90db
Product size: 243*145*341mm
Frequency response range: 80Hz-20KHz
Bluetooth distance: 8-12m(no obstacles)



Speaker Accesories

- Bluetooth speaker 1 pcs
- Instruction manual 1pcs
- USB charging cable
- Wireless microphone 2pcs

Control Panel

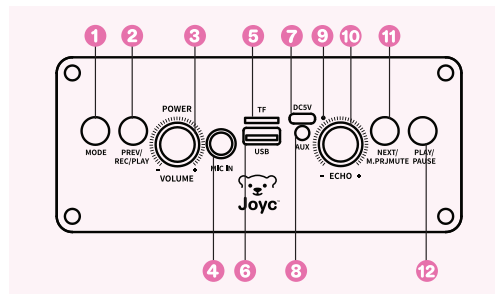

- | | | |
|-------------------|---------|-------------------|
| 1 MODE | 5 TF | 9 LED |
| 2 PREV / REC/PLAY | 6 USB | 10 ECHO |
| 3 POWER / VOLUME | 7 DC 5V | 11 NEXT/M.PRJMUTE |
| 4 MIC IN | 8 AUX | 12 PLAY / PAUSE |

Mode

Press briefly to switch between Bluetooth/USB flash drive /TF card /AUX/FM mode; Long press the mode to switch/ turn off the light effect(5 lighting effects).

Prev / Rec / Play:

Press the previous track briefly; Long press to record, and then long press again to play the recording (the recording function requires turning on the microphone and inserting a USB flash drive /TF card for use).

Power / Volume:

When the device is off, rotate the switch The prompt sound indicates that it is on. When the device is on, rotate the switch to the far left to indicate that it is off, When playing music Rotate this knob to adjust the volume of the machine's sound.

Mic In:

It can be connected to a 6.5mm audio wired microphone.

TF:

Insert a TF card to play music files, with a maximum support capacity of 32G TF.

USB:

Insert a USB flash drive to play music files, with a maximum supported capacity of 32G.

DC 5V:

Connect the charger to charge the machine.

AUX:

A 3.5MM audio cable can be inserted to connect an external audio source for amplification. (The AUX mode does not support microphones)

ECHO:

When using the microphone, rotate the knob, to adjust the reverb effect.

LED:

The red indicator light is long on when charging, and the full light is off; After starting, the indicator light flashes blue; After the Bluetooth connection is successful, the light stops blinking and the blue light keepson;When playing music, the blue light flashes slowly.



Next / M.PRJ Mute:

Press the next track briefly; Long press to clear the original sound.

Play / Pause:

Pause and resume the currently playing.

Function Operation (Bluetooth Connection)



After the speaker is turned on, if no music medium is connected, the machine will default to Bluetooth mode and be accompanied by a prompt sound.

At this point, turn on your phone and enable the Bluetooth mode. in the "Available Devices" section of your phone, find "Sing Together Karaoke", select this Bluetooth name and click to connect and pair.



Function Operation (Music Playing)



When the TF card or USB flash drive is inserted, the machine automatically switches to the music mode.

Pressing the pause/Play button can pause or play the currently playing content.

Press the previous song or the next song to switch the music.

Press the mode key briefly to switch functions such as Bluetooth/USB flash drive /TF card /AUX/ radio.

Function Operation (Audio Capture and playback)



Press the mode key to switch to the radio.

Long press the play button to automatically search for channels. After searching, it will be automatically saved.

Press the previous or the next to switch radio stations.

Function Operation (Audio Input)



Press the mode key to switch to audio input;

Insert the audio into the AUX and connect the other end to the headphone jack of your mobile phone or computer.

Pressing the pause/play button can pause/play the music. (The sounds of mobile phones or computers will not pause)

Function Operation (Recording Operation)



Turn on the microphone and long press the recording/play button to switch to recording and start recording (the recording function requires the insertion of a USB flash drive /TF card for use).

Press and hold the recording/Play button again to exit the recording and the recording file will play automatically.

The audio files are automatically saved to a TF or USB flash drive.

Microphone button operation instructions:



Long press:

Power on/off

Short press:

Switch the

microphone

volume and

reverb adjustment



Short press:

Microphone volume +

Long press:

Next song



Short press:

Microphone volume -

Long press:

Previous song



Short press:

Switch the magic sound effect

Long press:

Eliminate the original sound

Matters needing attention:

Trouble shoot:

If there is whistling during indoor singing, lower the volume to solve it.

Charge the battery at least once every 2 months, if not charging for a long time, the battery will enter protective state.

After the battery enters the protection state, please continue charging for 24 hours. If it still cannot be turned on, please contact after-sales to replace the battery.

Warn!

- a. Do not expose the product to rain or wet environment;
- b. Do not drop, to avoid product damage due to fall;
- c. Please use the rated voltage of the speaker to charge;

Note:

If the battery is not replaced properly, there is a risk of explosion, only the same type or Equivalent type of battery to replace;

The battery shall not be exposed to warnings such as sunlight, fire or similar overheating environment.

Designed + care by Joyc™
www.joyc.play