


WARNING

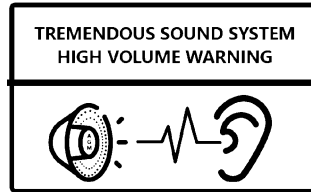

This device is equipped with a tremendous sound system to provide you fantastic listening pleasures. Due to the intensity of high dB levels, hearing protection is advised.

The speaker at high volume may damage your hearing, vibrate your chest and cause your heart to skip a beat. Tune the volume up gradually, and enjoy the music! (In Audio menu, press NAVI up and NAVI down keys to tune the volume)

*For some certain versions, M6 is featured with Dynamic LED circle, go to Settings menu and choose the colorful Dynamic LED modes.



Built to Endure

NOTICE

Features of the product and its accessories described herein rely on the software, phone internal memory and local networks, and may not be activated or may be limited by local network operators or service providers. Therefore, the descriptions herein may not exactly match the purchased product or its accessories.

The manufacturer reserves the rights to change or modify any information or specifications contained in this manual without prior notice or obligation.

The manufacturer is not responsible for the legitimacy or quality of any products that you may upload or download through this device including but not limited to text, images, music, movies, and non-integral software.

Any consequences arising from the usage of the preceding products on this device is the responsibility of the user.



1

2



*Device photos may differ in colors or models on M6/M6 SE/M6 PRO

WHAT'S IN THE BOX

- Device
 - Battery
 - USB cable
 - Quick start guide
- *Contents may vary for different versions or areas.

FUNCTIONS DESCRIPTION

- 1, RECEIVER**
Waterproof receiver for receiving calls. Do not touch with hard materials.
- 2, DISPLAY SCREEN**
- 3, TORCH KEY**
Press to turn on/off LED torch on the top.
- 4, LEFT SOFT KEY**
This button corresponds to options shown at the bottom of the screen left. The function of the button will change depending on the menu.
- 5, OK KEY**
Press once to make a selection.

3

- 6, CALL/ANSWER KEY**
Press to make a call or answer a call.
- 7, KEYPAD**
Use to input numbers and letters.
- 8, KEYBOARD UNLOCK/***
When the screen is woken up, press LEFT SOFT KEY and KEYBOARD UNLOCK to unlock the phone.
- 9, MIC**
Waterproof microphone for making calls and voice recording. Do not touch with hard materials.
- 10, LED TORCH**
High brightness top LED torch.
- 11, USB PORT**
USB Type-C I/O port. Close the rubber cover before touching water.
- 12, CHARGING SPOTS**
Desk top charger contact spots.
- 13, RIGHT SOFT KEY**
This button corresponds to options shown at the bottom of the screen right. The function of the button will change depending on the menu.
- 14, NAVI-KEYS**
In the home page, press to enter menus. In the menu page, press to move directions.
- 15, POWER/BACK/ HANGUP KEY**
Press and hold to turn on the device. Press and hold to open the Power off options (Power off / Restart) when the device is on.
- 16, RING/MUTE/VIBRATE MODE#**
Press and hold # key to change modes of RING, MUTE and VIBRATE
- 17, LOUDSPEAKER**
Waterproof speaker. May be adjusted to a comfortable volume. The speaker volume may become lower after immersion in water but will recover once dry.

4

18, DYNAMIC LED CIRCLE*

The color LED will light when playing music or receiving calls. Enter "Settings" menu to change the Dynamic LED circle modes. * Variant dependent. Some version devices may not have this function.

19, CAMERA

Camera does not support a flash light.

20, OUTER BATTERY DOOR

Outer battery door does not prevent water ingress. Press and pull down to open the outer battery door. Press and push up to close the outer battery door.

21, INNER BATTERY DOOR

Inner battery door is designed to prevent water ingress. Install and open according to graphic notes. Open the inner battery door from right bottom corner. Align the six ridges with the slot and close the inner battery door tightly.

22, BATTERY

The battery is removable.

23, Micro SD CARD TRAY

Open the micro SD card tray and install SD card (contacts face down). Please note that micro SD cards are not supplied with the device.

24, SIM TRAY 2

Align Micro SIM according to the note on metal (contacts face down). Only one SIM will deliver 4G service when two SIMs are inserted

25, SIM TRAY 1

Align Micro SIM according to the note on metal (contacts face down). Only one SIM will deliver 4G service when two SIMs are inserted.

5

26, BATTERY CONNECTOR PINS

Align battery contacts with the battery connector pins to insert the battery..

GETTING STARTED

WATERPROOF WARNING:
AGM M6 is IP68 certified. Battery doors and USB port cover must be completely closed to prevent water damage

INSTALLING A MICRO SIM CARD OR MICRO SD CARD

1. Place your device on a flat, clean surface with the display facing downwards.
2. Press and pull down to open the outer battery door
3. Open the inner battery door from right bottom corner
4. Take out the battery from top and remove the insulation tape (if have) from the battery contacts
5. Align Micro SIM according to the graphic note and use your fingertip to place the Micro SIM card in the SIM 1/ SIM 2 tray with gold pins facing downwards.
7. In case A MEMORY CARD need to install, please Open the micro SD card tray by slide the metal cover in the direction of the 'Open' arrow (which you'll find stamped on the metal tray) and lift the unhinged edge to open. Install the microSD card (contacts face down), finally close the metal cover and slide in the direction of the 'Lock' arrow, to secure in the closed position.
8. Reinsert the battery, inner battery door and outer battery door.

6

NOTE:

Ensure the SIM card is aligned correctly in the SIM tray before inserting.

- SINGLE SIM DEVICE: Supports 1x SIM card and 1x microSD card.
- DUAL SIM DEVICE: Supports 2x SIM card and 1x microSD card.

When 2 SIM cards are in use, the primary SIM card supports 4G, 3G and 2G connections, the secondary SIM card supports 2G connections only

CHARGING THE BATTERY

Before using your device for the first time you will need to charge the battery.

1. Remove the insulation tape (if have) from the battery contacts.
2. Connect the USB power cable to the charging power adapter.

AGM M6 is an Eco-friendly mobile device, which does not come along with a power adapter in the box in editions of some areas.

AGM M6 supports CE/CB/FCC/CCC/EAC or equivalent certified chargers. The recommended charger output is 5V/1A or 5V/2A. Uncertified equipment may cause damage to the device or cause batteries to explode.

3. Open the USB Type-C port cover and connect the USB power cable to the port.

Be careful not to use excessive force when plugging the cable. Any damage caused by attempting to insert the connector incorrectly is not covered by the warranty.

4. Plug the charger into an AC mains socket.

5. When charging is complete, remove the cable from the device, then unplug the power adapter from the mains socket. Close the USB port cover on the device.

6. AGM M6 supports cradle charger, which need purchase the charger separately.

7

RESET TO FACTORY DEFAULT

Reset code is 1234

WARNING

At full volume, extended use of the mobile audio player may damage the user's hearing.

DISPOSAL AND RECYCLING INFORMATION

This symbol on the device (and any included batteries) indicates that they should not be disposed of as normal household garbage. Do not dispose of the device or batteries as unsorted municipal waste. The device (and any batteries) should be handed over to a certified collection point for recycling or proper disposal at the end of their life.

COMPLIANCE

This device complies with the essential requirements and other provisions contained in Directive 2014/53/EU.

Copyright © AGM Group Limited 2021. All rights reserved.

THIS DOCUMENT IS FOR INFORMATION PURPOSES ONLY, AND DOES NOT CONSTITUTE ANY KIND OF WARRANTY.

8

FCC RF EXPOSURE INFORMATION:

WARNING!! Read this information before using your phone

In August 1986 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

BODY-WORN OPERATION:

This device was tested for typical body-worn operations with the back/front of the phone kept 0.5cm from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.5cm must be maintained between the user's body and the back/front of the phone, including the antenna. Third-party belt-clips, holsters and similar accessories containing metallic components shall not be used. Body-worn accessories that cannot maintain 0.5cm separation distance between the user's body and the back/front of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

For more information about RF exposure, please visit the FCC website at www.fcc.gov

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August, 1996, the Federal Communications Commission (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

<ANSI C95.1> (1992) / <NCRP Report 86> (1986) / <ICNIRP> (1999)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). Nevertheless, we recommend that you use a hands-free kit with your phone (such as an earpiece or headset) to avoid potential exposure to RF energy. The design of your phone complies with the FCC guidelines (and those standards).

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

NORMAL POSITION:

Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

RF Exposure Information:

This product is in compliance to FCC RF Exposure requirements and refers to FCC website <https://apps.fcc.gov/oetcf/eas/reports/GenericSearch.cfm> search for FCC ID: 2AL95-M6 to gain further information include SAR Values.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.