

SIZE: 71x78mm



**VIVITAR®**  
WIRELESS KARAOKE  
MICROPHONE

**User Manual**  
TEK001

**Features**

- Built-in microphone
- Built-in speaker
- LEDs indicator
- Built-in Lithium rechargeable battery
- TF/micro SD card slot
- Micro-USB charging cable

**Contents**

- Wireless Microphone
- Charging Cable
- 1 Year Warranty
- User Manual

**Controls and Indicators**



The diagram shows the following controls and indicators on the microphone: Power, Scan, Previous Track, Next Track, MIC VOL +, MIC VOL -, MUSIC VOL +, REC, MUSIC VOL -, REMIX +, REMIX -, USB Port, Micro USB Port, AUX out, Micro SD Card Slot.

**Charging the Microphone**


- To charge the microphone, attach the small end of the micro-USB cable to the Micro USB port on the underside of the microphone.
- Attach the other end to the USB port on a computer, or a USB charging adapter.
- The RED light will be ON when charging, The RED light will be OFF when Full.

**Pairing the Microphone**

1. Long press the **Power** button. A tone will be heard and the LED indicator will flash **BLUE**.
2. Set your mobile device to search for Bluetooth devices. When your mobile device finds the microphone, select **Karaoke MIC** from the list of found devices.
3. After a successful pairing, a tone will be heard, the LED indicator will stay **Blue**

Note: If a previously paired device is in range when the microphone is turned on, the microphone will connect to it automatically.

**On an iOS or Android Device**  
Go to **SETTING>BLUETOOTH**  
(Make sure Bluetooth is turned ON)

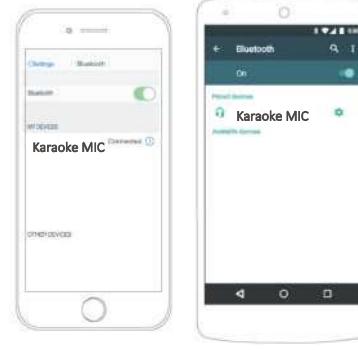

**Using the Microphone**

**Power on/off and change mode**  
Long press the **Power button** for 2-3 seconds to turn the microphone ON.  
Long press the **Power button** for 2-3 seconds again to turn the microphone OFF.  
Press to change mode between TF, USB, FM, AUX, Bluetooth mode

**Adjusting Volume**  
Raise the **MICVOL** slider to increase microphone volume. Lower the slider to decrease.  
Press the **MUSIC VOL+** to increase speaker volume, and press the **MUSIC VOL-** to decrease.

**Adjusting REMIX**  
Raise the **REMIX** slider to increase REMIX level from the microphone.  
Lower the slider to decrease.

**Playing Music**  
To enjoy music wirelessly on your microphone, make sure you are paired to a Bluetooth-enabled device. Once paired, you can control media playback and volume adjustment with the controls on your paired device.

**Magic Sound**  
Short press the **REC** button to eliminate the original sound.  
Short press the **REC** button again to recover the original sound.  
Long press the **REC** button to change the Magic sound;  
there are total 4 magic sounds to choose, 5 voice setting

**FM function**  
Press the power button once to switch the device from Bluetooth mode to FM mode. Press the scan button to automatically search for radio stations. Press PREV or NEXT button to switch between channels.  
Remark: It is recommended to use the FM function outdoors or in open spaces. To improve signal strength, plug the small end of the micro USB cable into the charging port of the microphone.

**Specifications**

- Support TF and Micro SD Card, support MP3;Max expansion: 32 GB
- Input: DC5V
- Bluetooth Version: V5.4
- Frequency Range: 100Hz-10KHz
- Wireless Freq: 2404-2480MHz
- Dimensions: 230\*77mm
- Weight: 235g
- Distortion: <3%
- Battery Capacity: 600mAh
- Material: ABS+Metal
- Charging Time: 2 hours
- Playing Time: around 2 hours
- Transmission Range: approx. 10m

**Vivitar One Year Warranty**  
This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

**What Is Not Covered by Warranty**  
Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

**To Obtain Warranty Service and Troubleshooting Information:**  
Call 1-800-592-9541 or visit our website at [www.vivitar.com](http://www.vivitar.com).

To receive warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepair.

**Vivitar One Year Warranty (continued)**  
NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR, REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR, ITS MANUFACTURERS, OR SAKAR INT. BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT, EXCEPT AS STATED HEREIN. NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies. This product is manufactured, distributed and sold by SAKAR International, Inc. All other trademarks are the property of the respective owner, who has not sponsored, endorsed or approved this product.



## FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

### Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement in portable exposure condition without restriction.