






INSTRUCTION MANUAL

FOR RECHARGEABLE SPEAKER SERIES

DEAR CUSTOMER

In order to achieve the best performance of your product,
please read this instruction manual carefully before using,
and keep it for future reference


In order to achieve the best performance with your product please read this instruction manual carefully before using, and keep it in a safe place for future reference.

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN or DISMANTLE	
<p>Caution: To reduce the risk of electric shock do not open this device, there are no serviceable parts for customers. Please refer any maintenance or repair to qualified authorised repair personnel.</p>		
	<p>Warning Risk of Electric Shock: DO NOT open or dismantle speaker yourself. Doing so may cause damage to you, the speaker and other property and will void the warranty.</p>	

NOTE

This unit may be subject to changes in specifications, characteristics and/or operation without prior notice to the end-user, in order to continue improving and developing its technology.

REMOTE CONTROL INSTRUCTION

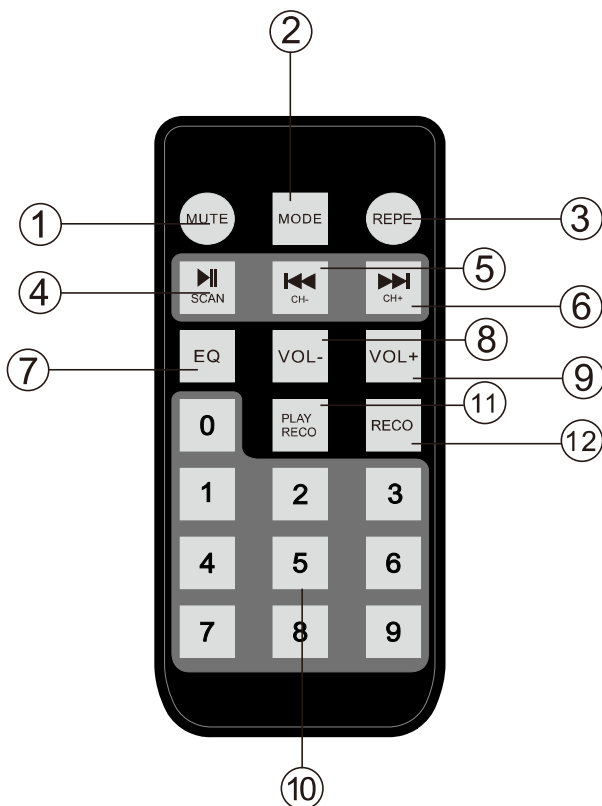






1. Mute
2. Mode
3. Repeat
4. Scan(Play/Pause)
5. Previous
6. Next
7. EQ(Equalizer)
8. Volume Turn Down
9. Volume Turn Up
10. Number Of Tracks
11. Play/Record
12. Record

Diagram of the front panel of the car stereo with numbered callouts 1 through 17:

- 1: USB port
- 2: TF card slot
- 3: MIC (Microphone) button
- 4: PRESET buttons (1-6)
- 5: FAVORITE button
- 6: NEXT button
- 7: REVERSE/PAUSE button
- 8: DC 9V input
- 9: GMMIC INPUT
- 10: OFF/ON power switch
- 11: VOLUME knob
- 12: TREBLE knob
- 13: BASS knob
- 14: MICECHO knob
- 15: MIC VOL knob
- 16: DC12V INPUT
- 17: Power indicator light

- 1: USB /TF Port
- 2: Mode
- 3: Previous
- 4: Play/Pause
- 5: Next
- 6: Microphone Priority
- 7: Line Input
- 8: DC 9V Input
- 9: Microphone And Guitar Input
- 10: Power Switch
- 11: Volume
- 12: Treble
- 13: Bass
- 14: Echo
- 15: Microphone Volume
- 16: DC 12V Input
- 17: REC/REPLAY

Operating Instructions:

1. **Connect with Sound Source:** To play music, connect the device with sound source first, insert the terminal of the audio cable into AUX jacks, the other terminal connected with sound source device.
PLAY: While playing with AC/DC adapter, place the POWER button in the ON position, make sure the power is connected properly; While playing with DC 7.4V built-in battery, place the POWER switch in the ON position, and make sure AC power is disconnected. Adjust the volume knobs according to your preference.
2. **KARAOKE MODE:** Plug the MIC into the MIC input port first, move the switch on the MIC to the on position, the unit is ready to be used in karaoke mode. The best distance between the device and the wireless microphone is 10 meters. To avoid feedback keep the microphone at least 3 meters away from the device.
3. **CHARGE:** To charge your device, connect the supplied adaptor into the unit and outlet then place the power button in the OFF position.
4. **FM Radio Tuning**
To use the FM radio, repeatedly press MODE on the MP3 player until you select this mode.
If you want search and program stations, press the play button once on the speaker box. When finished, use  or  to go to the preset stations.
5. **Bluetooth connection**
 - ① To connect the baffle with a Bluetooth mobile, repeatedly press MODE on the MP3 player until words blink Blue blinking.
 - ② Put your phone or device to use in Bluetooth device search mode. (For more information, see the instructions in your phone).
 - ③ When the telephone or device to be used finds the Bluetooth, confirm the connection.
The message "blue" is displayed steadily.
 - ④ To start playback, press . Press  or  to go to the next or previous audio file

GUIDELINES FOR BUILT-IN BATTERY

1. Before using your Device the first time, please charge the device for at least 4–6 hours.
2. If battery power level is low during music play, Low battery indicator light will illuminate, indicating that the unit should be charged immediately. While unit is being charged, green indicator light will blink, once the indicator light stays on, charging is complete and device may be used in battery mode.
3. When battery level is low it is recommended that you charge the device within 24 hours, doing so will prolong the life of the built-in rechargeable battery and prevent the device from requiring a longer charge period before the next use.
4. Any tampering, changes, adjustments or unauthorized repairs will void the warranty of the speaker. All necessary repairs must be made by a trained & authorized person only. If not a well-trained person, it is forbidden to dismount the device; doing so may cause electric-shock injury or death as well as property damage.


GUIDELINES FOR BLUETOOTH FUNCTION

1. The Bluetooth pair name for this unit is TQ-FW883 .
2. Before using the units' Bluetooth function, ensure the unit is in Bluetooth mode.
3. Scan for nearby devices using your Smartphone or other Bluetooth enabled music player.
4. Select TQ-FW883 from the list of nearby devices to pair.


CAUTION

1. The equipment only works with AC/DC Adapter power supply or DC 7.4V built-in battery, DO NOT use any other power supply to power the device. Doing so may cause damage to the speaker and will void the warranty.
2. Do not expose this equipment to rain, moisture, strong sunlight or a high temperature environment.
3. To prevent damage, do not place the objects on equipment, like vases or other objects containing liquid etc.
4. To prevent damage to the sound system, do not connect the equipment to an exterior amplifier.
5. To avoid hurting your hearing or prevent damage to the equipment, please play the equipment at an adequate enough sound volume level.
6. To prevent overheating, please use the equipment in a well-ventilated environment.


SAFETY

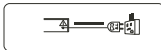


POWER: This equipment should only be powered use one of the above mentioned power sources.

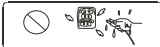


ELECTRIC SHOCK: In case of electric shock, do not use the speaker. Remove from the power outlet and consult a professional authorized repair man.

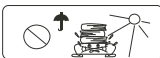


HEAVY PREASURE/HEAT: The equipment should not be pressed or placed in areas that can cause overheating.

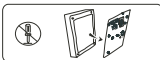

DISMOUNTING: Do not dismount the equipment yourself, if needed, please refer to well-trained and authorized person. Doing so may cause damage and void the warranty.

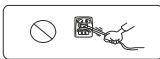

POWER CABLE PROTECTION: Please be assured power cable cannot be stepped on or pressed by heavy object: do not drag power cable forcefully

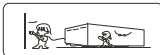

USAGE: Please remove power cable from outlet and Power off while not in use for extended periods of time.

Troubleshooting

The speaker does not produce sound:

1. Check to see that power plug is properly inserted into outlet and confirm the power switch is in the On position.
2. Check to make sure the audio cable is properly connected.
3. Check to make sure the speaker volume is at an adequate sound level.
4. If attempting to use the speaker in battery mode, try plugging in to a wall using the power cable to confirm the battery does not need to be charged.

Karaoke with sharp noise, what to do?

1. Please adjust the distance between the device and the wireless microphone.
2. If attempting to use both wireless microphones simultaneously try increasing the distance between the two microphones.

EQUIPMENT NOISE

The unit is equipped with a distortion prevention feature. However, in the event that unwanted noise distortion occurs, remove any connected audio cables and reinsert them one at a time. Make sure to keep adequate distance from each cable 2–3feet.

ANTIMAGNETIC

Keep the speaker at a safe distance from other magnetic devices to prevent unwanted distortion such as CRT Monitors; TV's, mobile phones etc...keeping these and other similar devices at a distance of 2–3feet will prevent such distortion from occurring.

Technical Specifications:

Power Output: 40 Watts

Frequency Response: 40Hz–22KHz + /–3dB

FM Frequency:87.5-108MHz

Driver: 8" Woofer / 4 ohms x 1

Tweeter: 1" Tweeter

Power Source 1: DC 7.4V 2000mAh

Power Source 2: AC/DC Adapter 100–240V 50/60Hz

In the Box:

1. 1 Power Adapter
2. 1 User manual
3. 1 Remote control

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning

the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.