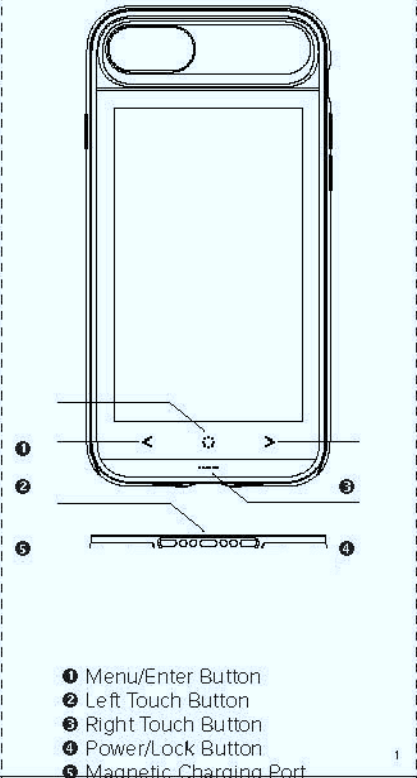
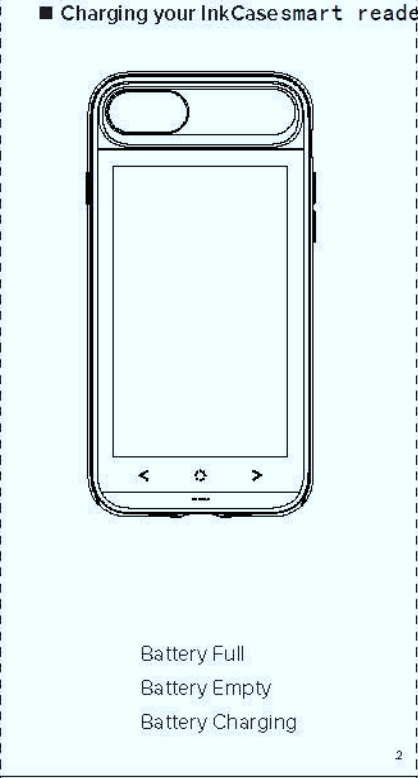
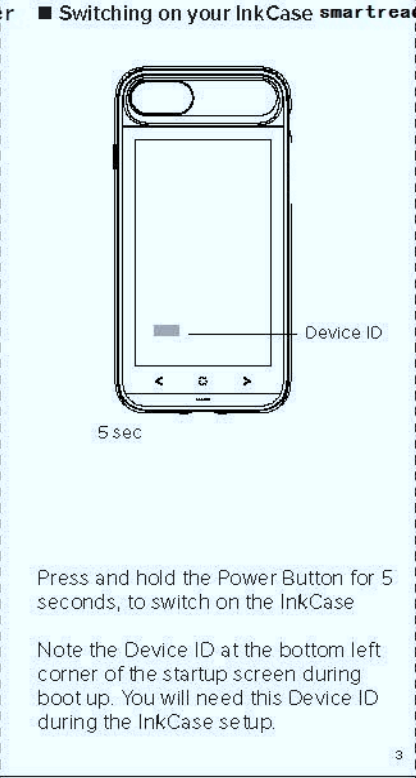
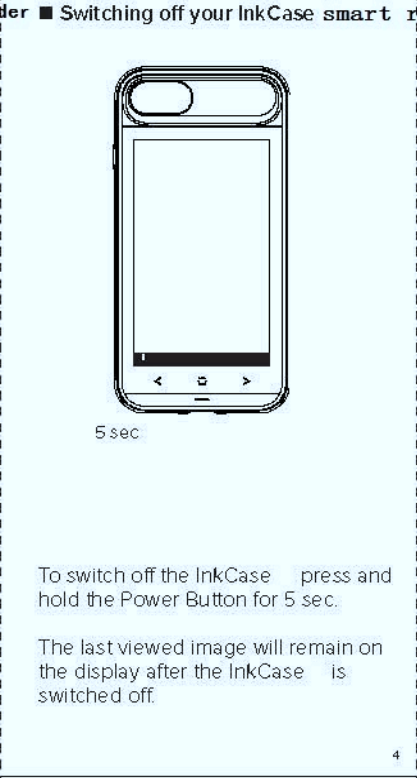
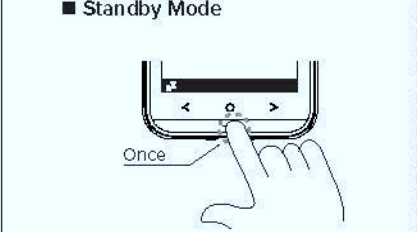
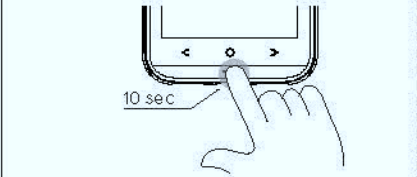
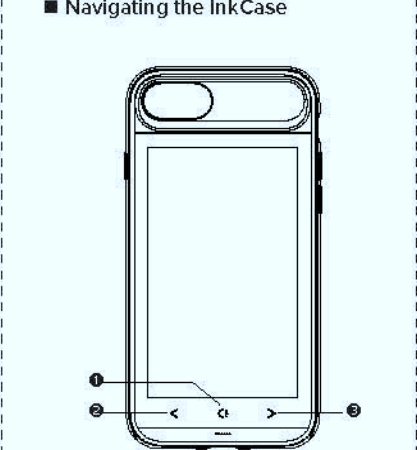
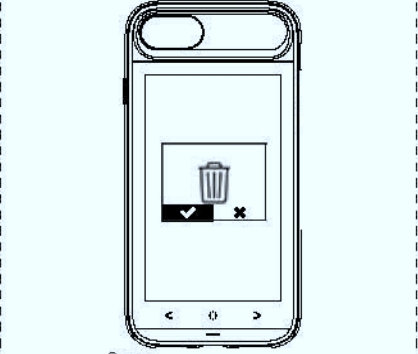

 <p>Inkcase smart reader</p> <p>Quick Start Guide</p>	 <p>1 Menu/Enter Button 2 Left Touch Button 3 Right Touch Button 4 Power/Lock Button 5 Magnetic Charging Port</p>	<p>■ Charging your InkCase smart reader</p>  <p>Battery Full Battery Empty Battery Charging</p>	<p>■ Switching on your InkCase smart reader</p>  <p>5 sec</p> <p>Press and hold the Power Button for 5 seconds, to switch on the InkCase</p> <p>Note the Device ID at the bottom left corner of the startup screen during boot up. You will need this Device ID during the InkCase setup.</p>	<p>■ Switching off your InkCase smart reader</p>  <p>5 sec</p> <p>To switch off the InkCase press and hold the Power Button for 5 sec.</p> <p>The last viewed image will remain on the display after the InkCase is switched off.</p>		
<p>■ Standby Mode</p>  <p>Once</p> <p>Press the Power Button once to switch to standby mode. Standby mode also locks the touch buttons from accidental clicks.</p> <p>■ Restarting the InkCase</p>  <p>10 sec</p> <p>Press and hold the Power Button for 10 secs to reset an unresponsive InkCase</p>	<p>■ Navigating the InkCase</p>  <p>1 2 3</p> <p>Tap on the Right or Left Touch Buttons (2 & 3) on the InkCase to navigate to the next or previous display.</p> <p>Double tap on the Menu Button (1) to switch between functions. A popup dialog box will appear, use the left and right touch buttons to switch between various modes. Tap Menu Button (1) once to select.</p>	<p>■ Deleting images from InkCase</p> <p>Navigate to image you want to delete using left and right touch buttons. Press and hold the Menu Button for 3 seconds to access delete menu.</p>  <p>3 sec</p> <p>Press and Hold Menu Button for 3 seconds to access Delete Menu.</p>	<p>■ Sending ebooks to InkCase smart reader</p> <p>Method 1: Import ebooks to InkCase app via bluetooth devices</p> <p>Method 2: Access ebook files via email or any file sharing app on the bluetooth devices</p>  <p>Reader</p> <p>Click Reader tab in InkCase app. Select the desired ebook and send to InkCase</p> <p>■ Deleting ebooks from InkCase</p> <p>Double tap Menu Button to access ebooks function in InkCase. Tap Menu Button once to enter ebook lists. Press and Hold Menu Button for 3 seconds to access delete menu. (pg.9)</p>	<p>■ Specifications</p> <ul style="list-style-type: none">• Display: 4.3 inch E Ink• Screen Resolution: 480 x 800 (217dpi)• Bluetooth 4.0 BLE• 1 Tact Button and 3 Touch Buttons• Dimension: 140.7 x 69.5 x 11 mm• Weight: 62g• Battery Capacity: 500mAH• Standby Time: 5 days• Frequency Range: 2402-2480MHz <p>■ Regulatory Conformance (RED)</p> <p>Hereby, Oaxis Asia Pte Ltd declares that the radio equipment type IC4370 is in compliance with Directive 2014/53/EU.</p> <p>The full text of the EU declaration of conformity is available at the following website: https://oaxis.zendesk.com/hc/en-us/categories/115000716968-InkCase</p> <p>Notice: Observe the national local regulations in the location where the device is to be used. This device may be restricted for use in some or all member states of the European Union (EU)</p>	<p>FCC statement:</p> <p>This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.</p> <p>Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.</p>	<p>This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>RF Exposure Information</p> <p>The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.</p>