

Controller Manual



AUTOMOBILI LAMBORGHINI MASSAGE CHAIR

Please Read

1. Safety Precautions

To ensure the safety of our users and prevent any product damage, please carefully read the following for correct device operation and keep this manual for future reference purposes.

- 01) Do not use forcefully, throw, or apply excessive pressure with sharp object to controller.
- 02) Do not put the controller inside microwaves or near objects that can interfere with radio waves.
- 03) Keep the controller stored far away from the reach of children and pets.
- 04) Do not operate with wet hands or in areas with high humidity levels.
- 05) Do not place under direct sunlight or in environments below 23°F or above 104°F.
- 06) Do not drop or place highly flammable objects within the massage chair or USB connector.
- 07) Do not turn on the device if it has been exposed to rain, liquids, chemicals, sprays, or any other types of liquids. Wipe down the device until it is dry and contact customer service.
- 08) Do not put metallic or flammable material within internal parts of the massage chair.
- 09) Do not use chemical solutions or liquid soap to clean the controller.
- 10) Do not put the controller in your back pocket or wear on your belt.
- 11) Warranty becomes void when and if user personally changes the software or uses a third party software for the controller.
- 12) Do not personally disassemble or make changes to the controller.
- 13) Do not color or place stickers on the controller.

- 14) Immediately stop using and call customer service if the controller emits strange smells, sounds, smoke, or substance.

Viewing E-label Regulatory and Compliance Information

The label for this device is provided electronically.

The e-label may provide regulatory information, such as identification numbers provided by the FCC or regional compliance markings, as well as applicable product and licensing information.

- 01) Select OK to open the menu.
- 02) Select ☰
- 03) Select About.

2. Unforeseen Circumstances

2.1. Battery Does Not Charge

- 01) Make sure no foreign interferences prevent the battery from charging. Otherwise, make sure the controller is placed correctly in the charging station.
- 02) Call customer service if the battery starts to heat up abnormally.
- 03) Locate the charging station on the right side of the massage chair.
Look for the red light which indicates the battery is charging correctly.
Otherwise, use the 5pin Micro USB port to charge.
- 04) If neither the USB port or wireless charging station seem to charge the battery, call customer service.

Please Read

2.2. Controller Does Not Turn On

- 01) Check if the battery is dead. Dead batteries occur if device is not operated for an extended period of time.
- 02) Refer to the “2.1 Battery Does Not Charge” section for any battery charging issues.
- 03) If the controller still does not turn on after charging, press the “LCD On / Off” and “Music” buttons located near the top of the controller simultaneously and hold down for 10 seconds to restart.
- 04) If charging the controller and restarting still does not help to turn on the controller, call customer service.

2.3. Sensor Error

- 01) If the sensor is dirty or wet, it will prevent the sensor from reading correctly.
Wipe the sensor down thoroughly for accurate reading.
- 02) If the environment around the device is dry, there is a high probability for static electricity to occur. Either avoid using the sensor or touch nonconductive material before touching the sensor.

2.4. Rebooting

- 01) If the software stops operating completely or there is a glitch with the touch pad, press the “LCD On / Off” and “Music” buttons located near the top of the controller simultaneously and hold down for 10 seconds to restart.

2.5. Connection Error Between Controller and Massage Chair

If the “Connection” icon is disabled or the massage chair does not operate using the controller, refer to the following.

- 01) Press the following from the menu tree: [Settings] - [Controller Information] - [Re-Connect].
- 02) When the re-connect pop-up appears, press “Yes.”
- 03) When the connection information appears on the screen, bring the controller closer (within a 3 feet radius of the chair).
- 04) If the connection was successful, the connection icon will appear automatically on the home screen.

2.6. The Motor, Controller, or Embedded Control Buttons

Do Not Operate Normally.

- 01) Do not try to get out of the massage chair alone. Please wait to hear the double beep.
- 02) When the massage chair double beeps, use the embedded control [Power] button to restart the massage chair.
- 03) When the power returns, the massage chair will move back to its original resting position.
- 04) Please refer to the “Connect Wireless Controller to Massage Chair” section of the manual to re-establish the connection between the controller and chair.
- 05) Please call customer service and report the product malfunction.

Please Read

FCC statement :

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Information to User

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF exposure

Caution :

Any changes or modifications to the equipment not expressly approved by the party responsible for compliance could void user's authority to operate the equipment.

This appliance and its antenna must not be co-located or operation in conjunction with any other antenna or transmitter.

CAUTION

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

BODYFRIEND - Koreatown Plaza

928 Western AVE #233 Los Angeles, CA 90006
213-568-3978

BODYFRIEND - Melrose

8001 Melrose AVE Los Angeles, CA 90046
323-847-5071

BODYFRIEND - Santa Anita (Westfield)

400S Baldwin Ave Level 1 #231, Arcadia, CA 91007
626 348 8998

10 Wireless Controller Features



Bluetooth



5" LCD



Touch Screen



Wireless
Charging



Light Sensor



Stress / Pulse
Sensor



Privacy Lock



Pattern Lock



Music Source



Supercar UI

Table of Contents

01. Product Features	5
02. Status Bar	8
03. Begin Use	10
04. Wireless Controller Descriptions	11
05. User Registration and Privacy Settings	12
05. Menu Descriptions	19
06. Settings	36
07. Product Specifications	37
08. Warranty	38



Status Bar

Status Bar Icon Description



01. Power ON / OFF
02. Massage Chair Connection
03. Music
04. Time
05. AUX
06. USB
07. Bluetooth
08. Battery

Status Bar Icon Description



01. Power OFF / ON



02. Massage Chair
Disconnected / Connected



03. Music OFF / ON



04. AUX Disconnected / Connected



05. USB
Disconnected / Connected / Connection Error



06. Bluetooth
Disconnected / Connected




07. Battery / Charging / Low Battery

※ If a USB that is not supported is plugged in,
a connection error will appear.


Start – Check Massage Chair Connection Before Using




Begin Use

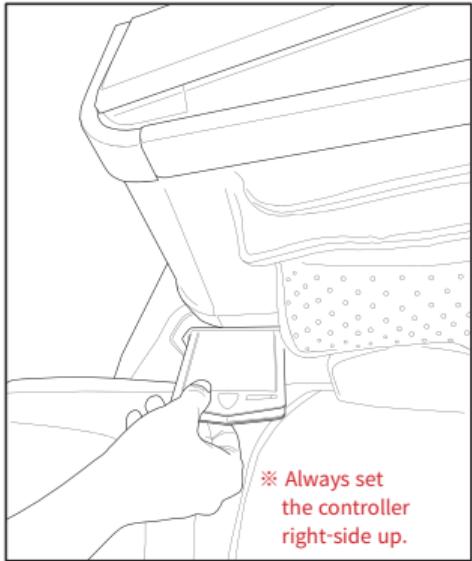

01. Remove wireless controller near the right arm unit.

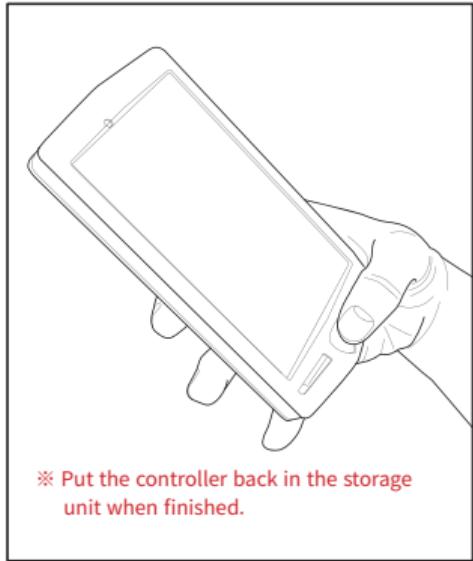

02. Hold the center [Power] button down.

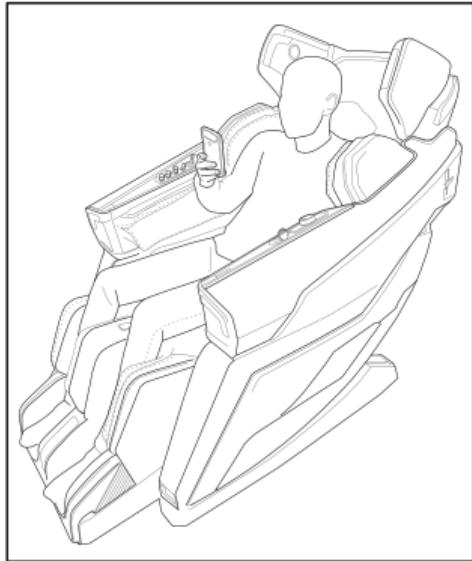


03. Select preferred settings and start massage.

Wireless Controller Button Descriptions

- 01. Home Button
- 02. Power ON / OFF
- 03. Pause / Resume
- 04. Music Menu Button
- 05. Light Sensor
- 06. Controller LCD ON / OFF
- 07. Stress / Pulse Rate Sensor
- 08. Touch Sensor

※ The LCD screen is normally used in portrait view.
Only special massages require the LCD screen to be viewed
on landscape.
Landscape View: Supercar Massage, Stress / Pulse
Rate Monitor, and Healing Massage.

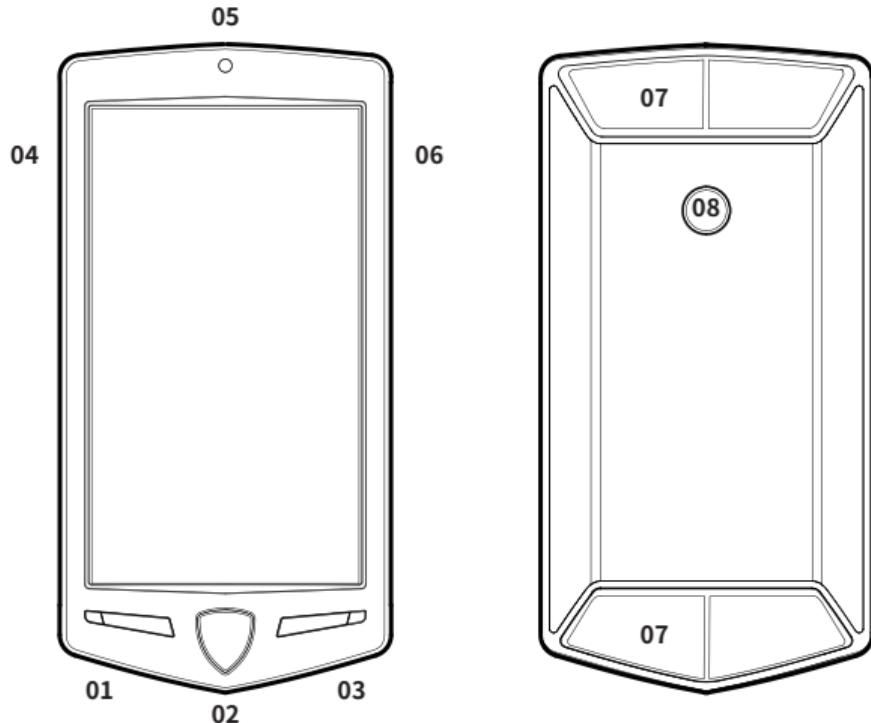

User Registration – New User Registration



Privacy Policy

BODYFRIEND Inc. takes the private nature of your personal information very seriously, and is committed to protecting it, according to the Individual Privacy Protection Law. This document explains BODYFRIEND Inc.'s policies for the collection, use, and disclosure of personal information.

Any updates to this policy will be posted on the website notice board or sent as individual announcements.

This policy is effective from 06/01/2018.


We may collect the following information:

- Personal Information: name, gender, height, weight, date of birth, user ID, date and time, pattern
- Bio-Signal Information: fingerprint, electrocardiogram results, date and time
- Personal Massage Information: auto massage, manual massage area, manual massage method, air massage preference, custom mode
- Personal Massage Information: auto massage, manual massage area, manual massage method, air massage preference, custom mode

We collect the user information via following methods:

- Automatic data collection tools when you use massage modes

Agree

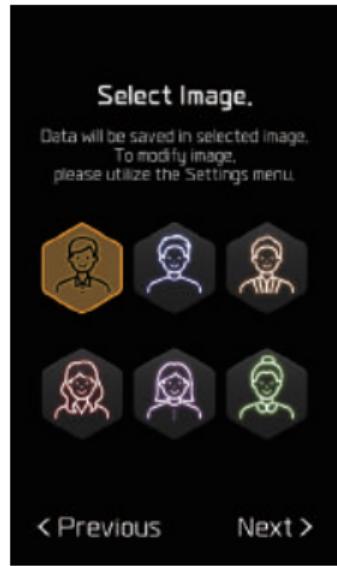

User Enrollment

ID

A virtual keyboard is displayed at the bottom of the screen, showing the letters of the alphabet and some additional symbols.

(1) New User Registration > [Terms and Conditions Agreement] > [Select Image] > [Create ID]

(2) Guest User * Guest User is not able to receive customized services.

* ID may only contain alphanumeric characters.

User Registration – New User Registration


The image shows a three-step user registration process:

- Step 1: Gender Selection**
A list of gender options: Male (selected) and Female. Navigation arrows < Previous and Next > are at the bottom.
- Step 2: Date of Birth Input**
A date input field showing "1980 Mo. Day". Below it is a dropdown menu with dates from 1979 to 1981, months from May to July, and days from 28 to 30. Navigation arrows < Previous and Next > are at the bottom.
- Step 3: Additional Information Input**
Fields for Height (cm/in) and Weight (kg/lbs). A note says "Please accurately input your information for more precise health advice." Navigation arrows < Previous and Next > are at the bottom.

[Select Gender] > [Input Date of Birth] > [Additional Information]

※ Additional information must be entered to receive more specific care information.


Lock / Unlock – Fingerprint

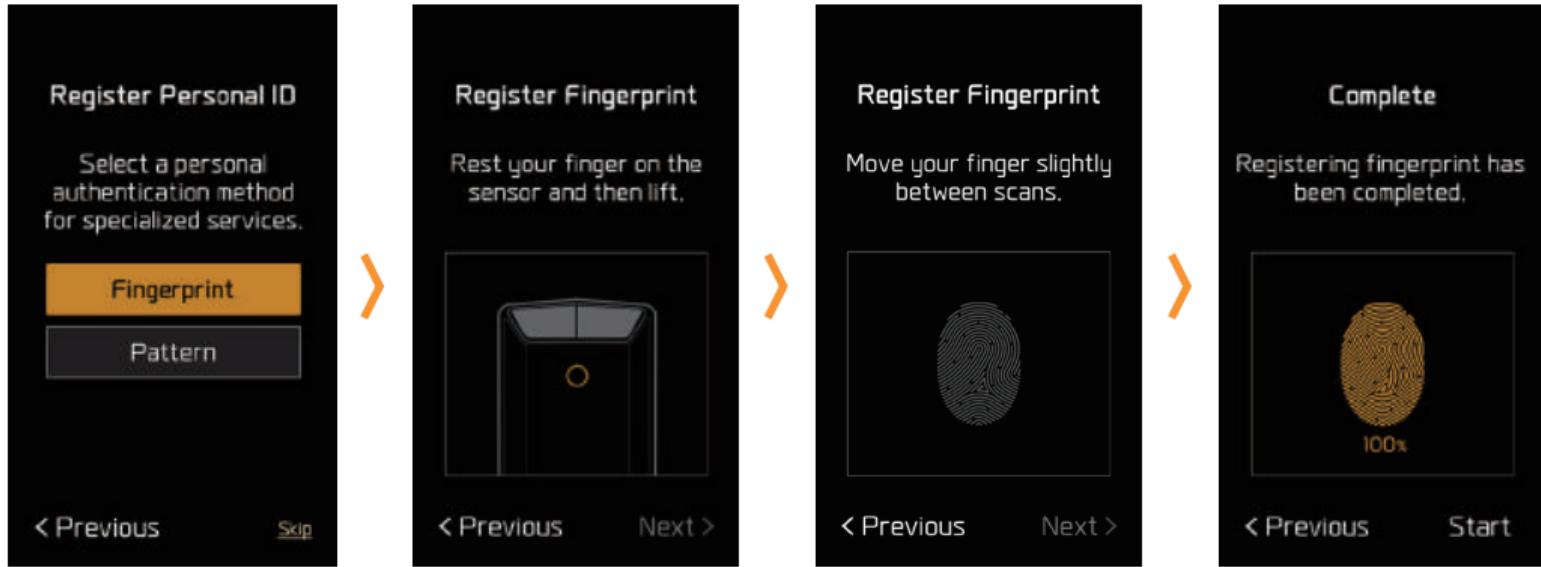

[Select Unlock Method] > [Fingerprint] > [Re-Enter Fingerprint] > [Fingerprint Confirmed]

- ※ User can select to add the fingerprint option, pattern, or just skip to unlock personal account.
- ※ If user chooses to skip the lock screen step, personal information may be exposed to other users.

Lock / Unlock – Pattern

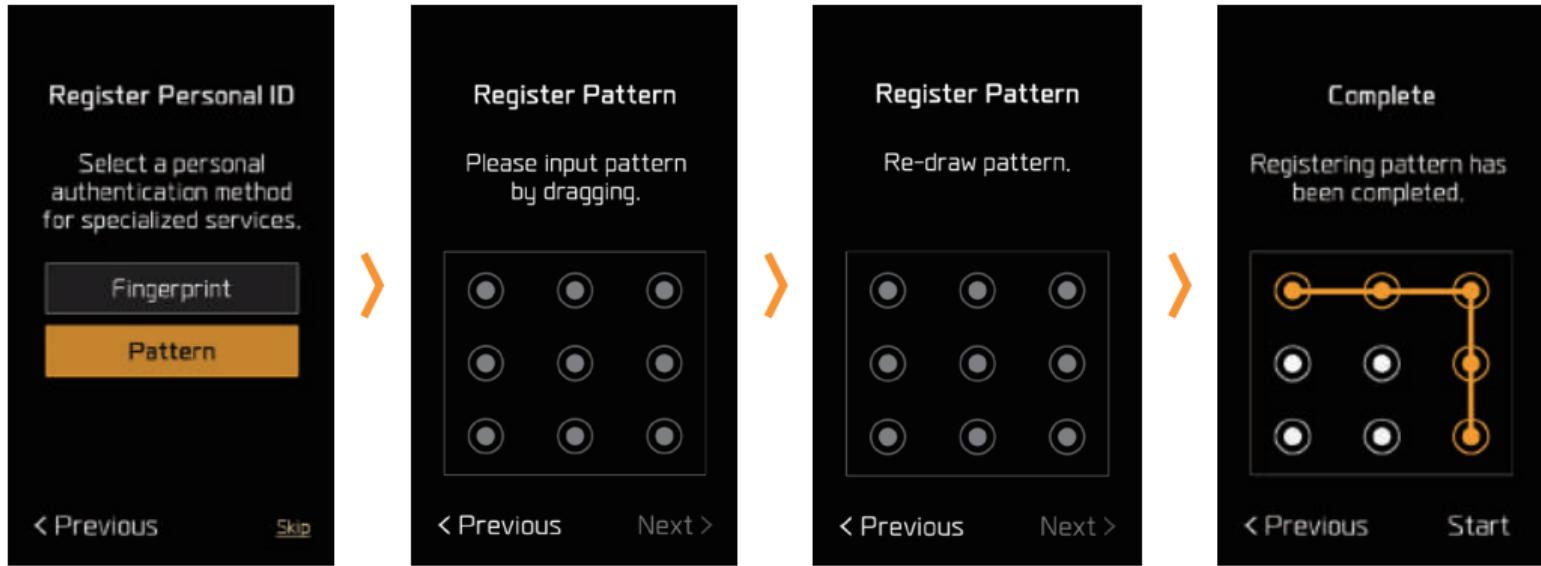


[Select Unlock Method] > [Pattern] > [Re-Draw Pattern] > [Pattern Confirmed]

- ※ User can select to add the fingerprint option, pattern, or just skip to unlock personal account.
- ※ If user chooses to skip the lock screen step, personal information may be exposed to other users.




User Registration and Privacy Settings

Edit Account / Reset Account / Delete Account

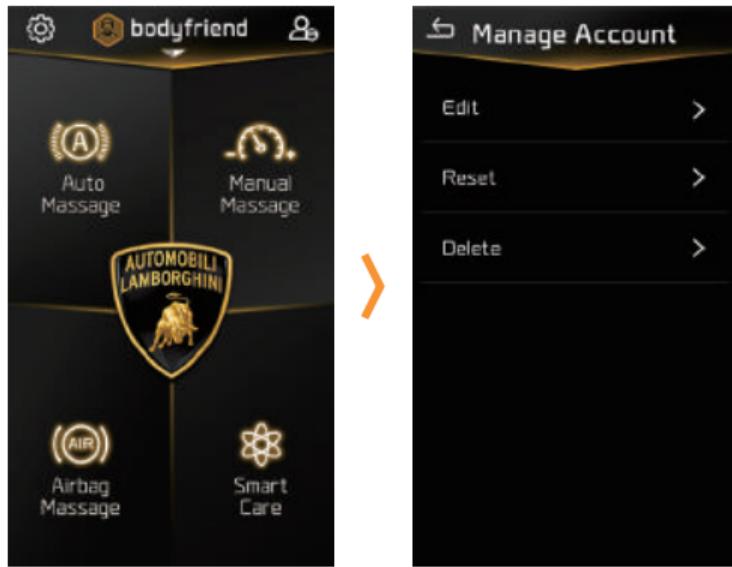

[Home] > [Settings] > [Manage Account] > [Edit]
[Home] > [Settings] > [Manage Account] > [Reset]
[Home] > [Settings] > [Manage Account] > [Delete]

Begin Use

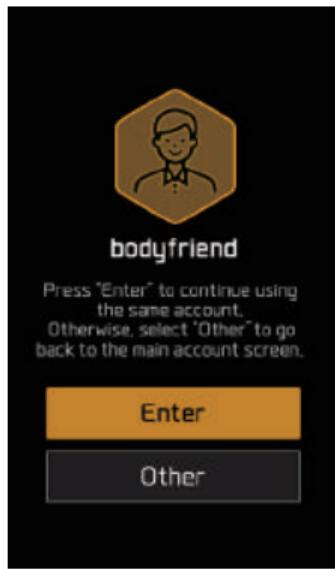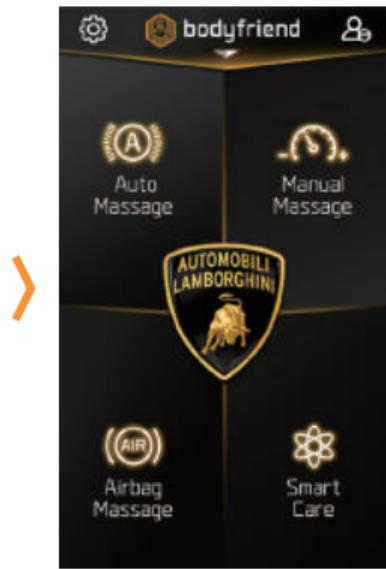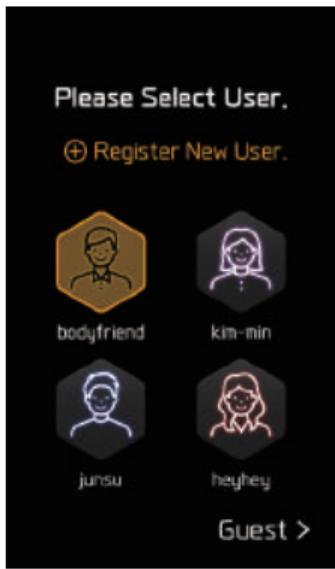


Enter newly saved privacy settings to proceed to main screen.

※ To delete an account, press the icon on the upper right hand corner.

※ If you log out during a massage, the screen will ask if you would like to stay logged into the current account or log into a new account.

Incorrect Login

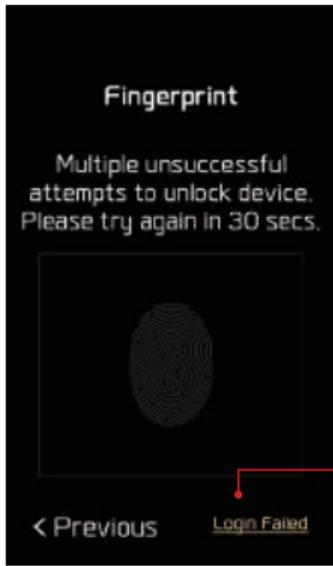


[Fingerprint not recognized / Incorrect pattern] > [Try again after 30 seconds]

- ※ If fingerprint is not recognized or the pattern is incorrect, screen will prompt user to enter date of birth.
- ※ Screen will ask for fingerprint or pattern again after date of birth information is confirmed.


Main Screen

- 01. Settings
- 02. User ID
- 03. ID Logout
- 04. Automatic Massage
- 05. Manual Massage
- 06. Supercar Massage
- 07. Airbag Massage
- 08. Smart Care

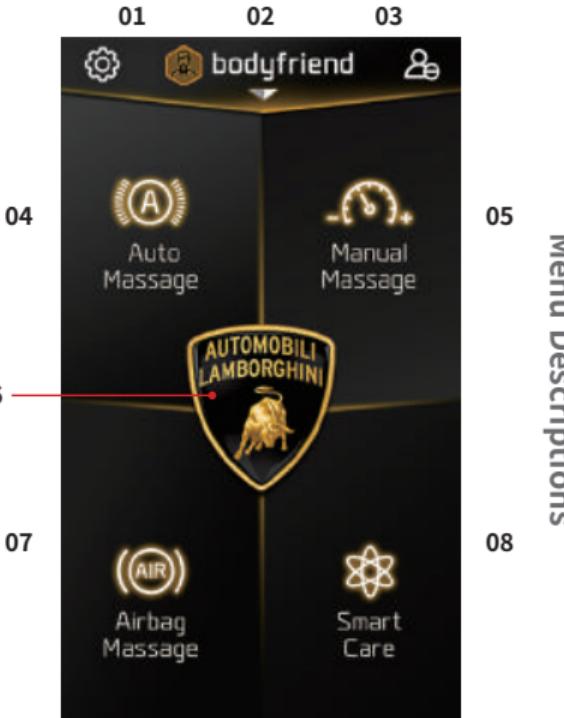

Menu Descriptions

Menu - Automatic Massage

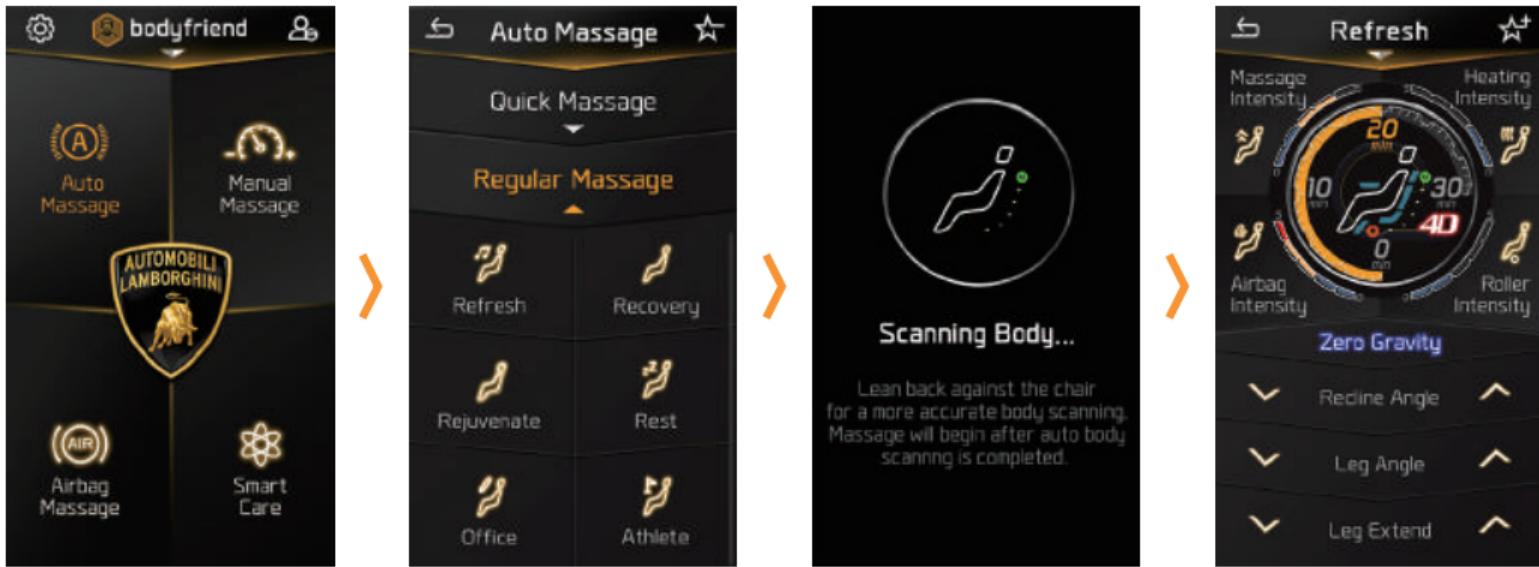

[Home] > [Select Auto Massage] > Select from [Quick Massage / Regular Massage] >
[Auto Body Scanning] > [Begin Massage]

※ The Stretch, Office, and Athlete massage programs automatically adjust recline angles throughout the program.

※ When recline angles are manually changed, the automatic angle adjust function is disabled for the entire session.

※ If the following massage options are selected during an auto massage, the auto body scanning will not initiate: Quick Legs, Auto Lower, and Leg-Focused.

Home

Automatic Massage

Quick Massage

5 Min. Quick Massages

- 01. Quick Full Body
- 02. Quick Neck / Shoulders
- 03. Quick Waist
- 04. Quick Legs

Regular Massage


Variety of Massage Programs

- 01. Refresh
- 02. Relax
- 03. Rejuvenate
- 04. Rest
- 05. Office
- 06. Athlete
- 07. Hip-Up
- 08. Auto Upper
- 09. Auto Lower
- 10. Stretch
- 11. Adolescent
- 12. Lymphatic
- 13. Leg-Focused
- 14. Neck/Shoulder-Focused
- 15. Digestive

Preferred Massage 

Save preferred massage for user convenience.


Menu - Manual Massage

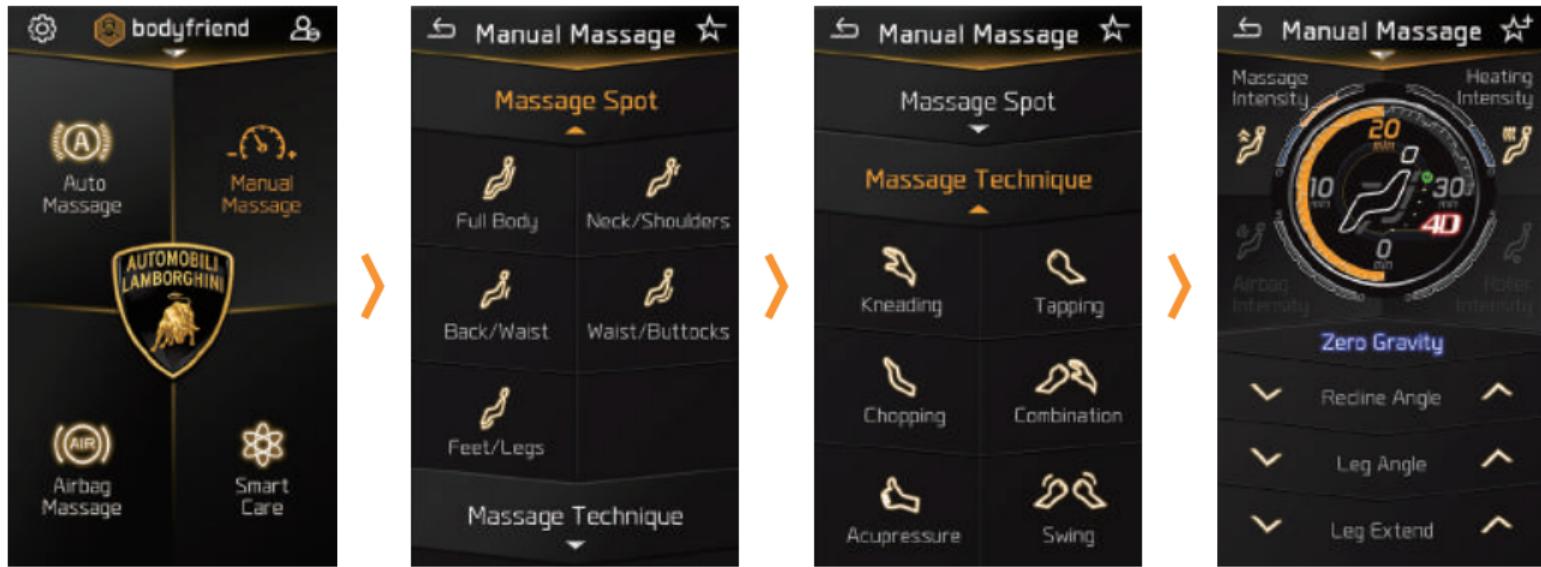


[Home] > [Select Manual Massage] > [Select Massage Spot] > [Select Massage Technique] > [Begin Massage]

[Massage Width] and [Shift Speed] can be adjusted under Settings.

※ Auto body scanning does not initiate if the massage spot, "Feet/Legs," is selected during a manual massage.

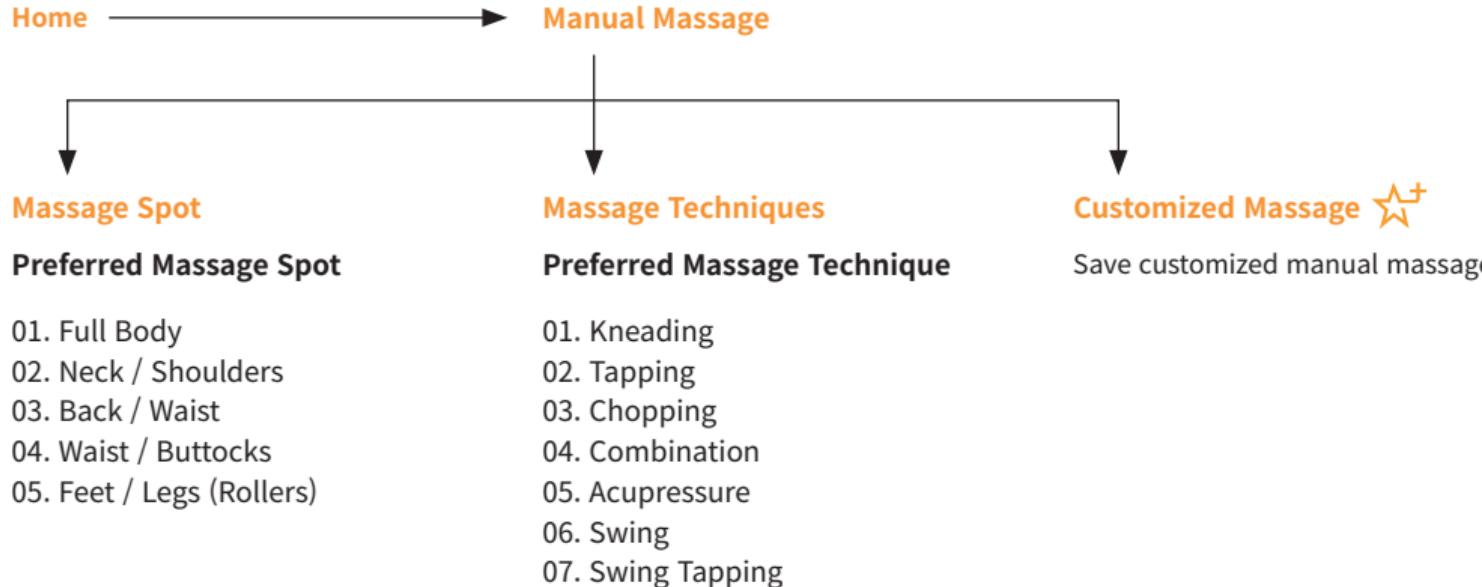

Menu – Airbag Massage

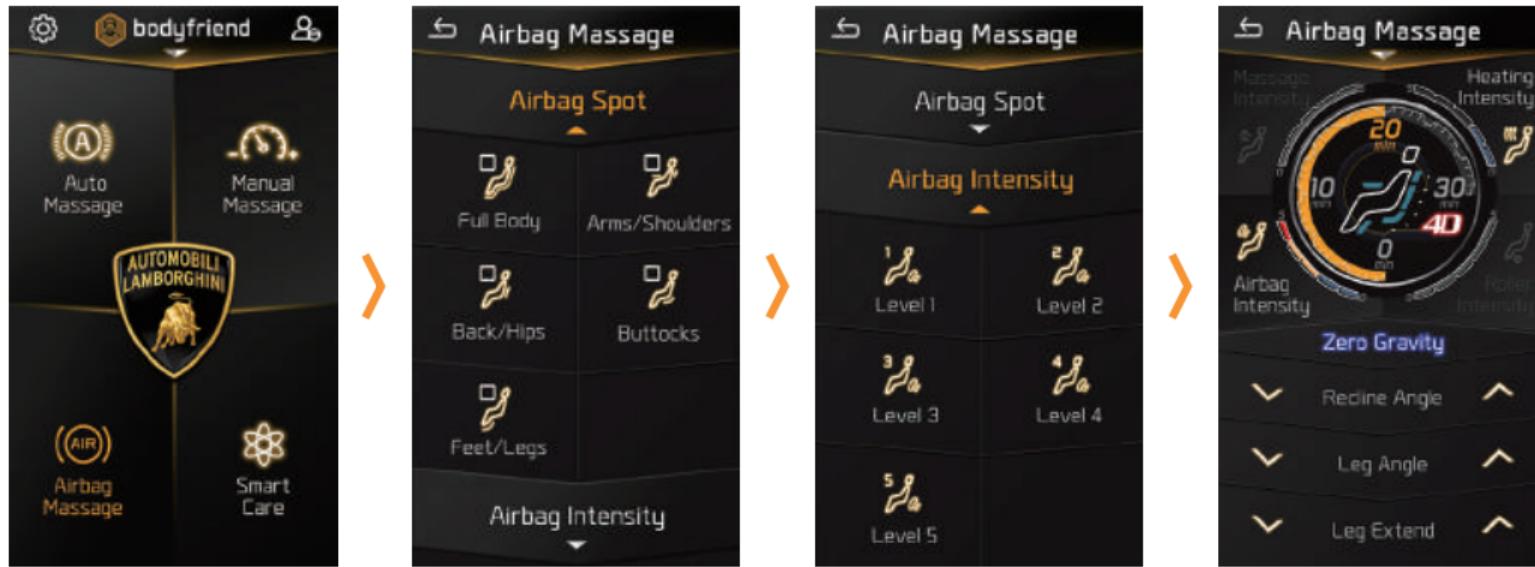

[Home] > [Select Airbag Massage] > [Select Massage Spot] > [Select Air Intensity] > [Begin Massage]

※ Airbag Massage can be operated concurrently with a manual massage mode.

Home

Airbag Massage

Massage Spot

Preferred Massage Spot

- 01. Full Body
- 02. Arms / Shoulders
- 03. Back / Waist
- 04. Buttocks
- 05. Legs / Feet

Massage Intensity

Preferred Massage Intensity

- Level 1
- Level 2
- Level 3
- Level 4
- Level 5


Screen – Massage in Progress 01

- 01. Back** Go back to the previous screen.
- 02. Massage Settings** Change detailed settings for current massage.
- 03. Preferred / Customized Massage** Auto Massage – Preferred Massage / Manual Massage – Customized Massage
(Save or delete massages during respective massages.)
- 04. Massage Intensity** Select between 5 massage intensity levels.
- 05. Heating** Select between 5 heating levels.
- 06. Air Intensity** Select between 5 airbag massage intensity levels.
- 07. Roller Speed** Select between 5 roller speed levels.
- 08. Zero Gravity** Turn Zero Gravity ON / OFF.
- 09. Recline Angle** Recline or raise chair upright.
- 10. Leg Angle** Raise or lower leg angle.
- 11. Leg Extend** Extend or retract leg unit.







Screen – Massage in Progress 02

- 01. Intensity Level** Massage Intensity / Air Intensity / Heating / Roller Speed(differentiated between 5 levels)
- 02. Massage Duration** Massage time remaining
- 03. Back / Waist Module** Back and waist roller locator
- 04. Current Massage Status** Check current massage status and location
- 05. Calf Roller** Calf roller indicator

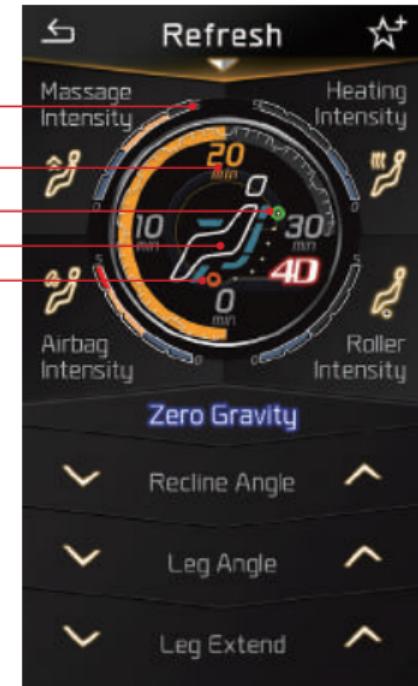



Menu – Massage in Progress

Menu - Smart Care

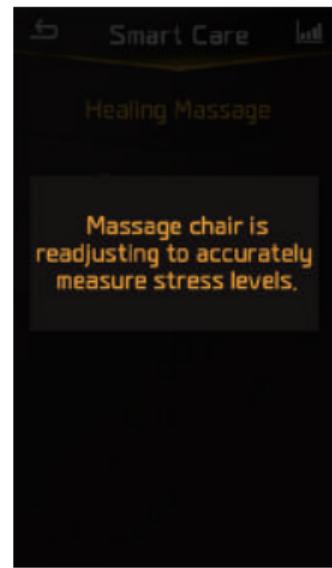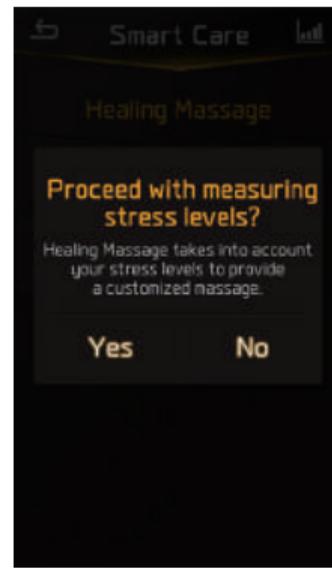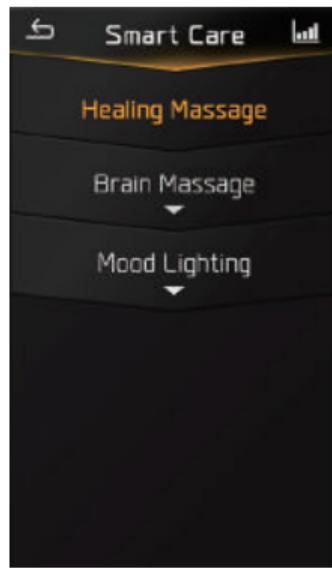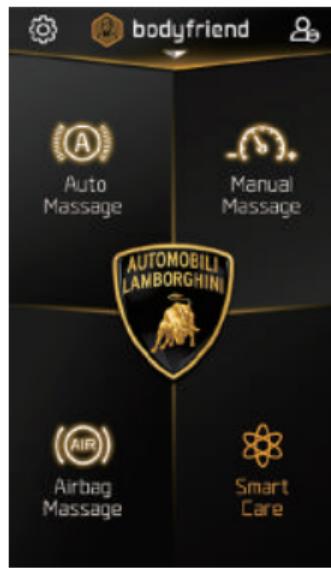

[Home] > [Select Smart Care] > [Select Healing Massage] > [Monitor Stress Levels] > [Start Customized Massage]

Smart Care – Healing Massage – Monitoring Stress Levels

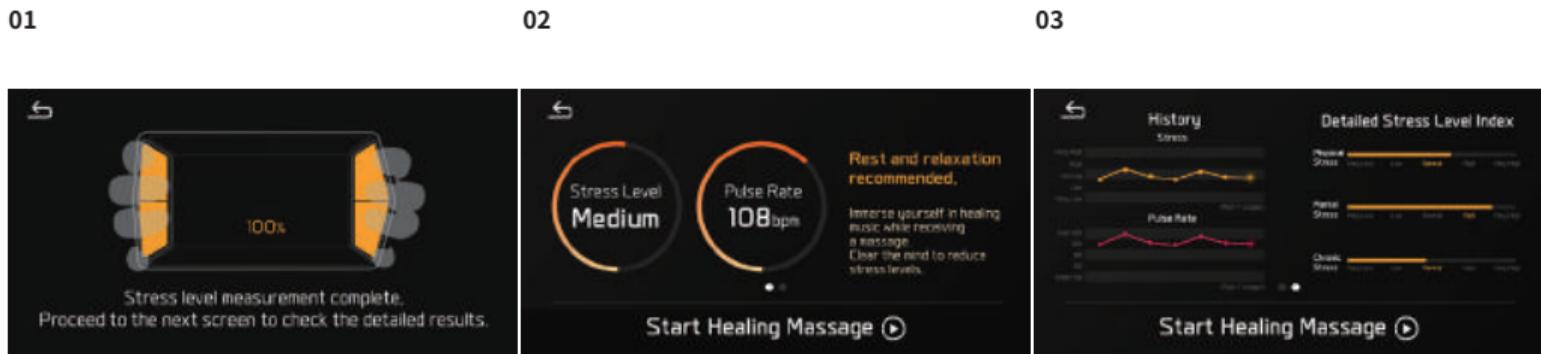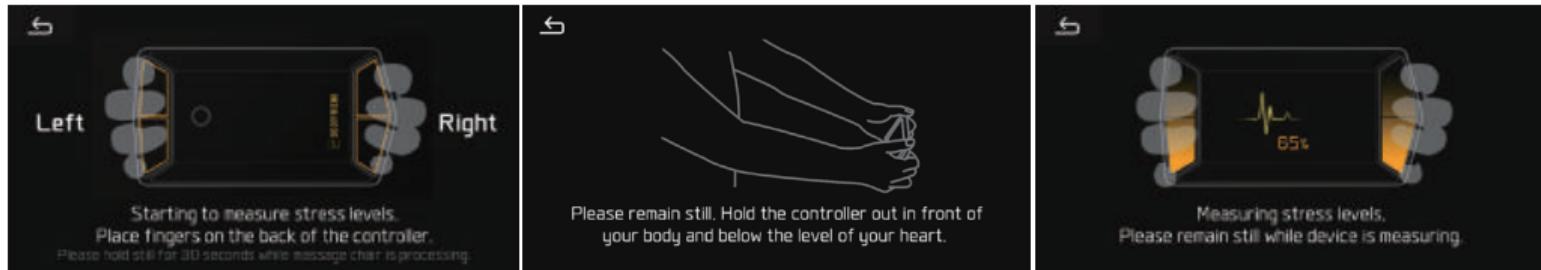





04

05

06

※ [Monitor Stress Levels] feature requires landscape viewing.

Menu - Smart Care

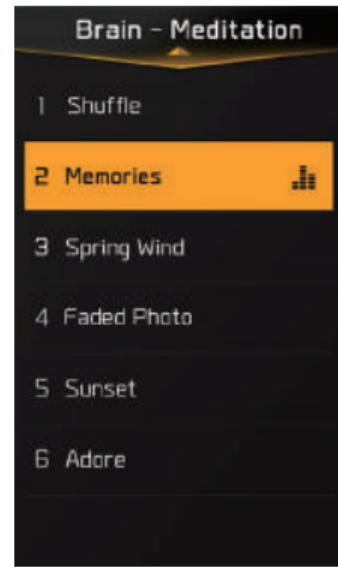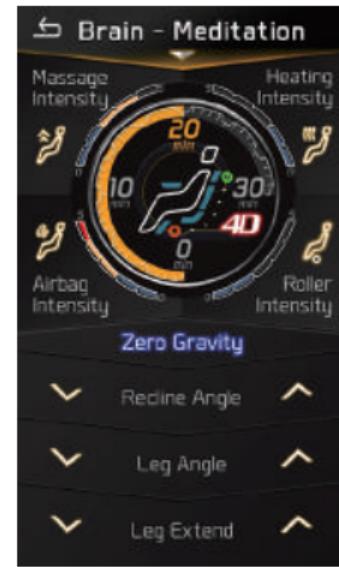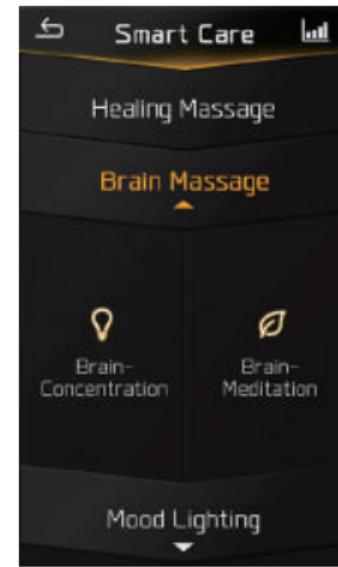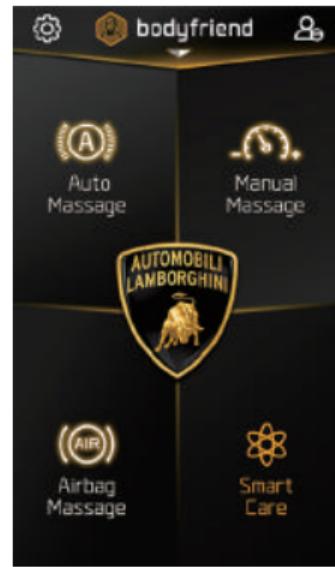


[Home] > [Select Smart Care] > [Select Brain Massage] >
[Select Brain - Concentration / Brain - Meditation] > [Start Massage]

※ Brain massage comes in two options : Brain – Concentration / Brain – Meditation.



Smart Care – Mood Lighting



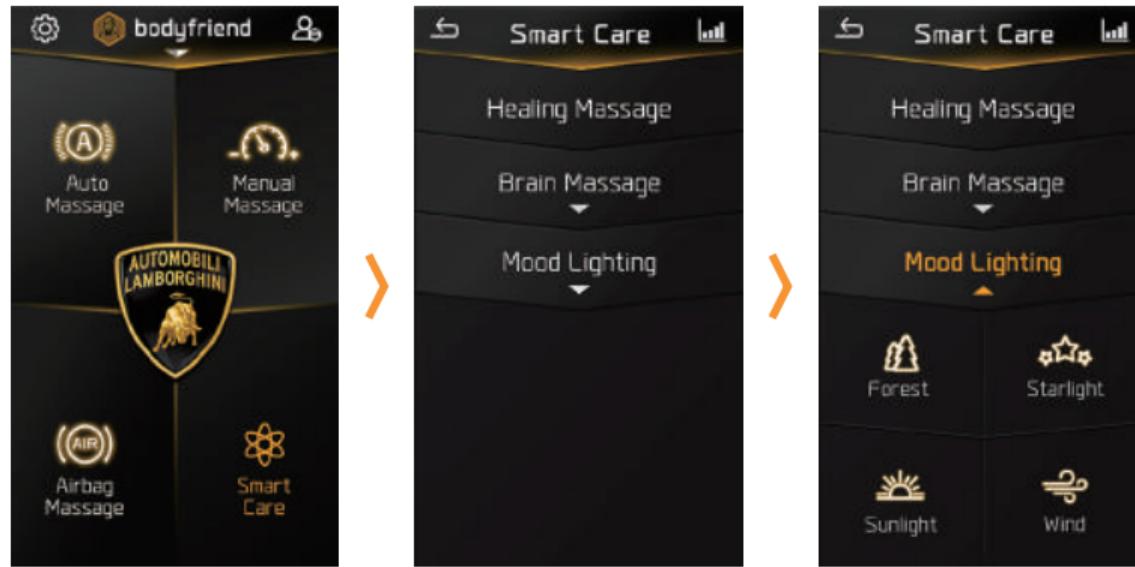


[Home] > [Select Smart Care] > [Select Mood Lighting] >
[Select Forest/Starlight/Sunlight/Wind] > [Start LED Lighting]

※ Mood Lighting is not a massage.

※ Mood Lighting can be used concurrently with an auto, manual, or airbag massages.

Menu - Smart Care

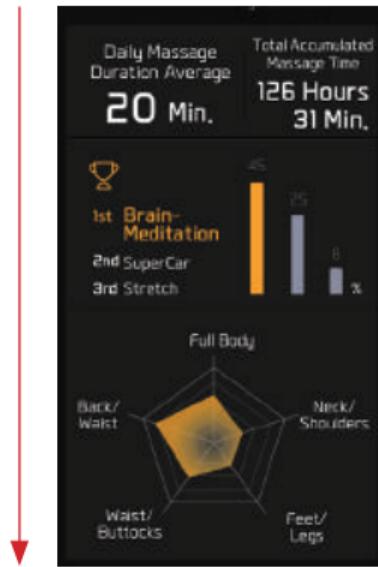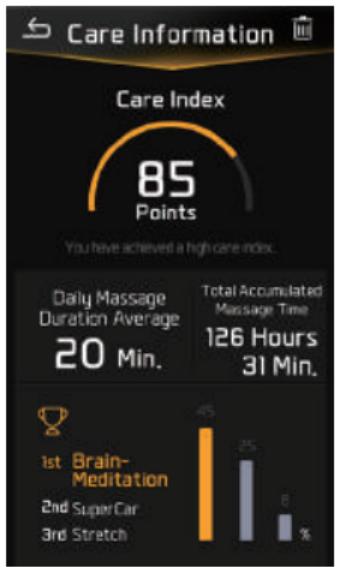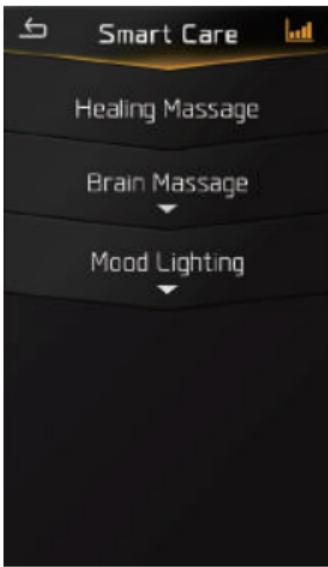

[Home] > [Select Smart Care] > [Care Information]

※ To delete previously saved history, press the waste bin icon on the upper right hand corner of the [Care Information] screen.

※ Care Information provides care index and massage history.

Supercar Massage



[Home] > [Select Supercar Massage] > [Begin Massage]


※ [Supercar Massage] requires landscape viewing and massage intensity can be adjusted automatically or manually.

※ [Supercar Massage] automatically adjusts recline angles throughout the program.

When recline angles are manually changed, the automatic angle adjust function is disabled for the entire session.


Menu - Music

Connect to Music

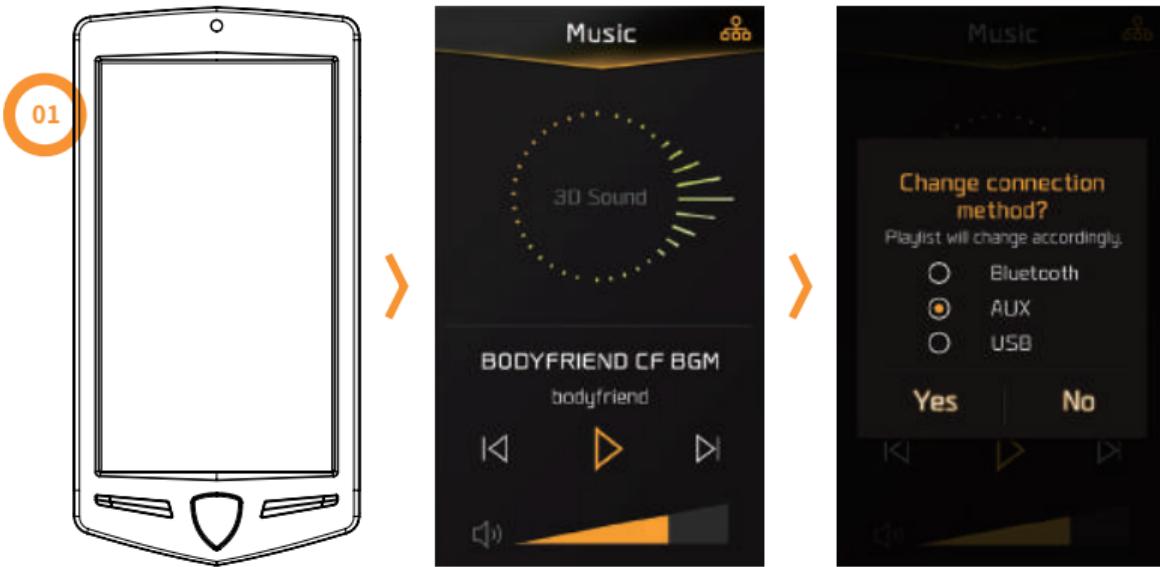

01. [Press Music Icon] > [Edit Connection Settings] > [Select Changes]

Easy Mode

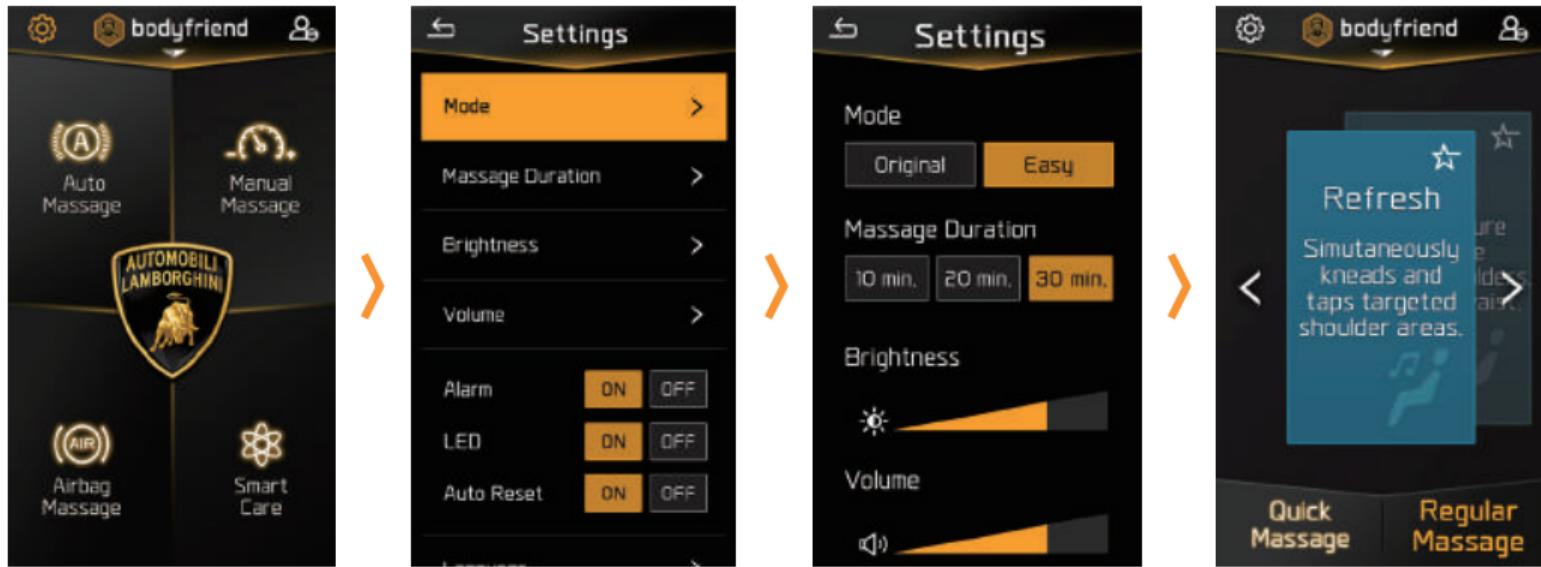

[Home] > [Settings] > [Change Mode] > [Select Easy Mode] > [Easy Mode Home]

※ [Preferred Massage] can also be accessed through [Easy Mode] and is operated in the same way.

Settings

Settings Description

01. Mode - Original Mode / Easy Mode

02. Time Elapsed - 10 mins / 20 mins / 30 mins

※ Time settings cannot be adjusted for the following massage options:

Healing, Brain, and Supercar.

03. Brightness

- Automatic or manual screen brightness adjust
- Auto-Lock and time setting

04. Volume

- Volume / Controller Keyboard Clicks ON / OFF / Sound Woofer ON / OFF / Smart Sound / Equalizer / Audio Guidance ON / OFF
- ※ Smart sounds adjust according to user seating.

05. Alerts - Start and End Performance (Engine Rev/LED) Alert

06. Massage Chair LED - Massage Chair LED ON / OFF

07. Auto Reset ON / OFF

※ Auto Reset button allows users to enable/disable the massage chair to automatically go back to its original resting position after a massage rather than having to manually bring the massage back down. Controller speakers alerts touch control outputs and electric discharge sounds.



08. Language - Korean / English / Chinese

09. Time - Manually set time

10. Controller Information

- Version Onformation / Legal Information / Regulatory / Reset Connection Settings

11. Manage Account - Edit, Reset, or Delete Account

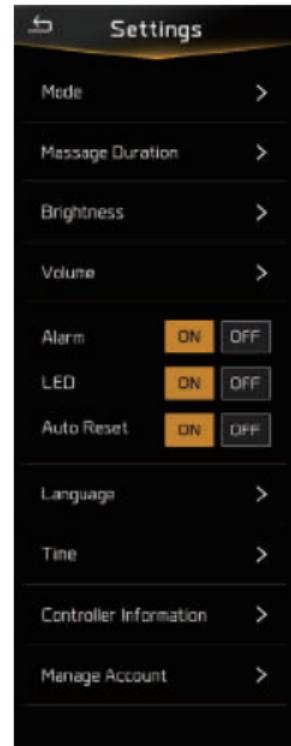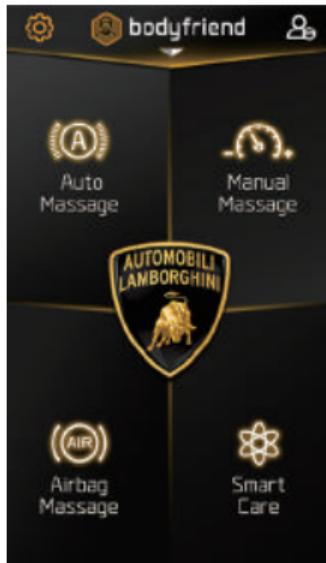

[Home] > [Settings]

Product Specifications

Product	Lamborghini Massage Chair (Wireless Controller)
Model	LBF-R700
OS	Android 7
CPU	Cortex-A53 Quad Core @ 1.4 GHz
LCD Type / Resolution	5 in. TFT / HD (720 x 1280)
Interface	Touch Screen
Battery	2800 mAH

USB	Micro USB / OTG
Bluetooth	Bluetooth 4.2
Charging Method	Wireless
	Light Sensor
Sensor	Fingerprint
	Stress / Pulse Sensor
Speaker	0.7w/2.37v

Warranty

Warranty

- 1) Consumer is able to receive the services specified on the warranty page.
- 2) Warranty starts at date of purchase and services are able to be received concurrently.
- 3) Product is to be used in residential settings only.
- 4) Warranty is only valid within the country the product was purchased.
- 5) Warranty cannot be transferred or reissued.



BODYFRIEND

Product	Wireless Controller
Name	
Address	
Phone No.	
Store Name	
Store Phone No.	
Installation Date	
Manufacture Date	
Manufacture No.	



使用前确认事项

1. 警告事项及注意事项

为了保障使用者的安全及防止财产上的损失。

请妥善保管本说明书，使用前务必仔细阅读确保正常使用按摩椅。

01) 禁止蛮力、敲砸、以及尖锐的物品操作遥控器。

02) 遥控器禁止放在微波炉，电波干扰的地方。

03) 将遥控器保管在小孩，宠物不能触摸的地方。

04) 禁止使用湿手触摸遥控器或放置在多湿的地方。

05) 避开阳光直射或温度(-5°C ~ 40°C)非常高或低的地方。

06) 产品内部及USBConnector上不要放置金属类及容易燃烧的东西。

07) 产品由于雨、饮料、药品、化妆品、汗湿等引起的潮湿时禁止开启电源，
 使用干毛巾擦干后，联系附近的维修中心接受检查。

08) 产品内部禁止放置金属类或容易燃烧的东西。

09) 清洁和擦洗遥控器时禁止使用化学溶液，清洁剂。

10) 遥控器不要放进口袋或扣在腰带上。

11) 由于使用者随意调整遥控器设置，软件系统发生了功能及互换性时

 不能适用维修保证。

12) 遥控器禁止随意分开、改装、自行维修。

13) 遥控器上禁止涂抹和贴贴纸。

14) 产品上发生异常现象(异味、噪音、异物、烟气)时，

 请立即停止使用咨询维修中心。

使用前确认事项

2. 发生以下情况时

2.1. 遥控器电池无法充电

- 01) 请确认按摩椅的遥控器上是否有异物或者受到接触不好的影响。
如按摩椅的充电部跟遥控器距离不正常时，无线充电会受到影响。
- 02) 遥控器的温度异常偏高时，请立即停止使用咨询服务中心。
- 03) 通过产品右侧的无线充电部可充电，请确认充电中是否有红色灯光。

此外，利用Spin Micro USB充电端口可有线充电。

- 04) 如使用USB端口或无线充电器也无法充电时，请咨询服务中心。

2.2. 遥控器无法打开时

- 01) 长时间未使用时，产品会放电，请确认产品的电池是否放电。
- 02) 关于充电事项，请参考上面的“2.1电池无法充电”。
- 03) 遥控器充电后也无法打开时，请同时长按右侧上端的LCD按键和左侧上端的Music按键10秒钟后，再重新启动。
- 04) 充电及重启后也不能打开遥控器时，请咨询服务中心。

2.3. 指纹识别传感器错误时

- 01) 指纹识别部位或者手指脏污有水分时，请擦干静后再试一次识别指纹。
- 02) 周围干燥时，产品可能会产生静电。
在干燥的地方尽量不要使用指纹识别功能或使用前触摸金属物体，去除静电后再使用。

2.4. 重新重启时

- 01) 遥控器卡机、无法操作时，请同时长按右侧上端的LCD按键和左侧上端的Music按键10秒钟后，再重新启动。

2.5. 无线遥控器和按摩椅连接中断时

遥控器画面上端的“按摩椅连接”图标未激活或者已激活也无法操作时
请执行下一个动作。

- 请确认按摩椅和遥控器的距离为5米以内，是否两个装置之间被堵隔墙或物体。
- 01) 选择菜单 [设置]-[遥控器信息]-[按摩椅连接再次设置]。
 - 02) 出连接再次设置弹窗画面时，请选择“确认”。
 - 03) 出连接提示画面时，请把遥控器靠近在按摩椅。(约1米以内)
 - 04) 连接时自动显示主页菜单画面。

请确认遥控器画面上端的“连接”图标已激活。

使用前确认事项

2.6. 按摩动作无法操作时

遥控器不正常运行及内侧按键也不运转时，请执行下一个动作。

- 01) 不要在按摩椅上独自一个人下来，请稍等到发出滴滴声。
- 02) 发出滴滴声，请利用内侧按键的"power"键将按摩椅重启。
- 03) 电源键确认后，重启开始，按摩椅回归原位。
- 04) 关于相关事项，请咨询服务中心。

CAUTION

RISK OF EXPLOSION IF BATTERY IS REPLACED
BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING
TO THE INSTRUCTIONS

无线遥控器的10个特点



无线按摩控制
(蓝牙)



5 in LCD



触摸屏



无线充电



亮度传感器



压力/心跳次数
检测



个人认证
(指纹登记)



个人认证
(手势登记)



音乐控制



超级跑车UI

目录

目
录

01. 产品特点	43
02. 状态栏显示	46
03. 启动按摩椅	48
04. 无线遥控器使用说明	49
05. 用户注册及个人认证	50
05. 菜单说明	57
06. 设置	74
07. 产品规格及参数	75
08. 产品保证书	76



状态显示的图标说明



01. 按摩椅电源开/关状态
02. 按摩椅连接及解除状态
03. 音乐连接及解除状态
04. 当前时间(时:分 AM/PM)
05. AUX连接及解除状态
06. USB未连接/连接或者连接错误状态
07. 蓝牙连接及解除状态
08. 电池余量及充电状态

状态显示的图标说明



01. 按摩椅电源 开/关



02. 按摩椅未连接/连接



03. 音乐未播放/播放



04. AUX未连接/连接



05. USB未连接/连接/连接错误




06. 蓝牙未连接/连接



07. 电池/充电中/电池不够

※ 连接不支持的USB时，显示连接错误图标。


启动按摩椅

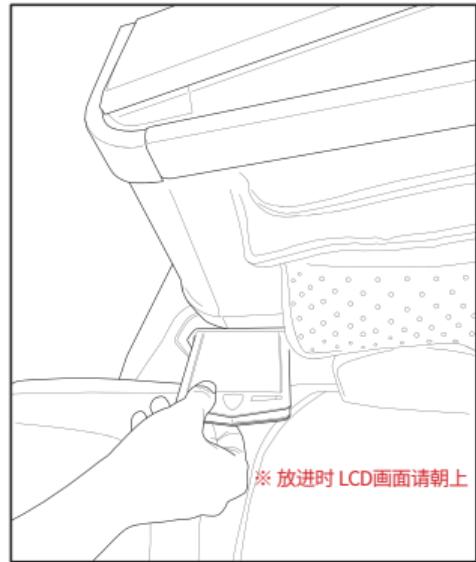

01. 从按摩椅右侧的臂部下端
拿出无线遥控器。



02. 请长按无线遥控器**中间的**
(按摩椅电源)按键。

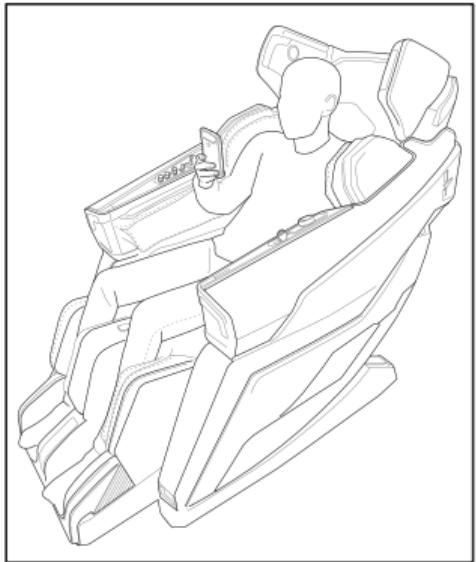


03. 选择菜单启动按摩椅。

无线遥控器外观按键说明

01. 移动到主页菜单
02. 按摩椅电源开/关
03. 按摩椅暂停/再启动
04. 移动到音乐菜单
05. 亮度传感器
06. 遥控器LCD开/关
07. 压力/心跳次数检测电极
08. 指纹传感器

※ 遥控器LCD画面是基本上纵型显示，但是在几个特殊功能上变成横型显示的。
横型显示 - 超级跑车按摩/压力及心跳次数检测电极/舒压按摩。

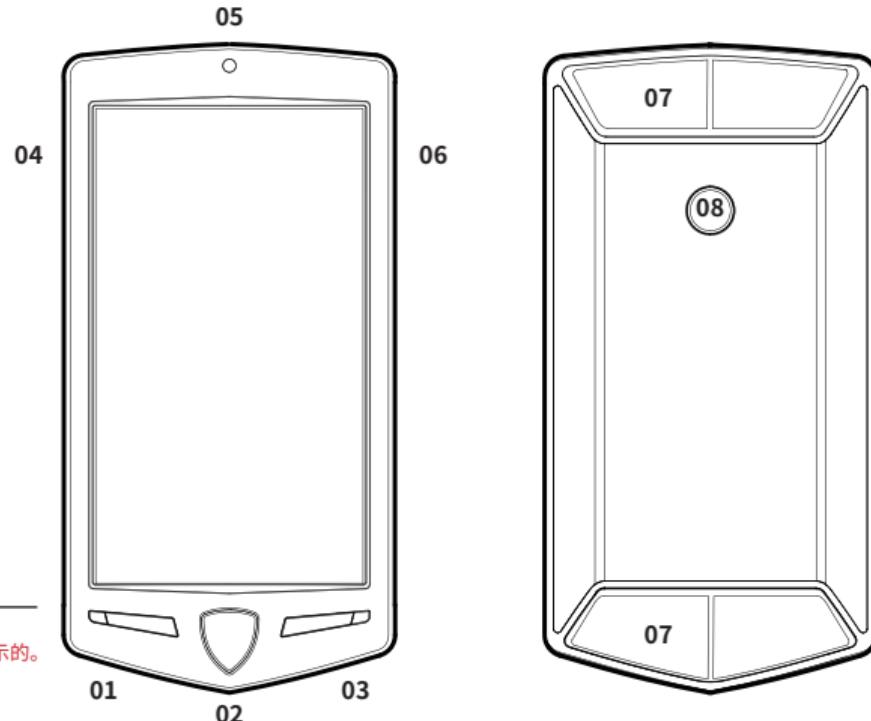

用户注册-新注册



个人信息收集及目的

(株) BODYFRIEND(以下简称“公司”)重视用户的个人信息，并遵守“个人信息保护法”和“信息通信网利用促进及有关信息保护”的法律法规。

“公司”通过“个人信息保护政策”告知用户，用户向公司提供的个人信息以何种方式、何种用途被利用，且公司为保护个人信息安全采取的措施。

“公司”修改“个人信息保护政策”时，通过“网站”的公告栏（或个别通知）告知用户。
○本“个人信息保护政策”是：从2018年6月1日开始实行。

■ 收集个人信息的项目
○个人信息：姓名、性别、身高、体重、出生日期、使用手机号码、日期、时间和服务
○人像等信息：指纹、心电图、测量信息、日期及时间
○个人识别信息：面部识别、手写识别、面部识别
○喜好及按摩程序、偏好设置
○其他使用信息：智能治疗、康复按摩、游戏
○个人信息收集方法：按摩程序使用时为了配合收集软件，个人认证时在填写栏上需本人填写

同意



用户注册

用户名 bodyfriend

q w e r t y u i o p
a s d f g h j k l
z x c v b n m ↵

7123

(1) 新注册 > [个人信息同意] > [图像选择] > [用户注册]

(2) 访客 ※ 访客不能享受个人累计按摩信息服务。

※ 只能使用数字或英文。

用户注册-新注册

性别

男

女

<上一页 下一页 >

出生日期

1980年 月 日

1979年 5月 28日
1980年 6月 29日
1981年 7月 30日

<上一页 下一页 >

为了获取健康信息,
请填写正确的个人信息。

身高 _____ cm | in

体重 _____ kg | lbs


169
170 . 0
171 . 1

<上一页 下一页 >

[选择性别] > [出生日期登记] > [附加信息登记]

※ 为了收到护理信息, 需要填写附加信息。

个人认证注册办法 – 指纹登记

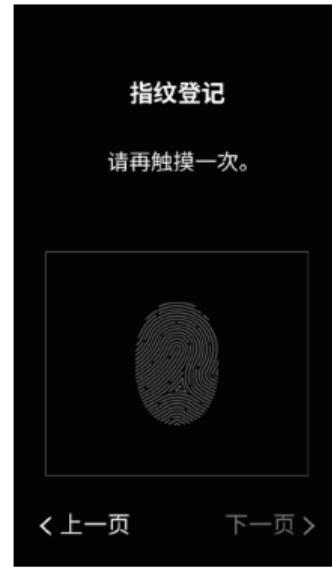

[选择登记办法] > [指纹登记] > [再确认指纹登记] > [指纹登记完毕]

- ※ 个人认证注册办法有指纹登记、手势登记及跳过。
- ※ 如跳过不进行注册个人认证，个人信息可能会泄露。

个人认证注册办法 – 手势登记




[选择登记办法] > [手势登记] > [再确认手势登记] > [手势登记完毕]

※ 个人认证注册办法有指纹登记、手势登记及跳过。

※ 如跳过不进行注册个人认证，个人信息可能会泄露。

用户登记信息/账户编辑、初始化、删除

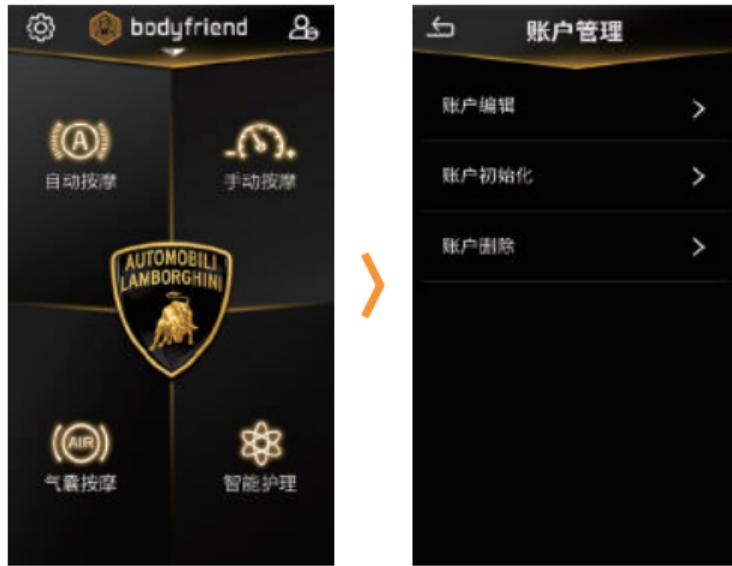

[主页菜单] > [设置] > [账户管理] > [账户编辑]
[主页菜单] > [设置] > [账户管理] > [账户初始化]
[主页菜单] > [设置] > [账户管理] > [账户删除]

使用



按照已登录的信息进行认证后进入主页菜单

※ 要解除个人认证时，请按画面右侧面上端的图像。

※ 按摩进行中 从选择账户退出时，
问记住现有账户，是否维持现有的用户名。

个人认证使用办法 – 个人认证发生错误时




[指纹认证错误/手势认证错误] > [30秒后请重新输入]

※ 指纹认证发生错误，忘记手势认证时，请再确认出生日期。

※ 确认出生年后，才可以进行个人认证。

主页菜单

- 01. 设置
- 02. 用户名
- 03. 退出账户
- 04. 自动按摩
- 05. 手动按摩
- 06. 超级跑车按摩
- 07. 气囊按摩
- 08. 智能护理

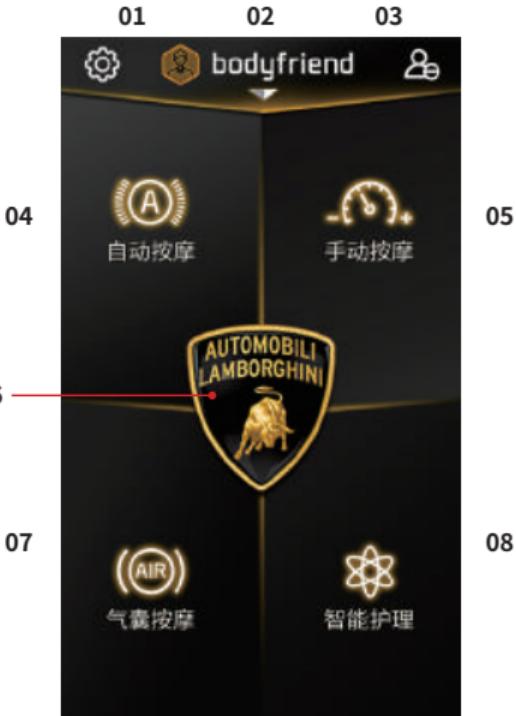

自动按摩

菜单 - 自动按摩



[主页菜单] > [选择自动按摩] > [快捷按摩/一般按摩中选一] > [体型检测中] > [开始按摩]

※ 自动按摩程序中睡眠、考生、提臀、伸展、成长是自动调整角度的程序。

※ 如您在使用中途，自行进行了手动角度调整，剩余的按摩时间不会再根据程序预设的角度调整。

※ 自动按摩中选择快捷按摩-腿部、下半身自动、腿部集中时，不会进行体型检测。

主页菜单 → 自动按摩



快捷按摩

5分钟的简易按摩

- 01. 快捷按摩-全身
- 02. 快捷按摩-颈部/肩部
- 03. 快捷按摩-腰部
- 04. 快捷按摩-腿部

一般按摩

按照不同的主题提供多种自动按摩程序

- 01. 活力
- 02. 休息
- 03. 护理
- 04. 睡眠
- 05. 考生
- 06. 高尔夫
- 07. 提臀
- 08. 上半身自动
- 09. 下半身自动
- 10. 伸展
- 11. 成长
- 12. 淋巴
- 13. 腿部集中
- 14. 颈部•肩部集中
- 15. 消化•解酒

常用按摩 ★+

保存常用的自动按摩

手动按摩


菜单 - 手动按摩



[主页菜单] > [选择手动按摩] > [选择按摩范围] > [选择按摩方式] > [开始按摩]

通过按摩选项，可以调节[按摩幅度]及[按摩球上下移动速度]。

※ 手动按摩中如把按摩范围选为腿部时，不会提供体型检测。

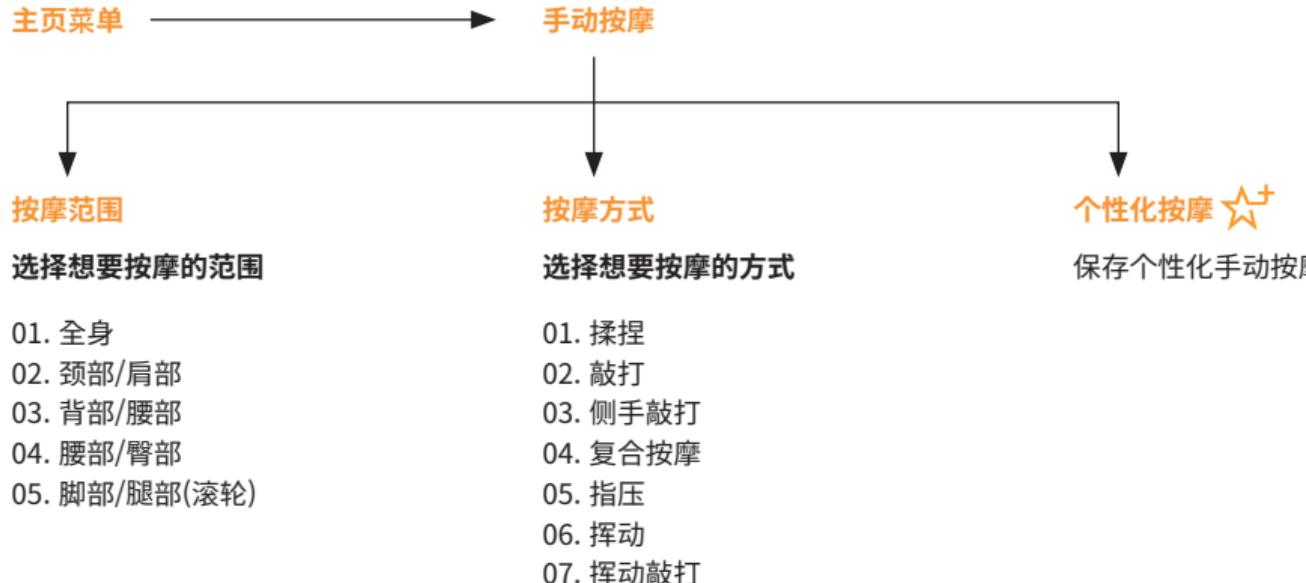

气囊按摩

菜单 - 气囊按摩



[主页菜单] > [选择气囊按摩] > [选择气囊范围] > [选择气囊强度] > [开始按摩]

※ 气囊按摩和手动按摩可同时使用。

主页菜单

气囊按摩



选择气囊按摩的范围

- 01. 全身
- 02. 臀部•肩部
- 03. 背部•腰部
- 04. 臀部
- 05. 脚部•腿部

选择气囊按摩的方式

- 第一阶段
- 第二阶段
- 第三阶段
- 第四阶段
- 第五阶段

按摩进行屏幕 01

- 01. 上一页** 转移到上一页
- 02. 按摩选项变更** 对进行按摩的选项变更设定
- 03. 常用/个性化按摩** 自动按摩 - 常用按摩 / 手动按摩 - 个性化按摩
进行过程中保存及解除相应的按摩
- 04. 按摩强度** 按摩强度调节为5个阶段
- 05. 加热强度** 加热强度调节为5个阶段
- 06. 气囊强度** 气囊强度调节为5个阶段
- 07. 滚轮强度** 滚轮强度调节为5个阶段
- 08. 零重力** 零重力模式 ON/OFF
- 09. 全身角度** 全身角度调节上/下
- 10. 腿部角度** 腿部角度调节上/下
- 11. 腿部长度** 调节腿部长度



按摩进行屏幕 02


- 01. 强度状态** 按摩强度/气囊强度/加热强度/滚轮强度
显示5个阶段
- 02. 按摩时间** 显示剩余时间
- 03. 背部/腰部按摩组件** 显示背部/腰部的按摩组件位置
- 04. 按摩状态** 显示现在按摩进行情况
- 05. 小腿滚轮** 显示小腿滚轮活性化





[主页菜单] > [选择智能护理] > [选择舒压按摩] > [测试压力指数] > [开始个性化按摩]

智能护理 - 舒压按摩 - 测试压力指数

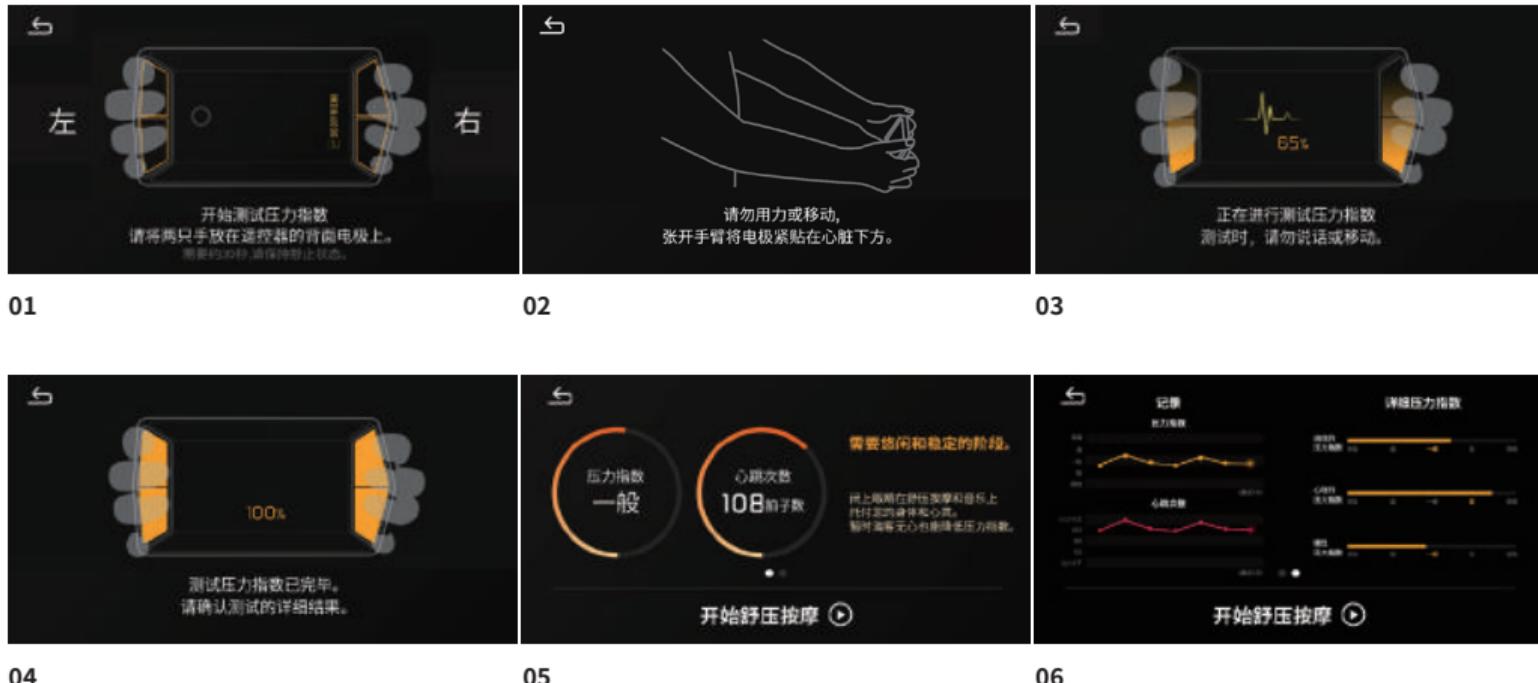

※ [测试压力指数]是横向显示。

智能护理 - 脑部按摩



[主页菜单] > [选择智能护理] > [选择脑部按摩] > [脑部按摩-专注力 / 脑部按摩-舒缓中选一] > [开始按摩]

※ 脑部按摩提供[专注力], [舒缓]两种程序。



智能护理 - 氛围灯



[主页菜单] > [选择智能护理] > [选择氛围灯] > [凉爽的森林 / 一闪一闪星星 / 暖暖的阳光 / 凉快的风中选一] > [开始LED]

※ 氛围灯不提供按摩功能。

※ 只提供LED，可和自动按摩，手动按摩，气囊按摩同时使用。

智能护理 - 护理信息



[主页菜单] > [选择智能护理] > [护理信息]

※ 如果想删除累积的信息，按[护理信息]右侧上端垃圾按键。

※ 护理信息提供护理指数和累计信息功能。

超级跑车按摩



菜单 - 超级跑车按摩

[主页菜单] > [选择超级跑车按摩] > [开始按摩]

※ [超级跑车按摩]是在遥控器上横型显示，可变更自动、手动按摩强度。

※ [超级跑车按摩]是自动调整角度，使用中途，自行进行了手动角度调整，剩余的按摩时间不会再根据程序预设的角度调整。

音乐连接方式



[01. 按遥控器左侧上端的音乐按键] > [变更左侧上端的连接方式] > [选择变更]

简易模式



[主页菜单] > [设置] > [选择变更模式] > [选择简易模式] > [显示简易模式]

※ 在[简易模式]上也可以选择[常用按摩]，使用方法与一般模式相同。

设置说明

01. 变更模式 - 基本模式 / 简易模式

02. 变更按摩时间 - 10分 / 20分 / 30分

※ 特殊按摩（舒压按摩 / 脑部按摩 / 超级跑车按摩）不能变更按摩时间。

03. 屏幕亮度

- 遥控器亮度调节自动 ON / OFF 或手动调节屏幕亮度
- 遥控器屏幕自动关闭，可以设置自动关闭时间

04. 声音

- 按摩椅音量调节 / 遥控器声控 ON / OFF
- 低音炮 ON / OFF
- 智能音响 / 均衡器 / 可以设置语音向导提示

※ 智能音响根据使用者与坐在座位上，可以自动变更的部分和手动音响频道。

遥控器的音响会发出操作音以及放电通知音等。

05. 通知开关 - 通知开或关（其动音 / LED）

06. 按摩椅LED灯 - 可以选择按摩椅LED ON / OFF

07. 自动重新定位 ON / OFF

※ 按摩结束后可以选择按摩椅角度复位 ON / OFF。

08. 语言变更 - 韩文/英文/中文

09. 变更当前时间

10. 遥控器信息

- 遥控器更新 / 版本信息 / 认证信息 / 按摩椅连接再次设置

11. 账户管理 - 账户编辑及账户初始化, 账户删除



[主页菜单] > [设置]



产品规格及参数

产品名称	兰博基尼按摩椅无线遥控器
型号	LBF-R700
OS	Android 7
CPU	Cortex-A53 Quad Core @ 1.4 GHz
LCD Type / 分辨率	5 in TFT / HD (720 x 1280)
触摸方式	电容式触摸方式
电池	2800 mAH

USB	Micro USB / OTG
蓝牙	Bluetooth 4.2
充电方式	无线
	亮度传感器
传感器	指纹传感器
	压力/心跳次数传感器
音响	0.7w / 2.37v

产品保证书

- 1) 根据保证书上的内容, 可以享有无偿保修服务。
- 2) 自购买日起开始无偿保证期, 请购买产品后立即填写购买日。
- 3) 本产品仅限家庭使用。
- 4) 本保证书只在中国国内有效。
- 5) 本保证书不可补发。
- 6) 退换货按中华人民共和国消费者权益保护法条例来实行。
- 7) 退货需在未开箱未开封情况下可退货, 否则一律不可退货。

※ 产品在正常使用状态下发生故障时, 自购买日起享有2年的免费保修。
※ 如本产品在家用以外场所使用时, 缩短保修期。
※ 有偿/无偿保修标准是根据本公司规定的售后服务品目而决定。



BODYFRIEND

产品名称	兰博基尼按摩椅无线遥控器
姓名	
地址	
联系电话	
购买处	
购买处电话	
安装日期	年 月 日
生产日期	年 月 日
产品编码	



사용하기 전 확인사항

주의사항

1. 경고사항 및 주의사항

사용자의 안전을 지키고 재산상의 손해를 막기 위한 내용입니다.

사용하기 전에 반드시 잘 읽고 제품을 올바르게 사용해 주시고,

사용 설명서는 잘 보관하십시오.

- 01) 리모컨에 무리한 힘을 가하거나 던지고 날카로운 것으로 충격을 주는 행동을 하지 마십시오.
- 02) 리모컨을 전자레인지에 가열하거나 전파에 방해를 받을 수 있는 곳 가까이에 두지 마십시오.
- 03) 리모컨을 어린이나 애완동물이 만질 수 없는 곳에 보관하십시오.
- 04) 제품을 젖은 손으로 만지거나 다습한 환경에서 사용하지 마십시오.
- 05) 직사광선이 들어오는 곳과 온도 (-5°C ~ 40°C)가 지나치게 높거나 낮은 곳을 피해주십시오.
- 06) 제품 내부 및 USB Connector에 금속류나 타기 쉬운 이물질을 집어 넣거나 떨어뜨리지 마십시오.
- 07) 제품이 비(물), 음료수, 약풀, 화장품, 땀, 습기 등에 의해 젖었을 경우, 절대로 전원을 켜지 마시고
 마른 헝겊으로 신속히 닦은 다음 가까운 서비스 센터의 점검을 받으십시오.
- 08) 제품 내부에 금속류나 타기 쉬운 이물질을 집어 넣거나 떨어뜨리지 마십시오.
- 09) 화학 용액이나, 세제를 사용하여 리모컨을 청소하지 마십시오.
- 10) 제품을 뒷주머니에 넣거나 허리에 차지 마세요.
- 11) 사용자가 임의로 리모컨 설정이나 운영체제 소프트웨어를 수정하여 기능 및 호환성에 문제가 발생한 경우
 보증 서비스가 적용되지 않습니다.
- 12) 리모컨을 사용자 임의로 분해하거나 개조, 수리하지 마십시오.
- 13) 리모컨에 색을 칠하거나 스티커를 붙이지 마십시오.
- 14) 제품에서 이상한 냄새나 소음, 이를 및 연기가 나는 등의 이상현상이 발생하면
 즉시 제품 사용을 중지하고 서비스 센터에 문의해 주세요.

사용하기 전 확인사항

2. 예외사항 발생 경우

2.1. 배터리 충전이 안될 경우

- 01) 안마의자의 리모컨 거치부에 이물이나 접촉이 잘 안될 수 있는 영향을 줄 수 있는 부분이 없는지 확인해주세요. 안마의자의 충전부와 리모컨이 정상적으로 거치되지 않을 경우 무선 충전에 영향을 받을 수 있으니 확인해 주세요.
- 02) 제품의 온도가 비정상적으로 높을 경우 사용을 중지하고 서비스 센터에 문의해 주세요.
- 03) 제품 우측 무선 충전 부를 통해 충전을 할 수 있으며, 충전 중에 빨간 불이 잘 들어오는지 확인해 주세요. 또한, 5pin Micro USB 충전단자를 이용하여 유선으로 충전할 수 있습니다.
- 04) USB 단자 및 무선 충전기를 이용하여도 정상 충전이 되지 않을 경우 서비스 센터에 문의해 주세요.

2.2. 리모컨이 안 켜질 때

- 01) 장시간 사용하지 않았을 경우 오랜 시간 사용하지 않은 제품은 방전되므로, 배터리가 방전되지 않았는지 확인하고 충전 후에 확인이 필요 합니다.
- 02) 충전 관련 사항은 위 “2.1 배터리 충전이 안될 경우”를 참고해 주세요.
- 03) 충전 후에도 안 켜질 경우 우측 상단의 LCD ON/OFF 버튼과 좌측 상단의 Music 버튼을 동시에 10초 정도 길게 눌러 리모컨을 재 시작 시킬 수 있습니다.
- 04) 충전 및 재 부팅 동작을 해도 리모컨이 켜지지 않을 때 서비스 센터에 문의해 주세요.

2.3. 지문인식 센서 오류 시

- 01) 지문 인식 부 또는 손가락이 지저분하거나 물기가 있다면 깨끗이 닦거나 물기를 제거한 후 지문을 인식시키세요.

- 02) 주위가 건조하면 제품에 정전기가 발생할 수 있습니다. 주위가 건조할 때에는 지문 인식 기능 사용을 피하거나, 기능을 사용하기 전에 금속 물체를 만져서 정전기를 없앤 후 사용하세요.

2.4. 재부팅 해야 할 경우

- 01) 갑자기 소프트웨어가 전혀 움직이지 않거나, 터치가 정상적으로 동작하지 않을 경우 우측 상단의 LCD On/Off 버튼과 좌측 상단의 Music 버튼을 10초 정도 재부팅 될 때까지 눌러주세요.

2.5. 무선리모컨과 안마의자 연결이 끊어졌을 경우

- 리모컨 화면 상단의 “안마의자와의 연결” 아이콘이 비활성화 되어있거나, 리모컨으로 안마의자 조작이 되지 않을 경우, 다음 동작을 수행해 주세요.
- 안마의자와 리모컨간 거리가 5m 이내이고, 두 장치 간에 벽이나 물체가 막혀져있지 않음을 먼저 확인하십시오.
- 01) [설정] - [리모컨 정보] - [안마의자 연결 재 설정] 메뉴를 선택합니다.
 - 02) 연결 재설정 팝업이 뜨면 “예”를 선택합니다.
 - 03) 연결 안내 화면이 뜨면 안마의자에 리모컨을 가까이(약1m이내) 가져가주십시오.
 - 04) 연결이 되면 홈 화면이 자동으로 표시됩니다.
- 리모컨 화면 상단의 “연결”아이콘 활성화를 확인해주십시오.

사용하기 전 확인사항

2.6. 안마의자에서 안마동작이 제대로 되지 않는 경우

리모컨이 정상 동작 하지 않고, 내측키로도 정상 동작 하지 않을 경우

다음 동작을 수행해 주세요.

- 1) 안마의자에서 혼자 내리시지 마시고 빠빅 소리가 날 때 까지 기다려주세요.
- 2) 빠빅 소리가 나면 내측키의 “power” 버튼을 이용하여 안마의자를 재시작 해주세요.
- 3) 전원이 인가되면 안마의자가 원위치로 돌아갑니다.
- 4) 해당 사항에 대해서 서비스 센터로 연락 주세요.

CAUTION

RISK OF EXPLOSION IF BATTERY IS REPLACED

BY AN INCORRECT TYPE.

DISPOSE OF USED BATTERIES ACCORDING

TO THE INSTRUCTIONS

무선 리모컨 10가지 특징



무선 안마 제어
(Bluetooth)



5 in LCD



터치 스크린



무선 충전



조도센서



스트레스 / 심박 측정



개인인증
(지문 등록)



개인인증
(패턴 등록)



음악 제어



슈퍼카 UI

목 차

01. 제품특징	81
02. 상태바 표시	84
03. 안마의자 시작하기	86
04. 무선리모컨 기본 설명	87
05. 사용자 등록 및 개인인증	88
05. 메뉴 설명	95
06. 설정	112
07. 제품 규격 및 사양	113
08. 제품 보증서	114





01. 안마의자 POWER ON / OFF 상태
02. 안마의자의 연결 또는 해제 상태
03. 뮤직 연결 또는 해제 상태
04. 현재 시간 (시간 : 분 AM / PM)
05. AUX 연결 또는 해제 상태
06. USB 미연결 / 연결 또는 연결 오류 상태
07. Bluetooth 연결 또는 해제 상태
08. 배터리 잔량 및 충전 상태

상태 표시 아이콘 설명



01. 안마의자 POWER OFF / ON



02. 안마의자 미연결 / 연결



03. 음악 미재생 / 재생



04. AUX 미연결 / 연결



05. USB 미연결 / 연결 / 연결 오류






06. Bluetooth 미연결 / 연결



07. 배터리 / 배터리 충전 / LOW 배터리

※ 지원하지 않는 USB 연결 시, 연결 오류 아이콘 표기.

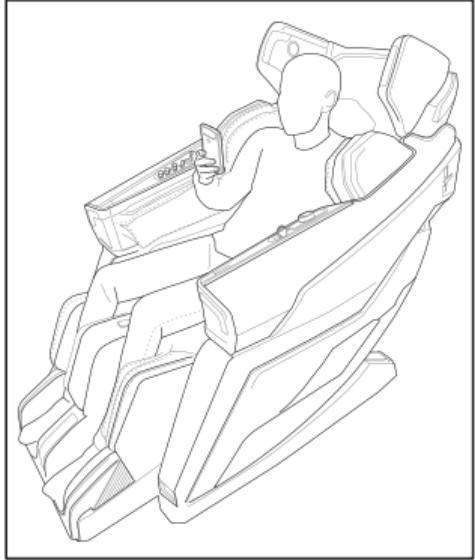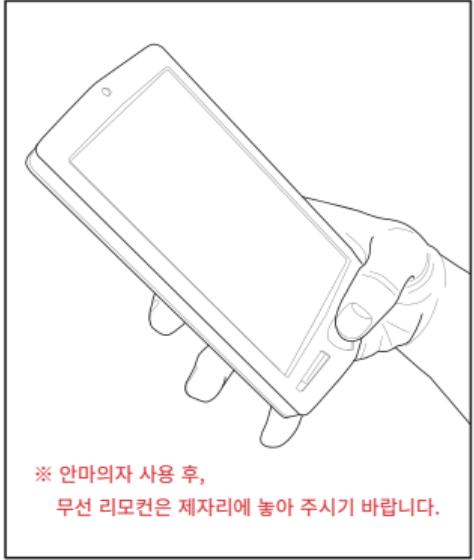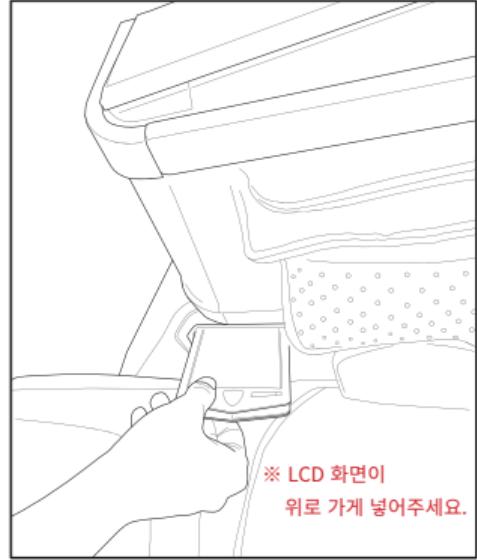


01. 안마의자 **우측 팔안마부 하단**에서 거치 된 무선 리모컨을 꺼냅니다.

02. 무선리모컨의 가운데 버튼(**안마의자 Power**)을 길게 누릅니다.

03. 메뉴를 선택하여 안마의자를 시작합니다.



무선 리모컨 외관 버튼 기본 설명

01. 홈 메뉴로 이동
02. 안마의자 Power ON / OFF
03. 안마동작 일시정지 / 재 실행
04. 뮤직 메뉴로 이동
05. 조도 센서
06. 리모컨 LCD ON / OFF
07. 스트레스 / 심박 측정 전극
08. 지문 센서

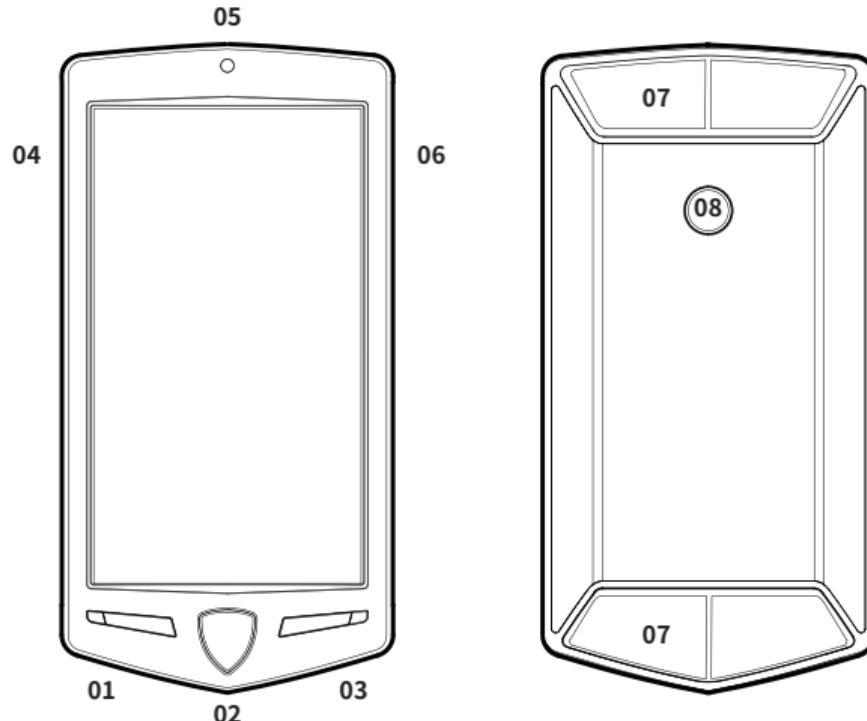

※ 리모컨의 LCD 화면은 기본 디스플레이인 세로모드 이거나,
특정 안마에서는 가로모드로 변경됩니다.
가로모드 - 슈퍼카안마 / 스트레스 • 심박 측정 / 힐링 마사지

사용자 등록 - 신규 등록

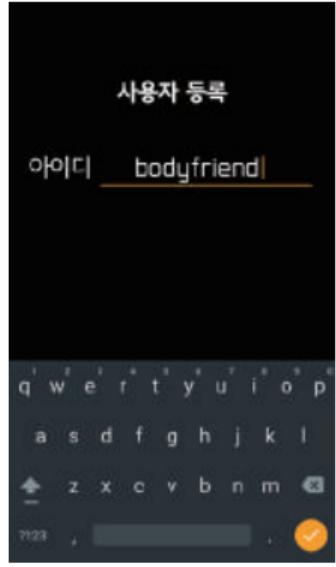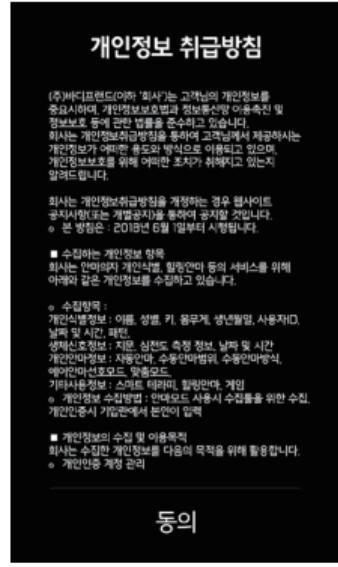

(1) 신규 등록 > [개인정보 취급 동의] > [이미지 선택] > [아이디 등록]

(2) 게스트 ※ 게스트로 안마 진행 시에는 개인화 서비스를 제공받을 수 없습니다.

* 아이디는 영문, 숫자만 입력 가능합니다.

사용자 등록 - 신규 등록

건강정보를 받기 위해서는
정확한 정보를 등록 해 주세요.

키 | _____ cm | in

몸무게 _____ kg | lb

[성별 선택] > [생년월일 등록] > [추가 정보 등록]

※ 케어 정보를 받기 위해서 추가 정보를 입력하셔야 합니다.

개인인증 등록방법 - 지문 등록



[등록방법 선택] > [지문 등록] > [지문 등록 재 확인] > [지문 등록 완료]

※ 개인인증 등록방법에는 지문 등록과 패턴 등록, 그리고 건너뛰기가 있습니다.

※ 건너뛰기로 개인인증을 하지 않는 경우, 개인정보가 노출됩니다.

개인인증 등록방법 - 패턴 등록




[등록방법 선택] > [패턴 등록] > [패턴 등록 재 확인] > [패턴 등록 완료]

※ 개인인증 등록방법에는 지문 등록과 패턴 등록, 그리고 건너뛰기가 있습니다.

※ 건너뛰기로 개인인증을 하지 않는 경우, 개인정보가 노출됩니다.

사용자 등록정보 계정 설정, 초기화, 삭제


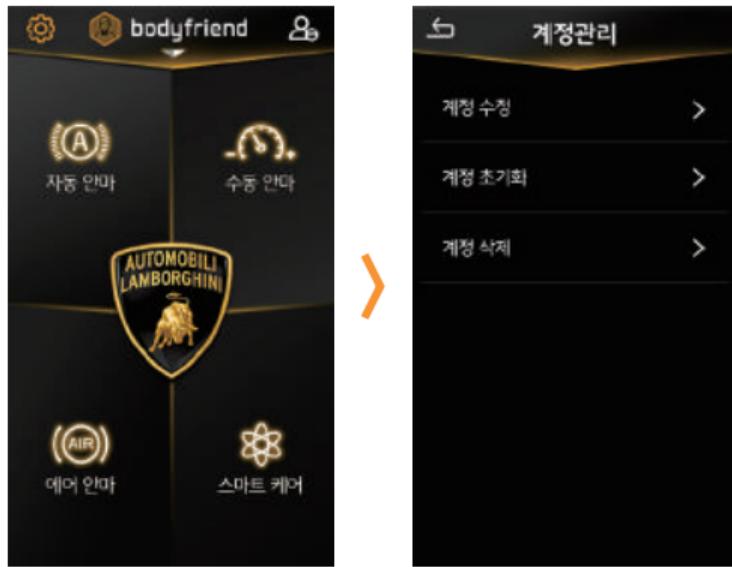


[홈] > [설정] > [설정 관리] > [계정 수정]

[홈] > [설정] > [설정 관리] > [계정 초기화]

[홈] > [설정] > [설정 관리] > [계정 삭제]

사용하기

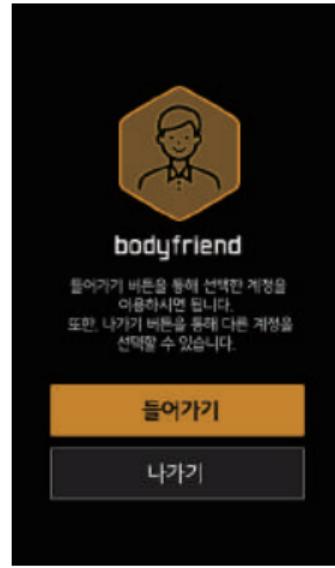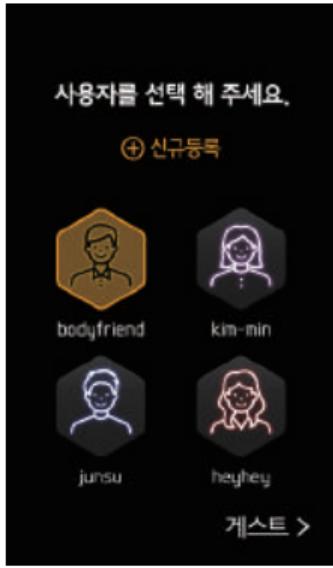


등록한 방법으로 인증하여 메인화면으로 이동

※ 개인인증 해제는 화면 우측 상단의 버튼을 누르면 계정 해제가 가능합니다.

※ 안마진행 중 선택계정에서 나갔을 때, 기존 적용 계정을 기억하여
기존 아이디를 유지할지 여부를 묻습니다.

개인인증 사용방법 - 개인인증 오류 시

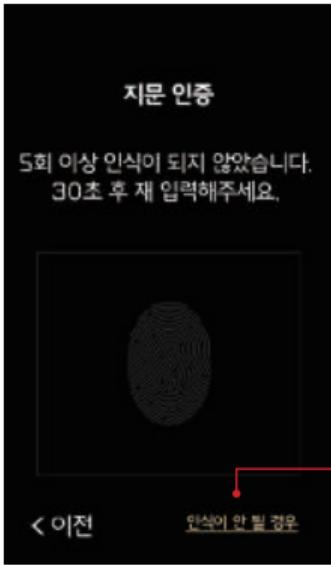

생년월일 확인		
기존에 등록 했던 생년월일을 기재해 주세요.		
1980년	월	일
1979년	5월	28일
1980년	6월	29일
1981년	7월	30일

◀ 이전 확인 >


[지문 인증 오류 or 패턴 인증 오류] > [30초 후 재 입력]

※ 지문 인증이 안되거나, 패턴 인증을 잊어버렸을 경우 등록한 생년월일을 재 확인 합니다.

※ 생년월일로 확인 후, 개인인증을 재 진행합니다.




메인화면

01. 설정
02. 사용자 등록정보
03. 아이디 로그아웃
04. 자동 안마
05. 수동 안마
06. 슈퍼카 안마
07. 에어 안마
08. 스마트 케어

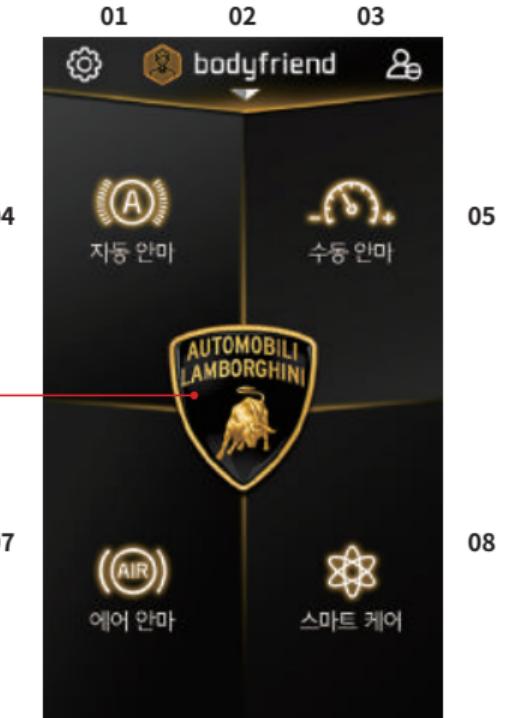

자동 안마

메뉴 - 자동안마

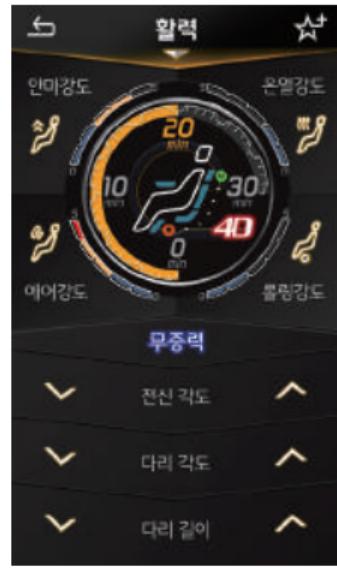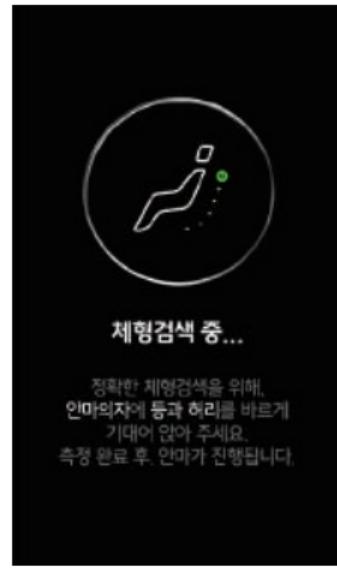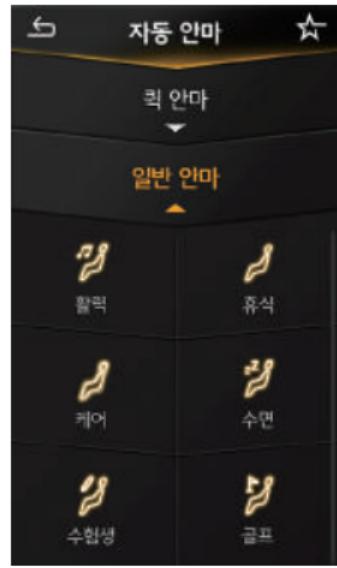


[홈] > [자동 안마 선택] > [퀵 안마 / 일반 안마 중 선택] > [체형검색 중] > [안마 실행]

※ 자동 안마 중 수면, 수험생, 힙업, 스트레칭, 쑥쑥은 자동으로 각도가 변경됩니다.




※ 각도를 임의 조작할 경우 자동 각도가 변경되지 않습니다.

※ 자동 안마 중 퀵 다리, 하체자동, 다리 집중 선택시, 체형검색은 되지 않습니다.

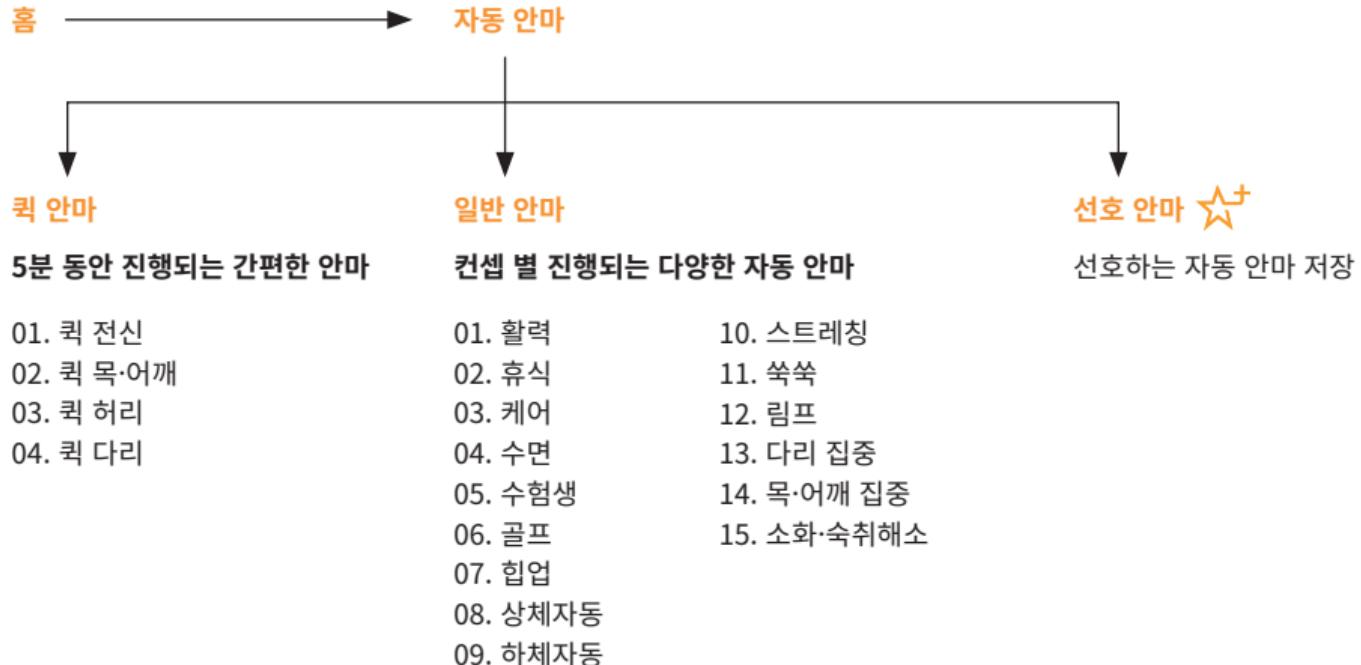

수동 안마


수동안마 - 누르

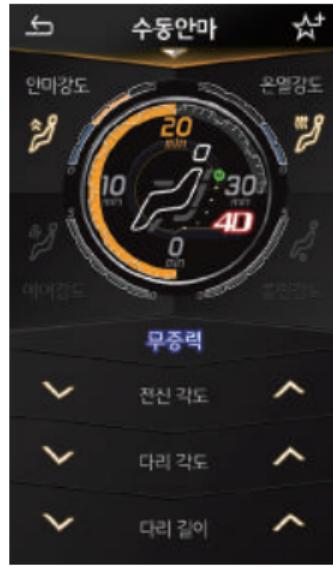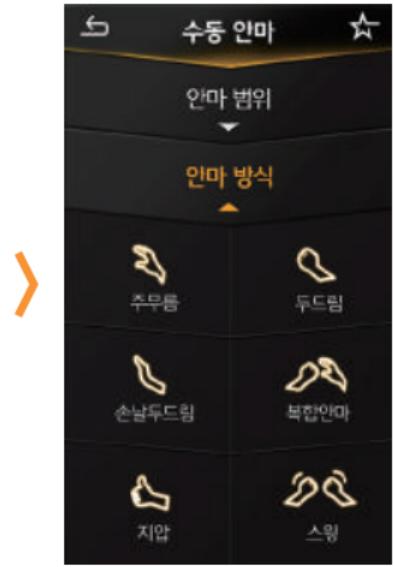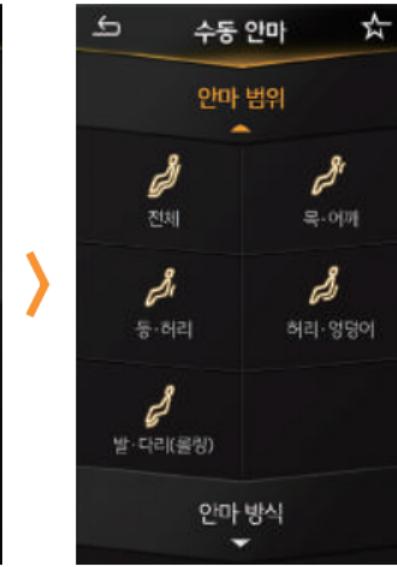

[홈] > [수동 안마 선택] > [안마 범위 선택] > [안마 방식 선택] > [안마 실행]


안마 진행 화면 상단의 제목을 선택하여, [안마 간격] 및 [안마 이동속도]를 변경하실 수 있습니다.

※ 수동 안마 중 안마범위를 발 다리로 선택시, 체형검색은 되지 않습니다.

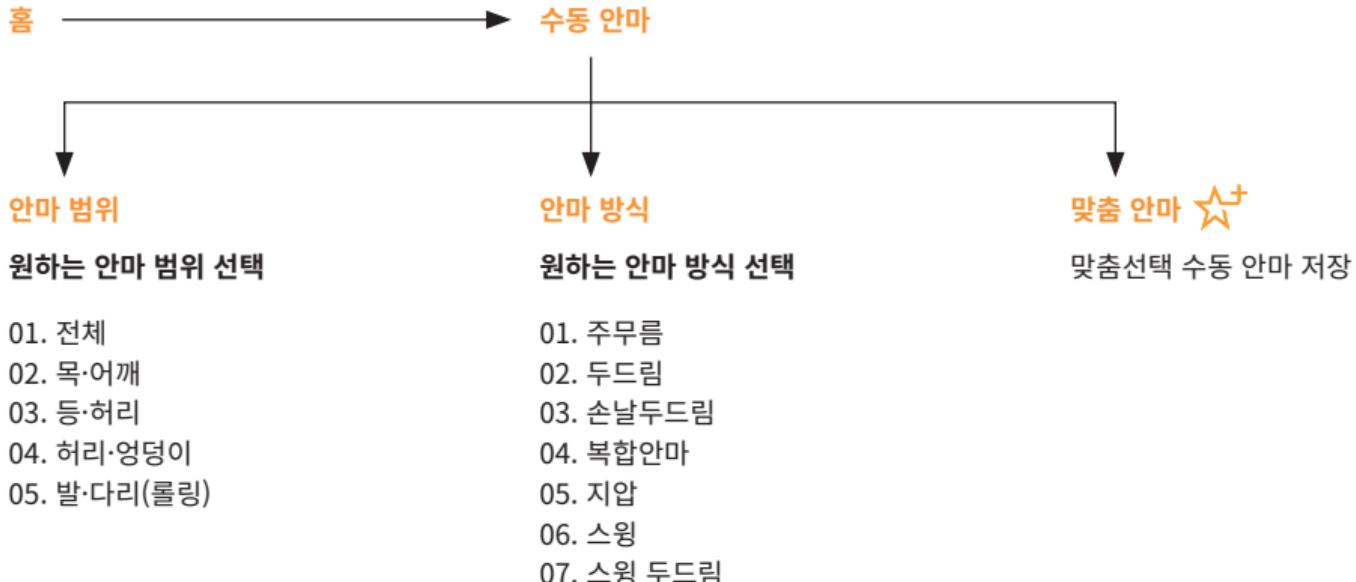

에어 안마

에어안마 - 뉴메

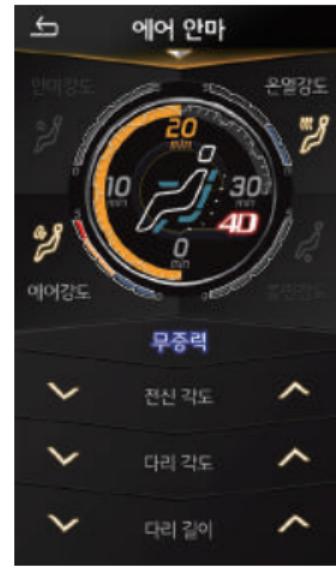

[홈] > [에어 안마 선택] > [에어 범위 선택] > [에어 강도 선택] > [안마 실행]

※ 에어 안마는 수동안마와 함께 사용하실 수 있습니다.

홈**에어 안마****에어 범위****원하는 에어 범위 선택**

- 01. 전체
- 02. 팔·어깨
- 03. 등·허리
- 04. 엉덩이
- 05. 발·다리

에어 강도**원하는 에어 강도 선택**

- 1단계
- 2단계
- 3단계
- 4단계
- 5단계

안마 실행 화면 01

화면
선택
안마
선택
화면

01. 이전 이전 페이지로 이동
02. 안마 옵션 변경 진행되는 안마에 대한 옵션 설정을 변경
03. 선호 / 맞춤 안마 자동안마 - 선호 안마 / 수동안마 - 맞춤 안마 실행 중 해당 안마를 저장 및 해제
04. 안마 강도 안마 강도를 5단계로 조절
05. 온열 강도 온열 강도를 5단계로 조절
06. 에어 강도 에어 강도를 5단계로 조절
07. 롤링 강도 롤링 강도를 5단계로 조절
08. 무중력 무중력모드 ON / OFF
09. 전신 각도 전신 각도를 상 / 하로 조절
10. 다리 각도 다리 각도를 상 / 하로 조절
11. 다리 길이 다리 길이를 조절






안마 실행 화면 02

- | | |
|------------------|--------------------------------------|
| 01. 강도 상태 | 안마강도 / 에어강도 / 온열강도 / 롤링강도
5단계로 표기 |
| 02. 안마시간 | 안마 남은시간 표기 |
| 03. 등 / 허리 안마 모듈 | 등과 허리 부위 안마 모듈 위치 표기 |
| 04. 안마 상태 | 진행 중인 안마 상태를 확인 할 수 있는 영역 |
| 05. 종아리 롤링 | 종아리 롤링 상태 표기 |



스마트 케어 - 힐링 마사지

메뉴 - 스마트 케어

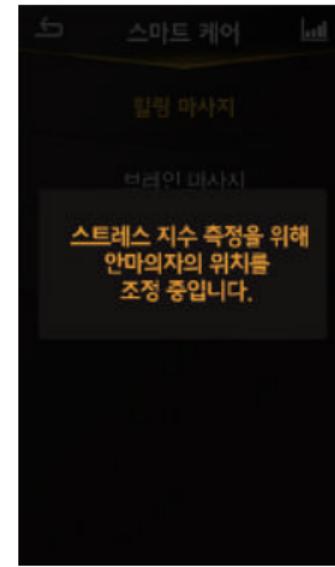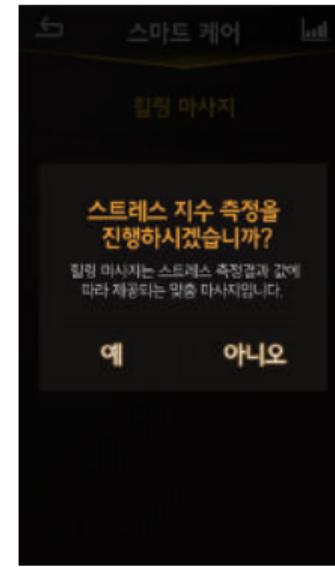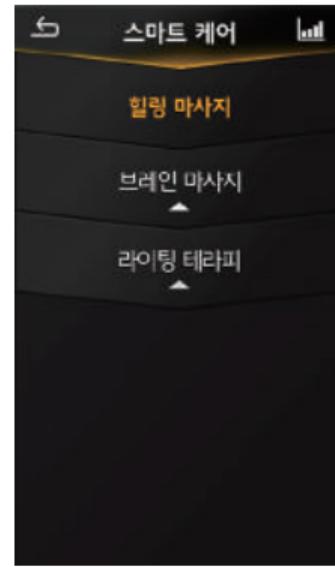



[홈] > [스마트 케어 선택] > [힐링 마사지 선택] > [스트레스 지수 측정] > [맞춤 안마 실행]

스마트 케어 - 힐링 마사지 - 스트레스 지수 측정



※ [스트레스 지수 측정]은 가로모드로 실행 됩니다.

메뉴 - 스마트 케어

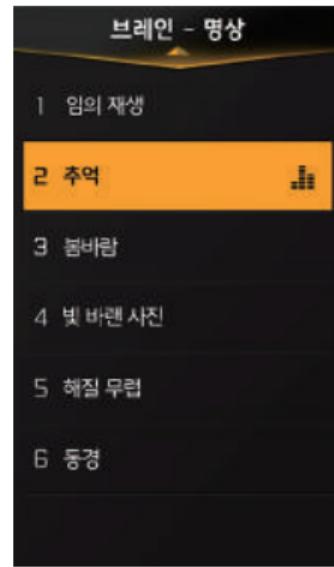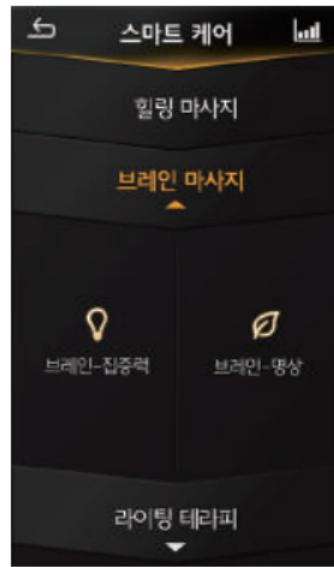


[홈] > [스마트 케어 선택] > [브레인 마사지 선택] > [브레인 - 집중력 / 브레인 - 명상 중 선택] > [안마 실행]

※ 브레인 마사지는 [집중력], [명상] 2가지를 제공합니다.



스마트 케어 - 라이팅 테라피


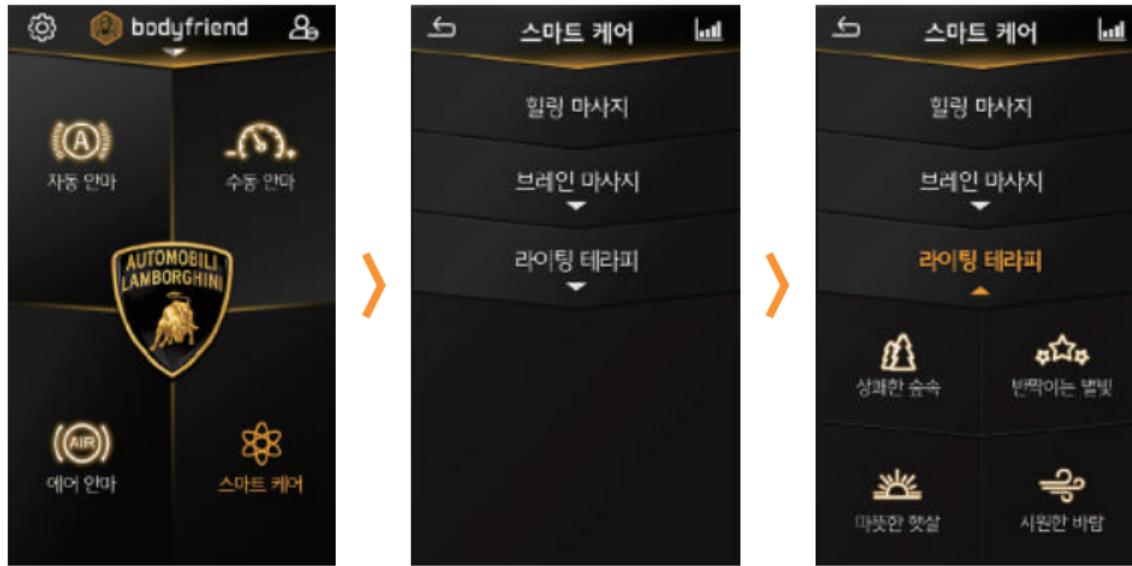


[홈] > [스마트 케어 선택] > [라이팅 테라피 선택] > [상쾌한 숲속 / 반짝이는 별빛 / 따뜻한 햇살 / 시원한 바람 중 선택] > [LED 실행]

※ 라이팅 테라피는 별도의 안마를 제공하지 않습니다.

※ LED만 제공되며, 자동안마 및 수동안마, 에어안마와 함께 사용하실 수 있습니다.

메뉴 - 스마트 케어

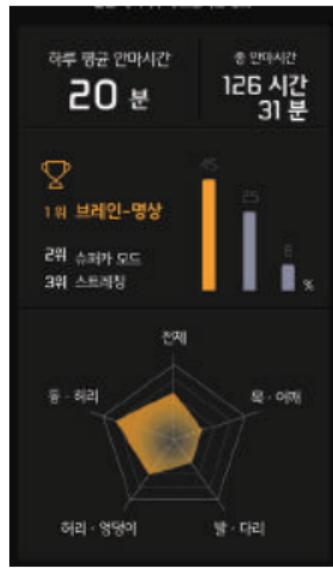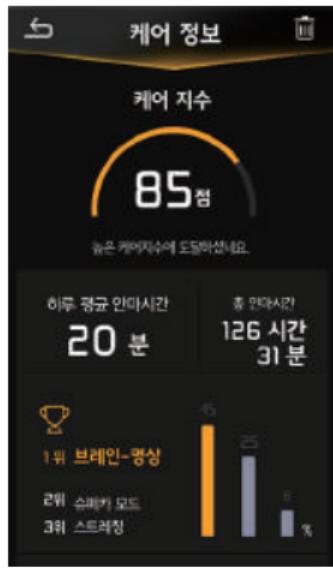


아래로 스크롤

[홈] > [스마트 케어 선택] > [케어 정보]

※ [케어 정보]의 우측 상단 휴지통 버튼을 통해 누적 케어정보를 삭제 할 수 있습니다.

※ [케어 정보]는 케어 지수와 안마 히스토리 기능을 제공합니다.

슈퍼카 안마

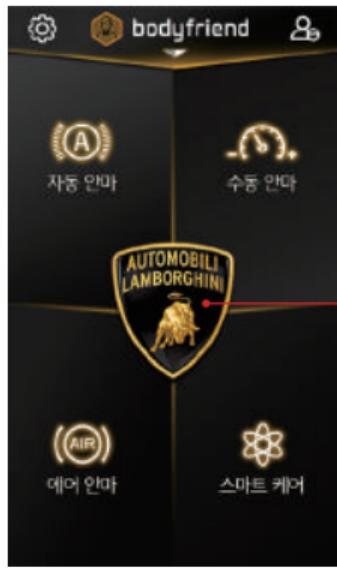

메뉴 - 슈퍼카 안마


[홈] > [슈퍼카 안마 선택] > [안마 실행]

※ [슈퍼카 안마]는 가로모드이며, 안마세기를 자동, 수동으로 변경 가능합니다.

※ [슈퍼카 안마]는 자동으로 각도가 변경되는 안마입니다. 각도를 임의 조작할 경우 자동 각도가 변경되지 않습니다.




뮤직 연결 방식

메뉴 - 무직

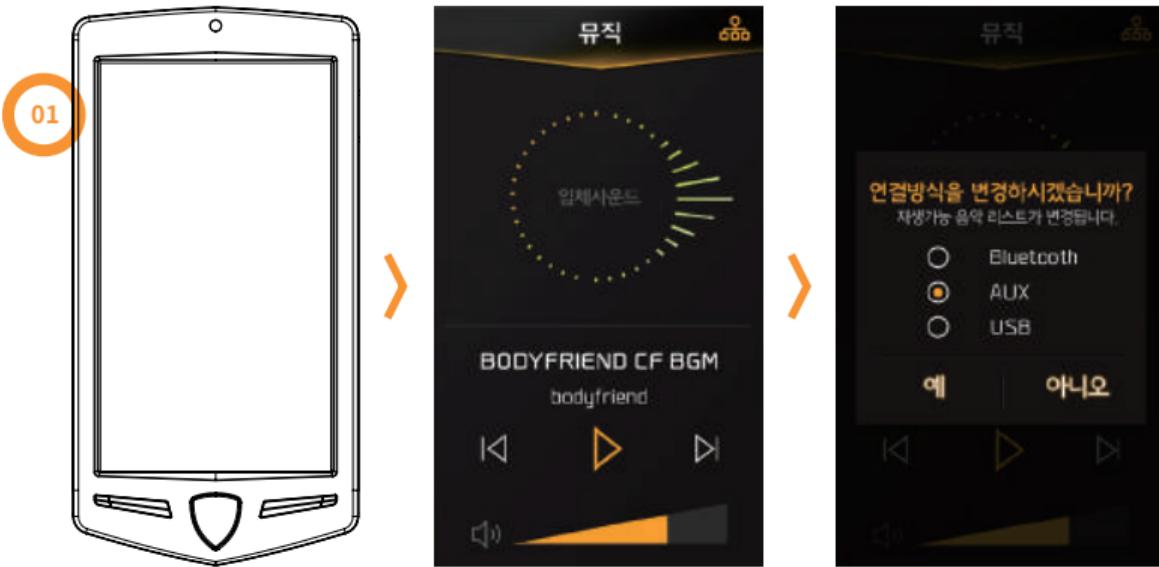

[01. 리모컨 왼쪽 상단 뮤직 버튼 누르기] > [우측 상단 연결 방식 변경] > [선택 변경]

이지모드

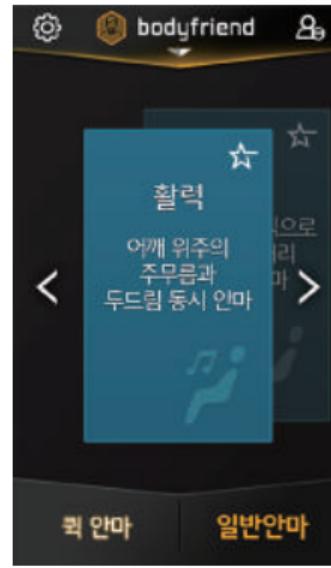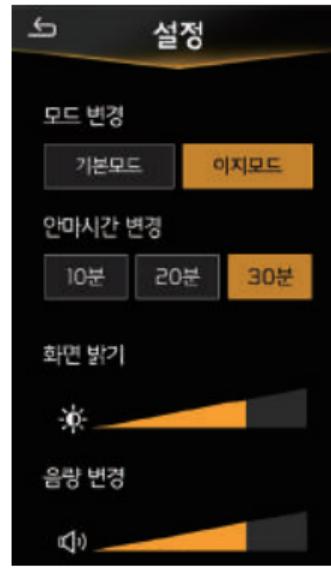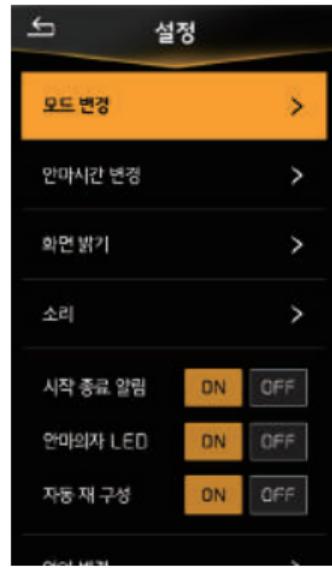

[홈] > [설정] > [모드 변경 선택] > [이지모드 선택] > [이지모드 홈]

※ [이지모드]에서도 [선휴 암마]를 선택 할 수 있으며, 사용방법은 기본 모드와 동일합니다.

설정 설명

설정

01. 모드 변경 - 기본 모드 / 이지 모드

02. 안마 시간 변경 - 10분 / 20분 / 30분

※ 퀵 안마 및 특화 안마(힐링 마사지/ 브레인 마사지/ 슈퍼카안마)에서는 설정에서 시간 변경이 불가합니다.

03. 화면 밝기

- 리모컨 화면 밝기 자동 ON / OFF 또는 수동 화면 밝기 조정 가능
- 리모컨 화면 거울 및 시간 설정 가능

04. 소리

- 안마의자 음량 조절 / 리모컨 입력음 ON / OFF /

우퍼 사운드 ON / OFF /

스마트사운드 / 이퀄라이저 / 음성안내 조정 가능

※ 스마트 사운드의 경우,

사용자의 착석여부에 따라 자동 채널 변경되는 부분과 수동 사운드 채널 변경이 가능합니다.
리모컨의 스피커는 터치 조작음과 방진을 일리는 알림음 등을 출력합니다.

05. 시작 종료 알림 - 시작 및 종료 퍼포먼스 (시동음 / LED) 알림

06. 안마의자 LED - 안마의자 LED ON / OFF 선택 가능

07. 자동 재 구성 ON / OFF

※ 안마종료 후, 안마의자 각도 원상복귀 여부 ON / OFF 선택 하실 수 있습니다.

08. 언어변경 - 한국어 / 영어 / 중국어 언어 변경

09. 현재시간 변경


10. 리모컨 정보

- 버전 정보 / 법률 정보 / 인증 정보 / 안마의자 연결 재 설정

11. 계정관리 - 계정 수정 및 계정 초기화, 계정 삭제



[홈] > [설정]

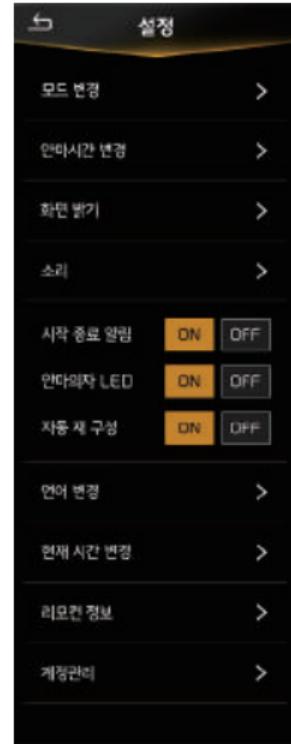

제품규격 및 사양

제품명	람보르기니 안마의자 특정 소출력 무선기기 (무선데이터통신시스템용 무선기기)
모델명	LBF-R700
OS	Android 7
CPU	Cortex-A53 Quad Core @ 1.4 GHz
LCD Type / 해상도	5 in TFT / HD (720 x 1280)
터치방식	정전식 터치 방식
배터리	2800 mAH

USB	Micro USB / OTG
블루투스	Bluetooth 4.2
충전방식	무선
	조도 센서
센서	지문 센서
	스트레스 / 심박 센서
스피커	0.7w / 2.37v

제품 보증서

- 1) 본 제품에 대한 품질보증은 보증서에 기재된 내용으로 보증 혜택을 받습니다.
- 2) 무상서비스기간은 구입일로부터 산정되므로 구입일자를 기재 받으시기 바랍니다.
- 3) 본 제품을 개인, 가정용으로만 사용하시기 바랍니다.
- 4) 본 보증서는 대한민국 내에서만 유효합니다.
- 5) 본 보증서는 재발행 하지 않습니다.

※ 정상적인 사용상태에서 고장이 발생하였을 경우, 구입일로부터 산정된 보증기간의 무상 A/S를 받으실 수 있습니다.
 (1년 이상의 무상기간을 적용 받을 경우에는 관련자료 또는 무상기간이 표시된 스티커를 소지 또는 제품에 부착하셔야 합니다.)

※ 본 제품을 가정용 이외의 용도로 사용할 경우, 보증기간은 단축 적용됩니다.

※ 유/무상 서비스 기준은 당사가 규정한 A/S 품목에 준하여 적용됩니다.

※ 리모컨의 품질보증기간은 2년입니다.



제품명	람보르기니 안마의자 특정 소출력 무선기기 (무선데이터통신시스템용 무선기기)		
성명			
주소			
연락처			
구입처명			
구입처 연락처			
설치일자	년	월	일
제조일자	년	월	일
제조번호			





AUTOMOBILI LAMBORGHINI MASSAGE CHAIR CONTROLLER



The trademarks, copyrights and design rights in and associated with Lamborghini, Lamborghini with Bull and Shield Device are used under license from Automobili Lamborghini S.P.A., Italy