



# USER MANUAL

# QI1851

# Content

<b>1 General Information.....</b>	<b>3</b>
1.1 Profile .....	3
1.2 Safety Information.....	3
<b>2 Your phone .....</b>	<b>4</b>
2.1 Phone overview .....	4
2.2 Functions of Keys.....	4
<b>3 Getting started .....</b>	<b>6</b>
3.1 Installing the SIM Cards and the Battery .....	6
3.2 Installing T-Flash Card .....	8
3.3 Charging the Battery.....	8
3.4 Powering On/Off the Mobile Phone .....	11
<b>4 Input method.....</b>	<b>12</b>
4.1 Key for Input Methods .....	12
4.2 To Shift Entry Methods .....	12

4.3 Numeric Input.....	12
4.4 English input and numeric input:.....	13
4.5 Inserting a Symbol.....	14
<b>5 Using the Menus.....</b>	<b>14</b>
5.1 Phonebook.....	14
5.2 SOS.....	15
5.3 Settings .....	15

# 1 General Information

## 1.1 Profile

Please read this pamphlet carefully in order to make your phone in perfect condition.

Our company may change this mobile phone without prior written notice and reserves the final right to interpret the performance of this mobile phone.

Due to different software and network operators, display on your phone may be different, refer to your phone for details.

## 1.2 Safety Information

If your phone has lost or been stolen, notify the telecommunication office the SIM card is disabled (network support is required). This can avoid economic loss caused by unauthorized use.

Please take measures as following to avoid your phone being unauthorized used:

- Set PIN code of SIM card
- Set phone password

## 2 Your phone

### 2.1 Phone overview

The phone has many powerful function and good appearance.

### 2.2 Functions of Keys

- ◆ FM key

Press the key to enter the FM when the earphone inside in standby state .

- ◆ SMS key

Press the key to enter the FM in standby state

- ◆ Music key

Press the key to enter the music in standby state

- ◆ Alarm key

Press the key to enter the alarm in standby state

- ◆ Dial key

Press it to originate a call by entering the called number or selecting a contact from the phonebook; or press it to receive an incoming call; or press it in standby state to show the latest call records.if you want to dial a call,

- ◆ End key

Press it to end a call being dialed or end an ongoing call; or press it to exit the menu and return to the standby state. You can hold it for two or three seconds can power on/off the mobile phone

◆ Direction key

Press them to scroll the options when browsing a function list. In edit state, press direction keys to navigate.

◆ Left and right soft key

The bottom line on the screen displays the functions of the Left and Right soft key.

◆ OK key

Press it to confirm a selection.

◆ SOS key

The SOS key on the back of the phone. Long press the SOS key to call the Emergency number in standby state

◆ **Number keys, \* key and # key**

Press number keys 0 through 9 to input or edit state to input numbers and characters;

In idle screen, you can press left soft key then press \* to lock/unlock keypad.

Press two times the key \* to input "+" in standby interface. When the symbol "+" appears,

Press the \* key quickly to input "P" or "W", "P" and "W" are used for calling the extension; "+" are used for dialing an international call.

### 3 Getting started

#### 3.1 Installing the SIM Cards and the Battery

A SIM card carries useful information, including your mobile phone number, PIN (Personal Identification Number), PIN2, PUK (PIN Unlocking Key), PUK2 (PIN2 Unlocking Key), IMSI (International Mobile Subscriber Identity), network information, contacts data, and short messages data.

Note:

*After powering off your mobile phone, wait for a few seconds before removing or inserting a SIM card.*

*Exercise caution when operating a SIM card, as friction or bending will damage the SIM card.*

*Properly keep the mobile phone and its fittings such as the SIM cards beyond children's reach.*

Installation

- ◆ Hold the End key for a while to power off the mobile phone.
- ◆ Take the back cover above the battery away.
- ◆ Take the battery away.
- ◆ Insert the SIM card into the SIM card slot lightly with the corner cutting of the card aligning to the notch of the slot and the gold plate of the card facing download, till the SIM card cannot be further pushed in.
- ◆ With the metallic contacts of the battery facing the metallic contacts in the battery slot, press the battery down until it locks into place.

**Using code**

The mobile phone and the SIM cards support sorts of passwords, in order to prevent the phone and the

SIM cards from being misused. When you are prompted to input any of the codes mentioned below, just input the correct code and then press the OK key. If you input a wrong code, clear it and then input the correct code.

#### ◆ **Phone lock code**

The phone lock code may be set to prevent your mobile phone from being misused. In general, this code is provided along with the mobile phone by the manufacturer. The initial phone lock code is set to 1122 by the manufacturer. If the phone lock code is set, you need to input the phone lock code when powering on the mobile phone.

#### ◆ **PIN**

The PIN (Personal identification number, 4 to 8 digits) code prevents your SIM card from being used by unauthorized people. In general, the PIN is supplied with SIM card by the network operator. If PIN check is enabled, you need to input the PIN each time when you power on your mobile phone. The SIM card will be locked if you input wrong PIN code for three times.

Unlocking methods as follows:

- Input the correct PUK according to the screen tips to unlock the SIM card.
- Then input the new PIN and press the OK key.
- Input the new PIN again and then press the OK key.
- If the input PUK is correct, the SIM card will be unlocked and the PIN will be reset.

*Note: The SIM card will be locked if you input wrong PIN code for three times. To unlock the SIM card, you need to input the PUK. In general, the PUK can be obtained from the network operator.*

## ◆ PUK

The PUK code (Personal Unlocking Key) is required to change a blocked PIN. It is supplied with SIM card. If not, contact your network operator. If you input wrong PUK code for 10 times, SIM card will be invalid. Please contact the network operator to replace the SIM card.

## ◆ Barring code

A barring code is required for setting the call barring function. You can obtain this code from the network operator to set the call barring function.

### 3.2 Installing T-Flash Card

The T-Flash card is a pluggable mobile storage card inside the mobile phone.

To install the T-Flash card, open its latch, place its indented side downward, insert the card into the card slot.close its latch.

Note:

- 1. The mobile phone cannot automatically identify the T-flash card being inserted when the mobile phone is powered on. You must power off the mobile phone and then power it on, so that the phone can identify the T-Flash card.*
- 2. The T-Flash card is a miniature object. Keep it out of the reach of children for fear that children swallow it!*

### 3.3 Charging the Battery

The lithium battery delivered with the mobile phone can be put into use immediately after being unpacked.

## Battery level indication:

- ◆ Your mobile phone can monitor and display the battery state.
- ◆ Normally the remaining energy of the battery is indicated by the battery level icon at the upper right corner of the display screen.
- ◆ When the battery energy is insufficient, the mobile phone prompts "Battery low". If you have set an alert tone, an alert tone will be given off when the battery level is too low.
- ◆ A charging animation appears when the battery is being charged. When the charging is complete, the animation disappears.

## Using a travel adapter:

- ◆ Install the battery into the mobile phone before charging the battery.
- ◆ Connect the adapter of the travel charger with the charging slot in the mobile phone. Ensure that the adapter is fully inserted.
- ◆ Insert the plug of the travel charger to an appropriate power outlet.
- ◆ During the charging, the battery level grid in the battery icon keep flickering till the battery is fully charged.
- ◆ It is normal when the battery becomes hot during the charging period.
- ◆ The battery icon does no longer flicker when the charging process ends.

## Note:

*Ensure that the plug of the charger, the plug of the earphone, and the plug of the USB cable are inserted in the right direction. Inserting them in a wrong direction may cause charging failure or other problems.*

*Before the charging, ensure that the standard voltage and frequency of the local mains supply match the*

*rated voltage and power of the travel charger.*

## Using the Battery

The performance of a battery is subject to multiple factors: radio network configuration, signal strength, ambient temperature, chosen functions or settings, phone fittings, and the voice, data or other application mode you choose to use.

To guarantee the optimal performance of your battery, please stick to the following rules:

- ◆ Use only the battery provided by the vendor. Otherwise, damages or even injuries could be caused during the charging.
- ◆ Power off the mobile phone before removing the battery.
- ◆ The charging process lasts a longer time for a new battery or a battery not in use for long. If the battery voltage is too low to enable the mobile phone to be powered on, charge the battery for a longer time. In this case, the battery icon does not flicker until a long time after the battery enters the charge status.
- ◆ During the charging, ensure the battery is placed in a room temperature environment or in an environment close to room temperature.
- ◆ Immediately stop using the battery if the battery produces odor, overheat, cracks, distort or has other damage, or if the electrolyte leaks.
- ◆ The battery wears out with use. A longer charging time is required as the battery is put into use for a long time. If the total conversation duration decreases but the charging time increases even though the battery is properly charged, purchase a standard battery from the OEM or use a battery approved by our company. Using any poor-quality fittings will cause harm to your mobile phone or even incur danger!

**Note:** To guarantee your personal safety and protect the environment, do not litter the battery! Return the old battery to the mobile phone manufacturer or place it in specified battery reclamation areas. Do not litter any battery with other rubbish.

**Warning:** Short-circuits of the battery may cause explosion, fire, personal injury or other severe consequences!

### **3.4 Powering On/Off the Mobile Phone**

Hold the End key for a while to power on the mobile phone. A power-on animation appears on the display screen.

Input the phone lock code and press the OK key if the mobile phone prompts you to input the phone lock code. The original code is 1122.

Input the PIN and press the OK key if the mobile phone prompts you to input the PIN. The PIN is provided by the network operator for new opening SIM card.

Enter the standby interface.

To power off the mobile phone, hold the End key for a while.

## 4 Input method

This mobile phone provides English input, smart English input and numeric input method. You can use these input methods when editing the phonebook, short messages, files and greeting text.

### 4.1 Key for Input Methods

After you enter an edit window such as a window for editing the phonebook, short messages or the memorandum, an icon is displayed to indicate the current input method:

Numeric input: “123”

English input: “ABC, abc, Abc”

### 4.2 To Shift Entry Methods

Press the # key to switch between input methods.

### 4.3 Numeric Input

You can input numbers with the numeric input method. Press a number key to input the corresponding number.

#### 4.4 English input and numeric input:

The keyboards for English input and numeric input are defined in the following table:

Key	Character or Function	Remarks
Number key 1	., - ? ! '@ : # \$ /_ 1	
Number key 2	ABCabc2	
Number key 3	DEFdef3	
Number key 4	GHIghi4	
Number key 5	JKLjkl5	
Number key 6	MNOmno6	
Number key 7	PQRSpqrs7	
Number key 8	TUVtuv8	
Number key 9	WXYZwxyz9	
Number key 0	0	
# key	Press it to switch between input methods	
Left direction key	Press it to move to the left	
Right direction key	Press it to move to the right	
Left soft key	Equivalent to OK or Options	
Right soft key	Equivalent to Back or Clear	
End key	Press it to return to the standby interface	

English input:

- Each key is used to represent multiple characters. Quickly and continuously press a key till the character you want appears. Input the next character after the cursor moves.
- Press the # key to switch between input methods
- To input a blank, switch to the English input mode (in upper or lower case) and then press number key 0.
- To clear wrong inputs, press the **Right soft** key.

#### 4.5 Inserting a Symbol

Press \* key to enter the **Select symbol** interface, use direction keys or number keys to select a symbol you want.

### 5 Using the Menus

#### 5.1 Phonebook

The mobile phone can store up to 500 telephone numbers. The telephone numbers that a SIM card can store depends on the storage capacity of the SIM card. The telephone numbers stored in the mobile phone and in the SIM cards form a phonebook. The phonebook search function enables you to view contacts. You can search a contact as required from the phonebook. Select this option, in the **edit** interface, input the name of the contact you want to search or the first letter(s) of the name. All the contacts meeting the search condition are listed. Press the Up and Down direction keys to browse the contacts and select contact.

This function enables you to view the internet. Your phone will ask you with existed way. You can start to view only by starting corresponding way.

*Note: Consulting the local network operator for related fee and specific setup.*

## 5.2 SOS

You can save the SOS message and the recipients in this function, when you open this function, you can long press the SOS key to send a message for help.

## 5.3 Settings

### Profiles

The mobile phone provides multiple user profiles, so that you can customize some settings to adapt to the specific events and environments.

Customize the user profiles according to your preference and then activate the user profiles. The user profiles fall into two scenarios: **General, Silent**. In the standby mode long press # can switch scenarios.

### Phone settings

- ◆ **Display:**Users can access this item to set Wallpaper, idle display, contrast, Backlight, keypad backlight time etc.
- ◆ **Date & time:**set the time, set the date, Set the date format, the time format and update time of the location.

*Note: If you remove the battery from the mobile phone or if the battery energy was exhausted a long*

*time ago, you may need to reset the date and time when re-inserting the battery or powering on the mobile phone after recharging.*

- ◆ **Language settings:** Select the display language for the mobile phone.
- ◆ **Shortcut settings:** Select preferred function as shortcut on screen direction key as needed
- ◆ **Auto power on/off :** Set the time when the mobile phone will be automatically powered on or off.

## **Call Settings**

- ◆ **Dual-SIM:** You can set standby mode, reply by original SIM, set SIM name and set dual SIM call divert through this function.
- ◆ **Call divert:** this network function enables you to forward incoming calls to another number you have previously specified.
- ◆ **Call waiting:** After you choose Activate, the mobile phone will contact the network. A moment later, the network will make a response and send a message to acknowledge your operation. If the call waiting function is activated, the network will alert you and the mobile phone screen will display the incoming call number if others are calling you while you are already in a conversation.
- ◆ **Call barring:** The call barring function enables you to bar calls as needed. When setting this function, you need to use a network barring code, which can be obtained from the network operator. If the code is wrong, an error message will be prompted on the screen. After selecting a call barring option, continue to select Activate or Deactivate. The mobile phone will prompt you to input the call barring code and then contact the network. A moment later, the network will make a response and send the operation results to the mobile phone.

- ◆ **Hide ID:** You can select hide ID, display own ID and or display ID by network.
- ◆ **Others:** You can set call time minute reminder, auto redial, Any-key answer and Auto record voice call through this function.

## **Security settings**

This function provides you with related settings about safety use

- ◆ **PIN:** To activate PIN lock, you need to input the correct PIN code. If you set PIN lock to On, you need to input the PIN each time you power on the mobile phone. In the case you input a wrong PIN for three consecutive times; you need to input the PIN Unblocking Key (PUK). The PUK is used to unlock and change the locked PIN. To obtain the PUK, contact the network operator.
- ◆ **Modify PIN2:** To change PIN2 code of PIN code.
- ◆ **Phone locked:** The function enables you to lock/unlock the phone. Entering password to switch on or off the phone. Password is required when the phone is locked. The initial password is 1122.
- ◆ **Modify the cell phone password:** to change phone password.
- ◆ **Privacy settings:** You can set password to protect your privacy, the initial password is 1122.
- ◆ **Auto keypad lock:** The function enables you to lock/unlock the keypad. Set the auto locking time, 5s, 15s, 30s, 1min and 5mins are available.

## **Restore factory settings**

You can cancel the setting you set. The original code is 1122.

## FCC RF EXPOSURE INFORMATION:

### **WARNING!! Read this information before using your phone**

In August 1986 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

## BODY-WORN OPERATION:

This device was tested for typical body-worn operations with the back/front of the phone kept 5mm from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 5mm must be maintained between the user's body and the back/front of the phone, including the antenna. Third-party belt-clips, holsters and similar accessories containing metallic components

shall not be used. Body-worn accessories

that cannot maintain 5mm separation distance between the user's body and the back/front of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

For more information about RF exposure, please visit the FCC website at [www.fcc.gov](http://www.fcc.gov)

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

<ANSIC95.1> (1992) / <NCRP Report 86> (1986) / <ICNIRP> (1999)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). Nevertheless, we recommend that you use a hands-free kit with your phone

(such as an earpiece or headset) to avoid potential exposure to RF energy. The design of your phone complies with the FCC guidelines (and those standards).

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

## **NORMAL POSITION:**

Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

## **RF Exposure Information:**

This product is compliance to FCC RF Exposure requirements and refers to FCC website <https://apps.fcc.gov/oetcf/eas/reports/GenericSearch.cfm> search for FCC ID: 2ALSWQI1851 to gain further information include SAR Values.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Do not use the device with the environment which below minimum -10°C or over maximum 50°C, the device may not work.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.