

# D92 Manual



---

## General Information

If this font is too small for you to read, please contact us :

[sales@unishinestore.com](mailto:sales@unishinestore.com) we will sent to you a PDF electronic document.TKS.

ueFone D92/D93 contents:

1 Telephone

2 Charging Station

3 Charger

4 Battery

5 USB Cable

6 Instruction manual

### **Device Code:**

With this code, using the phone can be prevented by unauthorized persons.

The factory default Code is: **1234**

### **PIN-Code:**

This is provided by the network operator with the SIM card to prevent the use of the card by unauthorized persons.

You can enable / disable or change the PIN code.

# Table of Contents

General Information.....	2
Device Code:.....	2
PIN-Code:.....	2
<b>My Phone</b> .....	6
Description.....	6
Led description.....	8
<b>Getting Started.....</b>	<b>10</b>
Insert SIm card & SD card.....	10
Screen ymbols.....	11
Menu Function.....	13
Direct M1/M2 settings .....	13
Read out numbers as dialed.....	13
<b>Menu.....</b>	<b>14</b>
<b>Settings.....</b>	<b>15</b>
Profile (Sound).....	15
SOS .....	15
SOS Function on/off.....	17
SOS Number.....	17
SOS SMS.....	17
<b>Phone settings.....</b>	<b>18</b>
Set time and date.....	18
Set Language.....	18

Flip to answer.....	18
Call settings.....	18
Call divert.....	18
Call waiting.....	18
Call barring .....	19
<b>Display settings.....</b>	<b>19</b>
Wallpaper settings.....	19
Idle display settings.....	19
Backlight .....	19
Keypad backlight.....	19
Led mode.....	19
Security settings.....	19
Restore factory defaults.....	20
<b>Phonebook.....</b>	<b>21</b>
Add new Contacts.....	21
Edit a contacts.....	21
Delete contacts错误！未定义书 签。 .....	21
Copy contacts.....	22
Speed Dial setting.....	23
<b>Call Functions.....</b>	<b>24</b>
Call using the phone book .....	24
call using the call records.....	24
Functions during a call.....	25

<b>Call history</b> .....	26
<b>Messages</b> .....	<b>26</b>
Write messages.....	26
Writing text.....	26
Inbox.....	27
Draft.....	27
Outbox.....	28
Sent messages.....	28
Voicemail.....	28
SMS settings.....	29
<b>Organizer</b> .....	<b>30</b>
Alarm clock .....	30
Calculator.....	31
Calendar.....	31
Bluetooth .....	32
<b>Multimedia</b> .....	<b>34</b>
Camera.....	34
Taking photos .....	34
Photo Viewer.....	35
Copy pictures to your computer.	35
FM Radio.....	36
My files.....	37
Safety instructions.....	38
Operating environment:.....	38

Hearing aids:.....39

# My phone




1	Direct dial key M1 M2
2	Left menu key / main menu
3	Green call key / call list
4	* Key Press this key in standby mode to enter the following characters: * /+ /P / W.
5	Speaker
6	Camera key
7	Microphone
8	Right menu key / call in

	standby mode of the Phonebook
9	Power key (press and hold 3 seconds), ending a call,
10	2-way navigation Arrow key (up): Invoke the SMS Message in standby mode Arrow key (down): <i>speed dial/list</i>
11	# Key / Pound In the standby mode, by long pressing enable / disable the silent mode. In the edit mode: change the input method
12	SOS call key.
13	Polyphonic speaker
14	Micro USB charger connection
15	Volume key / Flashlight By long press volume key to activate / deactivate the flashlight

**LED description:**

White LED	Flashlight
Red LED	Low battery (flashing) / charging mode (lights up)
Green LED	missed call or unread message

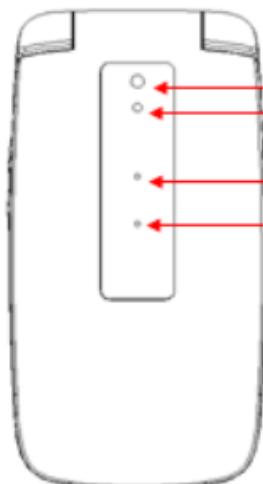

Camera  
Torch  
New Call/New SMS  
Charging/Low battery




Loudspeaker



USB

Volume Control

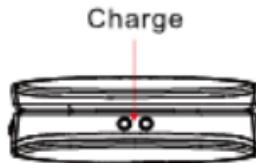

Charge



Headset socket

# Getting started

## Insert the SIM card and micro SD card


1. The phone must be switched off and unplugged from charger.
2. Remove the battery cover on the back of the phone.



If the battery in the device, please remove it.

3. See 2 cards holders: top left for the SIM card and the bottom right for the micro SD card.
4. Push the SIM card carefully into the SIM card slot (1). Ensure that the Gold contacts of the card face down and the beveled corner is positioned as shown.

5. Carefully slide the micro SD card into **the micro SD** card holder (2) and then lock them.

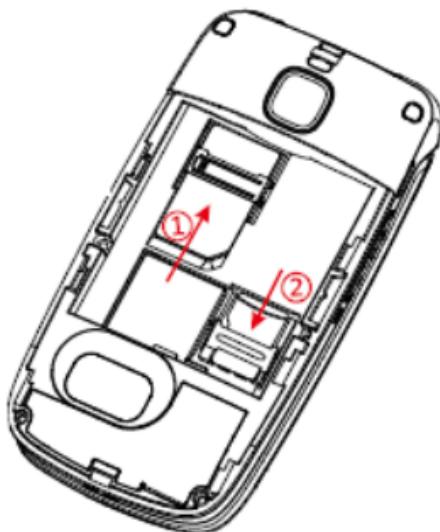

## Screen symbols

	<b>Signal strength:</b> The vertical bars show the strength <b>of the</b> reception of the carrier.
	<b>New messages:</b> This symbol appears when you received a new message. SIM card has an unread message.  This sign blinks when the Inbox is full. You must delete some messages so that you can receive new messages.
	<b>Headphones:</b>

	This symbol is displayed when a headset is plugged in.
	<b>Missed calls:</b> This sign will be shown if you have missed calls.
	<b>Incoming call alert:</b> Only ringing. Silent mode and vibrate. Vibrate and ring
	<b>Call forwarding:</b> This symbol appears when all calls are forwarded.
	<b>Alarm clock:</b> This symbol is displayed when the alarm is switched on.
	<b>Bluetooth:</b> This symbol appears when the Bluetooth is turned on.
	<b>Battery meter:</b> This character changes color depending on the status of the battery. 

## **Menu function:**

In the home screen, press the left menu key (□) to enter Main menu press the (□) to Phonebook.

## **Hands-free:**

You can enable / disable the handsfree function during the calling by pressing the right menu key (□)

## **Direct M1 /M2:**

To Menu> settings > M1/M2 Direct numbers>OK

Here you can edit the **M1 and M2 Numbers**

Press the M1 or M2 key in the standby mode to dial the stored phone number.

## **Read out numbers as dialed:**

**To** Menu>settings>profiles>Human voice>ok>Activate>OK.

**If you want switch off the read numbers function,you need to:**

Menu>settings>profiles>Normal>ok>Activate>OK.

# Menu

<b>1 Phone book</b>
1 Contacts
2 <b>New</b> contact
3 Own number
4 Memory status
<b>2 Messages</b>
1 Write SMS
2 Inbox
3 Draft
4 Output
5 Sent messages
6 Voice mail
<b>3 Calls history</b>
1 Missed calls
2 Dialed calls
3 Received calls
4 Delete all
5 Call timers

<b>4 Organizer</b>
1 Alarm
2 Calculator
3 Calendar
4 Bluetooth
<b>5 Multimedia</b>
1 Camera
2 <b>Images</b>
3 FM radio
4 File Manager
<b>6 Settings</b>
1 Profiles (sound settings)
2 SOS
3 Phone settings
4 Call settings
5 Display
6 Security settings
7 Connections
8 Factory setting restore

# Settings

## Profiles setting:

To Menu>Settings > profiles> OK  
Display the profile mode list including: **General, silent, meeting, outdoor.**

Select the mode and call up the option menu:

**Activate:** You can activate the selected.

**Add:** You can add setting options to the selected

**Settings:** Adjust ringer, keypad sounds, other desired sounds

## SOS

The SOS function is a simple feature that can save lives in the decisive moment. You can store a total of 6 SOS contacts and SMS. You must save these contacts first, in case of an emergency when you press the emergency call key on the back of the phone, these numbers will be called in sequence.

During the emergency call a warning signal will be issued, so the person knows that it is an emergency and it sends an emergency SMS to all stored numbers! If the first number is not reached, the next number is dialed automatically, etc.

If no emergency number is stored or your phone card is empty or you are in a foreign network (E.g. roaming not enabled), you can still Select 911 or other emergency numbers with the digit keys.

Will be accepted the SOS call switches the hands-free telephone.

### **When using a pre-paid SIM card:**

Make sure you always have sufficient credit on your pre-paid SIM card as private emergency numbers without sufficient balances are not elected.

- Usually the international emergency call 911 can still be called outside of the network provider's home network.

Note: If you want to store emergency numbers such as rescue, police, fire service etc. as emergency number, you would need to check before this with the respective institution. Assumes no liability for any costs incurred, if you mistakenly call.

## **SOS Settings:**

### **SOS Function on/off:**

To Menu>Settings > SOS settings > Status (select or not). *You can turn the SOS alarm on / off*

*Note: If you turn off the sos, when you press SOS button, SOS function will not work.*

*When SOS alarm ringing, it will popped up a menu in screen, you can turn off the ringing alarm if you misoperation.*

### **SOS numbers (contacts):**

You can save up to maximum of 6 sos numbers and its calling order.

### **SOS SMS:**

When SOS call started but not accepted, the preprogrammed SOS text is sent to the sos numbers. The text can be changed.

## **Phone settings:**

### **Time & date:**

To Menu>seet ings>Time &dates>OK. you can set time and date. Including time format and date formate ,update time settings.

### **Language:**

In this menu you can set the display language

### **Call settings:**

Operating path: Settings> Call settings

The following options are available:

**Flip to answer:** You can answer the incoming call as soon as you flip up the phone.

**Call divert:** You can divert the incoming call to another stored phone number.

**Call waiting:** The Call Waiting feature allows you to answer an incoming call while you have a call in progress.

**Call barring:** You can restrict your phone calls with this network service.

**Others:** Auto redial, Vibration when connected and Flight mode.

## **Display setting:**

Operating path: Settings> Display

The following options are available:

**Wallpaper settings:** You can select a wallpaper from Static wallpaper or More picture or Movie desk.

**Idle display settings:** The options of Time & Date, SIM Selection, Audio Player and FM Radio are available.

**Contrast:** You can press M1 or M2 to adjust the contrast of the display.

**Backlight:** Adjust the light illumination time of the display.

**Keypad backlight:** Adjust the light illumination time of the keypad.

**LED mode:** You can turn the LED light on, off or on Night mode.

## **Security settings:**

Operating path: Settings> Security

The following functions are available:

**PIN:** You can turn the SIM lock on/off with knowing the current PIN code of

the SIM card and change the PIN code for the SIM card at any time.

Modify PIN2: Use this function to modify the PIN2 code of the SIM card.

Phone locked: You can lock your telephone or unlock by inputting the password.

Modify privacy password: Enter the current password and then the new password. And confirm again to change the password.

Privacy: Input your password to enter the privacy mode.

Fixed dialing: You can set your fixed dialing numbers. When your phone is locked, you can only dial up the fixed dialing number.

**Note:** The factory default code is: 1234.

### **Restore factory settings:**

With this function you can reset the phone settings to the factory-set configuration.

You must enter the password to restore factory settings. The default password is: 1234.

# Phonebook

## Add new contact:

1. To Phonebook>new .

Select memory place: **SIM card** or **Phone**.

**SIM card contact:** It can only store Name and Number.

**Phone contact:** It can store Name, Number and Caller ring tone.

To save the **Contact**, press **Options** and save.

## Edit a contact:

1. Select a name, press Options >View Contact> Edit

2. After edit the entries, in order to save the changes, press right Menu key >Save > OK

## Delete the contacts:

### 1. The way to delete one contact:

To Phonebook, select a contact by moving the Arrow key up/down >Options>Delete> OK> select OK to delete.

### 2. The steps to delete multiple:

To

Phonebook>Options>Delete >multiple>OK.

Move the Arrow key up/down to select the names >confirm with the Camera key>Options>OK

Or you can select “Mark all”>OK > Options, and press OK to delete all contacts.

### **Copy all contacts from phonebook or SIM card**

1. To Phonebook >Options>Copy>ok

#### **2. Copy from phone**

Press Camera key, select where copy the contacts from, Phone or SIM, then press OK

#### **3. Copy to SIM**

Press the Camera button, select copy the contacts to SIM card, then press OK

4. Select the contacts you want to copy, check it with the Camera button, press Options, then press OK.

5. You can also copy all contacts in step 5, press Options,

choose **Mark all**, then press **Options** again and press **OK**

## **Speed dial setting:**

**To**

Phonebook>Options>Others>Speed dial >OK

You can use the Speed dial function when speedial is switched on.

Total of 8 numbers can be stored as speed dials. (key #2- key #9)

1. Select the desired number (2-9) and press Options>Edit.
2. Select the desired name from the phone book and press **OK** (the desired name must already be saved under contacts).

## **Call by using the speed dial contacts:**

After set speed dial number,you can use it **in 2 methods:**

1. press number key(2-9),in standby mode, then press call button.you can dial the desired contacts.
2. press **the arrow down** key in standby mode.Then you can select up to 8 speed dial contacts. Select you want to contact then press Call button.

# Call functions

## Call using the phone book:

If contacts in the phonebook is stored, you can make a call using the phone book.

To enter the phone book, press **right menu key** in standby mode.

1. Use arrow keys to scroll up and down to the desired telephone number.
2. Press the **green key** to call the number.

Press the **red key** to cancel or end the call.

## Call using the call records:

Search a number in the call records and press the **Send key** to dial **up**.

## Emergency call:

You can dial international emergency numbers on this phone, no mater the SIM card is installed or not.

## Settings-call:

**setting-answer mode:** select “Cover answer” then press the right menu button (Done)

1. If you want to reject the call, press the red key.
2. You can switch the incoming call silent by pressing any key.

**Functions during a call:**

The following functions available by pressing the Options Key during a phone call:

**Call hold:**

Place call in the queue.

**End the call\*:**

End call.

**New call:**

To make another call.

**Phone book:**

To enter the phone book.

**Call list:**

Show the call list

**Messages:**

To access the messages.

**Mute:**

To switch microphone off / on

**keytone:**

Turn the keypad tones on / off.  
Note: The \* marked functions must have a SIM card inserted. For more information, please contact the network operator.

## Call History:

In the standby mode, if you have missed calls, dialed and received calls, the numbers of different types of calls and icons are displayed on LCD. You can press to view. And you can delete all the call list by pressing the “Delete all” key. Call timers are also displayed on this page.

## Messages

### Write messages

To    Menu>    Messages    >    Write  
message    OK

**Note:** For MMS test message, extra service charge may apply depending on your cellular service plan, please contact your cellular carrier for details.

## **Text input:**

The following functions are available:

- Press **0** to add a space
- Press the **\*** key to add special characters, using " " **Arrow keys** "you can navigate to the desired symbols"
- Press the arrow keys to move the cursor left or right.

Press the **right Menu key** (Delete) and hold a letter to delete. Press and hold on the **right Menu key** to delete all the text.

- Press the **#** Key to switch between small, capitalization and word recognition: DE, de, 123 and make sure that the icon is in the top left of the display.

After completing the message, press **Options** and select **Send**

The phone has the possibility that **Send to** one or multiple contacts.

## **Other options:**

You can see the limits of the

number of written letters on the right top of the screen.

### **Inbox:**

In this menu you can read new or already read **messages**.

The phone vibrates or rings and the Green LED will flash if you get a new **messages** in standby mode, you can also see this icon  on the screen.

Press the **Options** for following functions:

Delete, Reply, Call sender, Forward, Advanced and Save.

Note: If the message memory is full,  flashes in standby mode, please delete some messages to receive new ones.

### **Draft:**

In **Draft** you will see your saved SMS messages.

### **Outbox:**

In **Outbox** store unsent messages.

### **Sent message:**

In this menu you can see already sent **messages**.

### **Voice mail:**

The voice message is a network

feature. When a voice message is received, the icon of a new message appears on the screen of your phone.

### **Access the voice mail:**

In standby mode, press and hold the number 1 and your phone will call the stored Voice mail (after setup)

***Note: This service must be supported by the network operator.***

1. To Menu > messages > Voice mail >OK> select 1 number>edit
2. In this field, you can enter either your **own phone number** (voicemail password needed) or your voice mail retrieval number (no password needed).

### **SMS Setting:**

- 1 To Menu >messages > message option>settings>OK

The following functions are available:

### ***SIM (profile settings):***

You can make settings including

the communication Central number (SMSC) (operator-dependent) and other SMS.

*Memory status:*

This option displays the SMS memory status of your SIM card and your phone.

*Save sent messages:*

You can store the sent messages by press Turn on/off.

*Preferred store:*

Select the location for the SMS to store in *Phone* or *SIM*.

## Organizer

**Alarm clock:**

Operating path: Organizer>Alarm

You can set 3 alarms on the phone.

You can Select an alarm and press Edit to set the alarm.

**Function operations:**

**Status On/Off:** Press M1 or M2 to start or stop the alarm.

**Messaging:** Rename the alarm.

**Time:** Set the desired time.

**Ringtone:** Select the alarm ring.

**Repeat mode:** Press the Camera key to select Once, Daily or Working day. After the alarm clock is set, press OK. When the alarm sounds, **press Stop or the Snooze Key to stop this.** In this case, which is snooze alarm clock and after about 5 minutes sound again.

### **Calculator:**

With this function, you can use your mobile phone as a calculator. The Calculator controls the basic arithmetic functions.

### **Features:**

- Type the number (1 to 0).
- Press # for a decimal point.
- Use the arrow keys for: +, -
- Use the M1 M2 keys for: x, ÷
- Press **left menu key** for: =
- Press **right menu key** for delete

### **Calendar:**

Operating path: Organizer> Calendar

Function operations:

Add new schedule: Add an event

View schedule: Check the event

All schedule: View all the event list

Clear today's schedule: Delete today's event

Clear all: Delete all events

Go to date: Input specified dates in this menu.

Weekly: Set up from Sunday to Monday.

Daily: Set up from 00:00 to 23:00.

## **Bluetooth:**

Operating path: Organizer> Bluetooth

Function operations:

Bluetooth: Switch On/Off

Bluetooth visibility:

Paired device: Press OK to add new device

Transferring files:

Shared folder settings: Press Shared folder permission to select “Full control” or “Read only”.

## **Device name**

1. To Menu->Organizer->Bluetooth >OK
2. Use **Down arrow key** to select **Device name** then press **OK**.
3. **ueFone** should appear with for other Bluetooth devices. You can *Clear* it and change to your desired name.

## **Search the Bluetooth audio device:**

1. Press to start device to search

for other Bluetooth **OK** .

2. You select from the desired device and press **Pairing** .
3. Connect to other Bluetooth devices where you need a **Password** . Confirm the password with **OK** .

In **Options** you will find the following functions: **Connect**, **delete**, **rename**, **authorize** and **Delete all**

### **Add new device:**

Search for available Bluetooth audio devices.

1. To Menu>Organizer>Bluetooth > Paired device > Add new device >Add
2. After the device you want to pair appeared on the screen, press **Stop** to stop searching.
3. Select the device from the list and press **Pair** to connect.
4. When connecting to another Bluetooth device you need a shared password. Enter the password and press **OK**

Bluetooth file storage: Select from Phone or SIM card.

## Multimedia

### Camera

#### get photos:

1. Press **Camera** button to take photo.
2. After photo was taken, press **Options** then you can **Delete**, **Set as wallpaper** or go to **Image viewer** **Note:** To store more pictures you need a micro SD memory card up to 16 GB. (Not included in the accessories)

**More options:** Select DC mode or DV mode.

**Image Viewer:** Display the stored photos. You can view the photos on Bluetooth send and receive.

#### Camera settings:

1. In camera, press Options>Settings > OK
2. you can change the quality of the photo, Banding, Shutter sound on/off,

auto save on /off and change the preferred storage to save the photos between Phone or micrSD card (not supplied with accessories)

## **Image view:**

Operating path: Multimedia> Image  
Entry the sub-menu of Image viewer, you can view the saved photos and image details, Mark, Rename, and Delete.

## **Copy images to your computer:**

To copy the images which you have made with the D92/D93 camera on the computer, proceed as follows:

1. Connect the phone with the help of the included micro USB cable to the computer.
2. Then a menu will appear on the phone select **Mass storage** and confirm **OK**
3. The computer shows the phone as **Removable disk** detected.
4. Now you can normally edit the data with the help of Windows Explorer or copy to

your computer.

**Note: The pictures are located in the folder "Photos"**

## **FM Radio**

With this function, you can hear FM radio. The following keys are available in FM mode:

Taste	Funktion
M1	Previous channel
M2	Next channel search
Arrow key up / #	Increase volume
Arrow key down / *	Decrease volume
Camera key	Turn on / off

The options include:

### **Channel list:**

Playback, editing, or deleting the stored channels.

### **Manual search:**

Manual channel search.

### **Automatic search:**

**Automatic search.**

**Store current channel.**

**Store** the transmitter you are listening

## **My Files**

In this menu, you can open, format, and rename the information stored in SIM card and phone.

**Others:**

Video camera: switch to video.

Video: Press to view the videos.

Audio: Press to listen to the music etc.

## **Specification:**

Quad-Band network:	WCDMA /3G 850/1900Mhz 2G GSM 850/900/1800/1900
Battery	Li-ion 800mAh
Size:	101 x 50.5 x 19.5 mm
Standby time:	<250 hours*
Talk time:	<480 minutes*

# Safety instructions

## Safe Power-on

Do not use phone in places where mobile phones are forbidden, or may cause interferences or dangers.

## Traffic Safety First

Do not use phone while you drive.

## Shut-down in Restricted Areas

Comply with related restriction rules or regulations. Shut down the mobile phone on the airplane, or around inflammable articles, chemicals, or medical appliances.

## Interference

Mobile communication may be affected by radio interferences, so the performance of phone is affected accordingly.

## Waterproof

This mobile phone is not waterproof. Keep it dry under any situation.

## Keep the Mobile Phone Out of Reach of Children

Phone and all its assemblies should be kept out of reach of children.



## **Assemblies and Batteries**

Please use the company **designated** battery and **charger**. Failure to comply with this rule may result in explosion of the mobile phone.

## **Professional Service**

Do not disassemble the mobile phone and its assemblies by yourself. The mobile phone is serviced only by authorized organizations.

## **Hearing aids:**

Some digital mobile phones can cause errors with some hearing aids. If such problems you can contact the service provider.

**Thanks for purchase our items.If have any problem.**

**You can contacts:**

**[sales@unishinestore.com](mailto:sales@unishinestore.com)**

**or Amazon**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any

interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could

void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital

device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable

protection against harmful interference in a residential installation. This equipment generates, uses

instructions, may cause harmful interference to radio communications. However, there is no

guarantee that interference will not occur in a particular installation. If this equipment does cause

harmful interference to radio or television reception, which can be determined by turning the

equipment off and on, the user is encouraged to try to correct the interference by one or more of

the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.