

# billboard®

## Wireless speakers

### Package contains:

- a. Bluetooth Speaker
- b. Remote
- c. Handle Strap
- d. Audio Cable
- e. Charging Cable

FCC ID: 2AML6KR802

BB2514

a.



b.



c.




d.



e.



# Instruction Manual

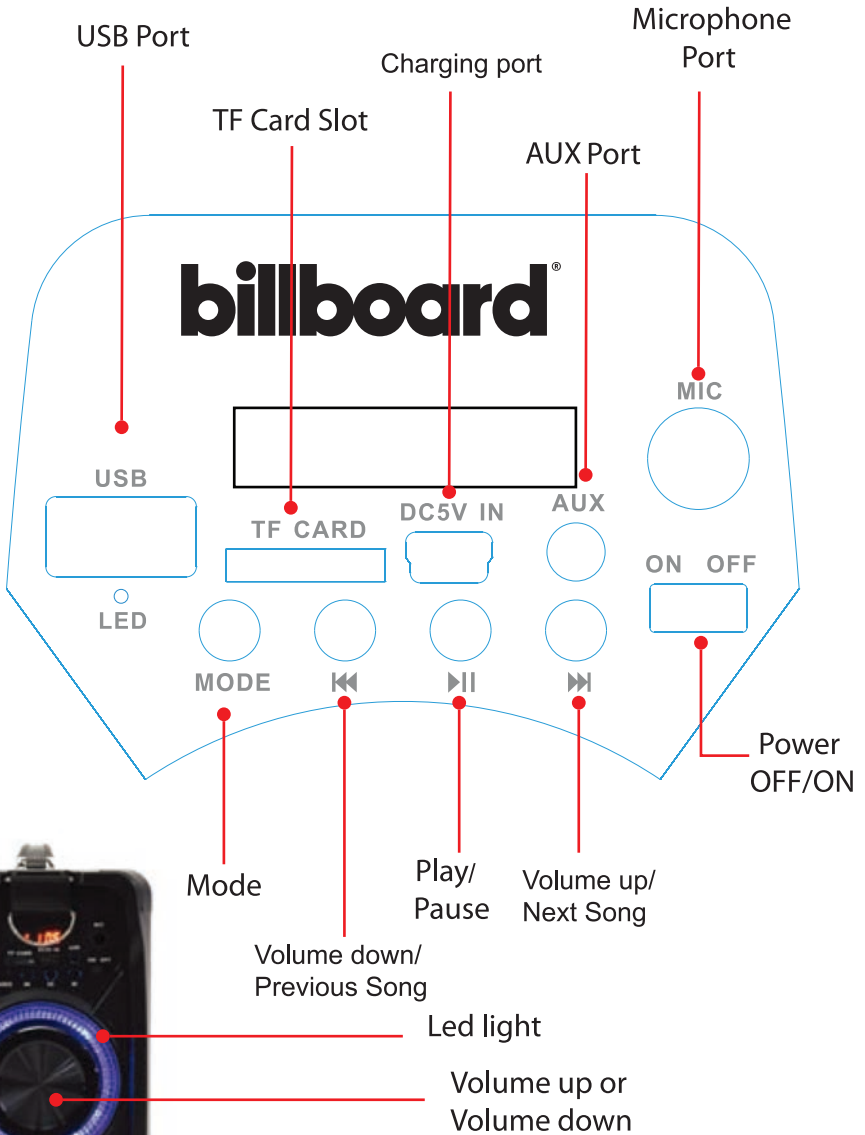

Thank you for your purchase of our new Graffiti speaker. We hope you are satisfied with your product. Please make sure to read this instruction manual carefully before using your speaker.

## **Product features**

- Bluetooth wireless connect compatible with All Your Bluetooth-Equipped Devices, and an Excellent Bluetooth Range about 33 Feet. It Pairs Easily with Your Smartphone, Tablets Or Other Bluetooth Devices.
- With USB2.0 and 3.5mm Audio Interface, can Compatible with TV, PC, Laptop, Tablet.
- Low-Frequency Transmitter, Dual Coil Full Frequency Unit, Giving You An Unforgettable Musical Banquet.
- Trendy Classy and Glossy Finish Design to Blend Perfectly in Almost any Indoor and Outdoor Environment.
- Support 3.5mm Aux-in/ Bluetooth/ FM Radio/ TF Card/ Mic /USB flash drive

## **Warning**

1. **Do not place objects on top of the device, as objects may scratch the device.**
2. **Do not expose the device to dirty or dusty environments.**
3. **Do not insert any foreign objects into the device.**
4. **Do not expose the device to strong magnetic or electrical field.**
5. **Do not use the device in the rain.**
6. **Please check with your Local Authority or retailer for proper disposal of electronic products.**
7. **Do not disassemble the device. Only a certified service technician should perform repair.**
8. **The device has apertures to disperse heat. Do not block the device may become hot and malfunction as a result.**

## **Powering up your speaker**

1. Plug the charger cable into the charging port on the speaker.
2. Connect the charger to a USB power source. The LED indicator will display red.
3. After 3-4 hours, the speaker will be fully charged, the LED indicator will still in red, please disconnect the charger from the power source and the speaker.
4. Move the power switch to ON position. The LED display should activate.
5. Adjust the volume control to the MIN position before connecting a device.
6. You're now ready to connect your device!

**FOR MAXIMUM BATTERY LIFE, IT IS IMPORTANT TO FULLY CHARGE YOUR BATTERY PRIOR TO USE.**

# Connecting your BLUETOOTH™ device

Your speaker can play almost all bluetooth™ devices by simply pairing the device to the speaker. Please follow these steps to properly pair your device to your speaker.

1. Power on the speaker, press the Mode button to go to Bluetooth™ Mode.
2. Activate the Bluetooth™ feature on your phone, and set the phone to search for wireless devices.(See the User Manual for your device)  
The speaker will show on your device as BB-BT-SP .(If pass code is requested enter 0000 or 1234)  
A chime sound will tell you if the pairing is successful. If the speaker can't be connected, please restart the speaker or the device and try again.
- 3.Play the music from your device.
- 4.Adjust the master volume level on the speaker to your desired volume level.
5. **⏮** : Press the Play/Pause button to play your device's music. Or you can also use the remote to control it.
6. **⏭** : Short press the “**⏭**” button to go to the next song or long press the “**⏭**” button to turn the volume up. Or you can also use the remote to control it.
7. **⏮** : Short press the “**⏮**” button to go to the previous song or long press the “**⏮**” button to turn the volume down. Or you can also use the remote to control it.

\*Plug the Audio cable into the AUX port to act an antenna for the speaker. Short press the Mode button to go to FM radio mode. Short press the Play/Pause button to search for an FM station. Press the “**⏭**” or “**⏮**” to go to the next or the last frequency, short press the Play/Pause button to find another available frequency. Or you can also use the remote to control it.

\* If using Aux feature, short press the Mode button to go to Aux mode, connect one end of the Audio cable to the Aux port and the other end to your music device.

\* You can also use a USB flash drive, TF/Micro SD card input to play your music.

\* Mic: Use the wire microphone to plug into the Mic port of the speaker.

| Fault phenomenon                 | Simple fault analysis   | Troubleshooting  |
|----------------------------------|---|--|
| Failing to electrify             | The power switch is not opened<br>The electricity quantity of built-in battery is totally consumed  | Open power switch<br>Use power adaptor to charge the battery   |
| No sound                         | Failing to input sound source<br>Failing to establish signal line<br>Main volume is switched to minimum U disk playing has no sound<br>Faults with external signal source<br>Poor contact or damage of external signal line | Change signal source<br>Reconnect signal line<br>Properly adjust the volume knob<br>Inspect U disk or audio switch<br>Change signal source<br>Readjust or change signal line |
| External microphone has no sound | External microphone is not fully inserted in the jack<br>The external microphone  | Totally insert the microphone to the jack<br>Open the switch of  |

**Battery information**

Your device is powered by a rechargeable battery. The full performance of new batteries is achieved only after two to three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times, but it will eventually wear out. Do not leave fully charged Speaker connected to a charger, overcharging may shorten their lifetime. If left unused, fully charged Speaker batteries will lose their charge over time. Never use any charger or cord that is damaged. Leaving the device in hot or cold places will reduce the capacity and lifetime of the batteries. Optimal temperature for the batteries is between 59°F and 77°F. A device with a hot or cold batteries may not work temporarily, even when the batteries are fully charged. Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Always dispose of batteries according to local regulations. Please recycle. Do not dispose as household waste.

**Device Safety**

- Your Wireless Speaker have an internal rechargeable battery. Improper usage may result in the Speaker becoming hot, igniting or bursting and causing injury if exposed to conditions of abuse.
- Do not disassemble, throw away or damage the Wireless Speaker.
- Store the Wireless Speaker in a dry place, keeping them away from damp corrosive materials and environments such as salt air.
- Keep the Wireless Speaker away from direct sunlight, fire and high voltage equipment. Do not store the Wireless Speaker inside a car during hot weather. Remember a closed car acts as a green house allowing the inside to reach high temperatures.
- The Wireless Speaker are not a toy. Please keep them out of the reach of young children.
- Please do not discard the Wireless Speaker. Consult your local waste collection agency for proper disposal or recycling methods. You may also contact "Call2Recycle" at 877— 273— 2925 or online at "call2recycle.org" for a battery recycling drop off location near you.

## FCC Information

FCC ID: 2AML6KR802

This device complies with Part 15 of the FCC rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Federal Communications Commission (FCC) Statement

This Equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment. Tested to comply with FCC standard. FOR HOME OR OFFICE USE.

### Warning :

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.

## Charging The Battery

1. Plug the charger cable into the charging port on the speaker.
2. Connect the charger to a USB power source. The LED indicator will display red. If charging does not start, disconnect the charger plug it in again, and retry.
3. After 3-4 hours, the speaker will be fully charged, the LED indicator will still in red, please disconnect the charger from the power source and the speaker.
4. Important! To prevent a complete discharge of your Speaker's battery, charge them up at least every six months.



WARNING: This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think battery might have been swallowed or placed inside any part of the body, seek immediate medical attention.



BATTERY CAUTION: Do not disassemble, short circuit, or expose to fire or high temperature. Properly connect specified devices. Recycle battery according to local, state and national regulations.



This package is composed of recyclable plastic. Material Composition of paper includes Post consumer recycled material.



It may damage your hearing if you listen with high volume for a long time. It is recommended you use the lowest volume possible for listening to music.

## Limited Warranty

ESI Cases & Accessories, Inc., warrants to the first consumer purchaser that this product, when shipped in its original container to the original purchaser will be free from defective workmanship and materials for one year and agrees that it will, at its option, either repair the defect and replace the defective product or part thereof at no charge to the purchaser for parts or labor for the time periods described.

This warranty does not apply to any appearance items of the product nor to the additional excluded item(s) set forth below nor at any product the exterior of which has been damaged or defaced which design or construction. The limited warranty described herein is in addition to an applicable law.

**ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE PERIOD FROM THE DATE OF ORIGINAL PURCHASE SET FORTH BELOW.**

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Neither the sales personnel of the seller nor any other person is authorized to make any warranties other than those described herein or to extend the duration of any warranties beyond the time period described herein on the behalf of ESI Cases & Accessories, Inc.

The warranties described herein shall be the sole and exclusive warranties granted by ESI Cases & Accessories, Inc. and shall be the sole and exclusive remedy available to the purchaser corrections of defects, in the manner and for the period of time described herein, shall constitute complete fulfillment of all liabilities and responsibilities of ESI Cases & Accessories, Inc. to the purchaser with respect to the product and shall constitute full satisfaction of all claims, whether based on contract negligence, strict liabilities and responsibilities of ESI Cases & Accessories, Inc. be liable or in any way responsible, for any incidental or consequential damages, so the above exclusion may not apply to you.

**THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.**

This warranty does not cover cables that have become frayed, cracked, or broken from use. The user should immediately replace this, or any, charge cable that has become frayed, cracked, or broken, as it may constitute a serious safety risk, including electrocution, if it is continued to be used.

Send product with \$11.95 shipping & handling fee to:

ESI Cases & Accessories

44 East 32nd Street New York, NY 10016

Tech Support : (212) 883-8838

TechSupport@ESICellular.com