

aiwa

**16"**  
**Wireless Soundbar**



**Item: AI6032**


Quick Start Guide

# WHAT'S INCLUDED

- 16" Wireless Soundbar
- USB-C Charging Cable
- User's Manual With Warranty Information


## A CLOSER LOOK

FRONT VIEW

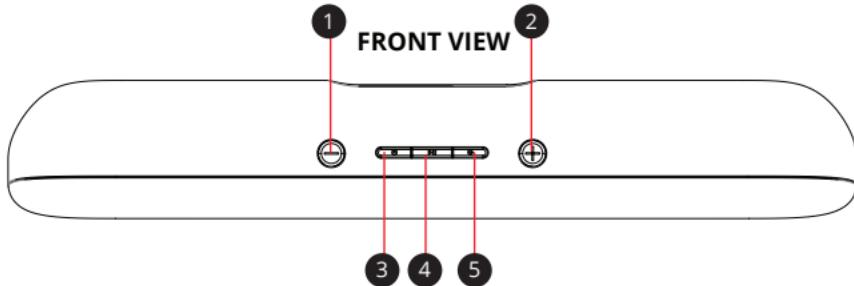

REAR VIEW

FRONT VIEW

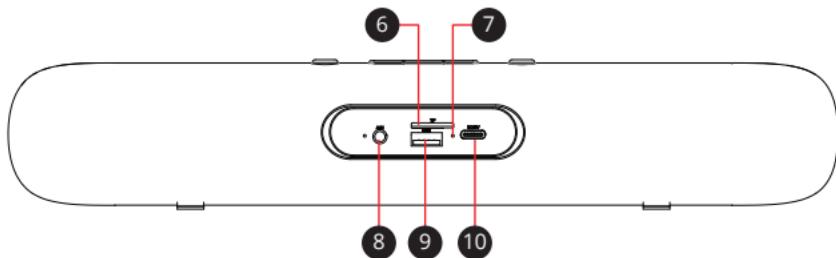


1. Volume Down/ Previous Track
2. Volume Up/ Next Track
3. Power
4. Play/Pause/TWS
5. Mode
6. Micro SD Card Slot


7. Indicator Light
8. AUX-IN Port
9. USB Input Port
10. Charging Port

# CHARGING

Insert one end of the included charging cable into the charging port.

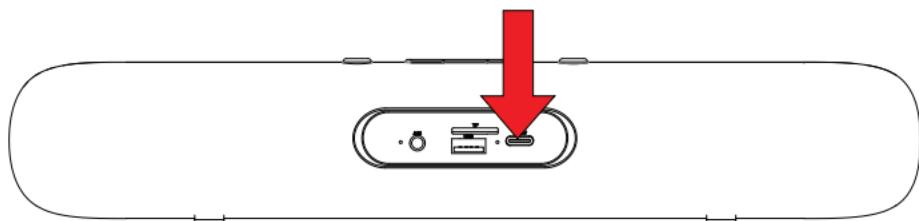

Insert the other end into a suitable USB charging adapter

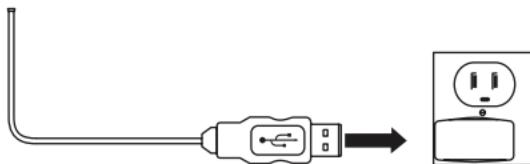


# POWERING ON/OFF

 Press and Hold  
3-4 Seconds



To power ON/OFF your soundbar, press and hold the power button for approximately 3-4 seconds.

# SETTING THE MODE

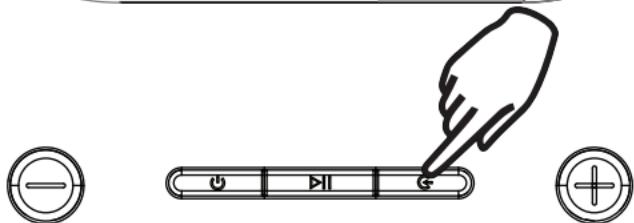

Power ON your soundbar. Press the mode button repeatedly to toggle through your soundbar's various modes.

# BLUETOOTH PAIRING

Once powered ON, press the mode button repeatedly to set your soundbar to Bluetooth mode.



Go to the Bluetooth settings menu on your phone. Make sure that Bluetooth is turned on. Connect to the device listed as "AIWA AI6032".

**NOTE:** Disconnect through your connected device or by changing modes.

# LISTENING TO MUSIC



## Volume Down Button:

- While using Bluetooth, press to go back to the last track in a playlist.
- Press and hold to decrease the volume.

- Press to access the previous saved station while using FM Radio Mode.



## Volume Up Button:

- While using Bluetooth, press to go to the next track in a playlist.


- Press and hold to increase the volume.

- Press to go to the next saved station while using FM Radio Mode.




## Power Button:

- Press and hold to power ON/OFF the soundbar.

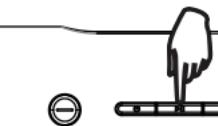

## Play/Pause Button:

- Press to play/pause current audio.

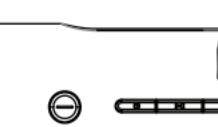

## Mode Button:

- Press to cycle between the different modes available on the soundbar.

- While receiving a call, press to answer/end calls. Press and hold to reject calls. Press twice to redial the last number.

# ADDITIONAL FEATURES

## USB Input Port

Plug a USB thumb drive into the USB Input Port on your soundbar. To play from the USB, you must set the soundbar to the corresponding mode. Your soundbar can play .mp3 music files from your thumb drive. The maximum storage size of the USB flash drive cannot exceed 32 GB.

**Note:** Connecting to a computer will not work. Files will not be visible.

## Micro SD Card Input

Slide a Micro SD Card into the Slot on your soundbar. Your soundbar can play .mp3 music files from the card inserted.

## AUX IN Port

Connect one end of a 3.5mm Aux cable (not included) to the Aux In port on your soundbar. Connect the other end to the headphone jack on your audio device. To listen to music using a wired connection, select the corresponding mode.

**Note:** Do not connect an amplifier or amplifier signal to avoid damaging the soundbar.

## FM Radio

To use FM Radio mode to listen to music from local radio stations, set the soundbar to the corresponding mode. Press the play/pause button to scan and save available FM stations. Press the previous track and next track buttons to change stations.

## TWS Pairing

TWS pairing allows the connection of two AI6032 soundbars together on one device. Power on both soundbars, but do not connect to any device. Press and hold the Play/Pause button on one of the soundbars for approximately three seconds to pair together.

You can then go to the Bluetooth settings menu on your phone. Make sure that Bluetooth is turned on. Connect to the device listed as 'AIWA AI6032'.

# SAFETY PRECAUTIONS

When using your soundbar, basic safety precautions should always be followed including:

1. READ ALL INSTRUCTIONS BEFORE USING YOUR SOUNDBAR.
2. Do not submerge your soundbar in water.
3. Only clean using a clean cloth.
4. Do not allow children to play with this product. This product contains small pieces that can be a choking hazard. Parental supervision is advised.
5. Do not expose this product to excessive heat or fire.
6. Do not expose this product to temperatures above 100°F. Keep out of direct sunlight.
7. Do not attempt to repair this product yourself. Contact a qualified service center if the product is in need of service.
8. Do not drop, crush, or expose this product to excessive physical force.
9. This product is not intended for commercial use.
10. When charging, keep all charging cables well ventilated. Do not keep your charging cable in contact with flammable materials such as bedding, linens or synthetic fabrics.

## Maintenance and Care

-Use a soft cloth or paper towel to clean your soundbar. Never use any harsh chemicals or detergents for cleaning. Make sure your soundbar is dry before charging.

-When your soundbar is not in use, it should be stored in a cool, dry place.

-Never tug or yank on a cable while it is connected to your soundbar. Connect and disconnect cables as carefully as possible.

-Never expose your soundbar to high temperatures, extreme cold.

-Please recycle or dispose of your soundbar properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your soundbar for further information.



### CAUTION

#### BATTERY WARNING:

- The device is equipped with an integrated lithium ion battery. The battery cannot be replaced. Do not attempt to remove the battery from the device.
- Do not dispose of in fire or expose to excessive heat.
- Do not crush, puncture, incinerate, or short circuit external contacts.
- Please recycle or dispose of the battery properly. Contact your local recycling facilities and/or the manufacturer for further information.

# FCC STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

# SPECIFICATIONS

BLUETOOTH VERSION: 5.4

WORKING DISTANCE: UP TO 10 METERS

FORMAT SUPPORT: MP3/WMA/WAV

INPUT SUPPORT: Bluetooth, TF Card, USB Drive, AUX

PLAY TIME: Up to 6 Hours\*(50% Volume)

FREQUENCY RESPONSE: 280Hz-16KHz

BATTERY: 3.7V/1200mAh Battery Capacity

SIZE: 42.3 x 8 x 6.8 cm

CHARGING VOLTAGE: DC-5V

OUTPUT POWER: 5W x 2

# WARRANTY

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

## What Is Not Covered By Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

## To Obtain Warranty Service and Troubleshooting Information:

Call (800) 592-9541 or visit our website at [www.aiwa.us.com](http://www.aiwa.us.com).

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address of the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepairs.



aiwa

**AIWA**  
Edison, NJ 08817  
[www.aiwa.us.com](http://www.aiwa.us.com)

© 2025 Aiwa Acquisitions LLC. All rights reserved. AIWA and associated marks are owned by Aiwa Acquisitions and used under license.  
Keep all relevant information for future reference.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Sakar International is under license. Other trademarks and trade names are those of their respective owners.”