



## Instructions for use

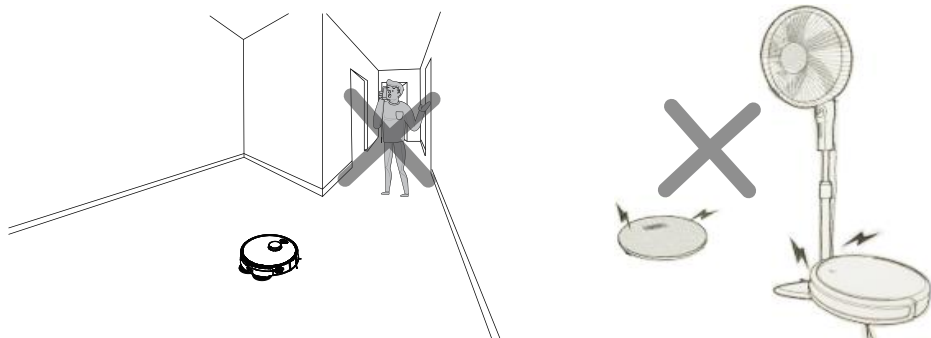

Please do not stand in narrow places such as thresholds and aisles to avoid missing sweeping. When the robot is working, please ensure that the object with the thickness less than 1.8 cm is not placed in the cleaning area to prevent the machine from climbing and jamming.

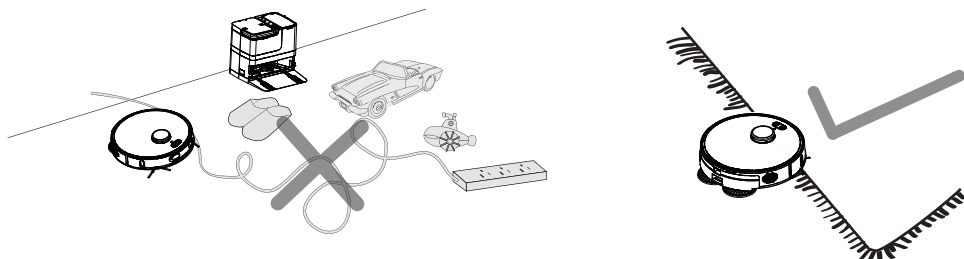


The power cord, toys and other sundries scattered on the ground may trip over or entangle the main machine. Please pay attention to remove the sundries.  
The robot has the function of carpet recognition. When the machine is equipped with a mop, it can automatically lift the mop and vacuum when it meets the carpet.

## Instructions for use


### 4.2 Operation guide

#### Assemble base station

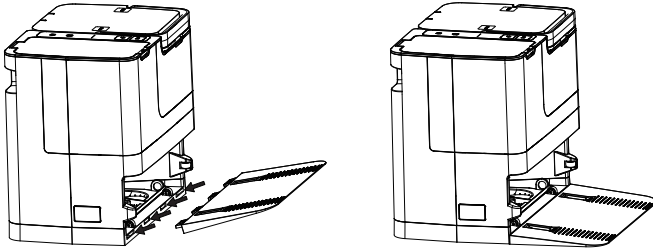

Align the tray guide bracket with the installation position of the base station and push it into the base station.


#### Clear water tank with water

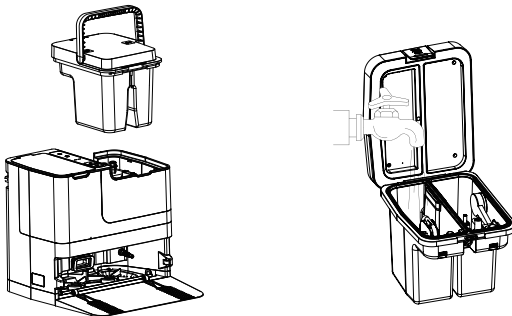

Pull up the handle of the water tank, lift it vertically and take out the water tank. Open the buckle of the water tank, add a proper amount of clean water into the clean water tank, cover the water tank, fasten the buckle, and then put it back into the base station.

## Instructions for use


### Place dust bag

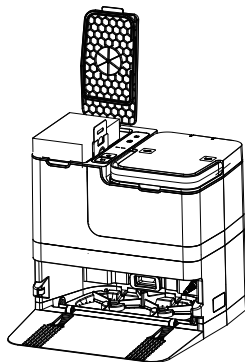

Tips: The opening angle of the cover should not be too large, so do not push the cover outward.

Open the top cover, insert the dust bag guide plate into the dust bag card position of the base station, The dust bag handle should be completely inserted into the dust bag guide plate. Cover the top cover after installation.

### Place the base station

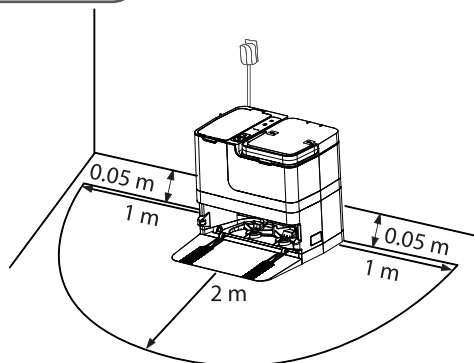


Place the base station flat against the wall. Do not place objects within 1M on the left and right and 2M in front, and do not have objects with strong reflecting surfaces such as mirrors. Then connect the power supply. The excess length of the power cord should be tied with zip ties to prevent it from being too long and tripping people and animals, causing unnecessary injury or loss.

## Instructions for use


---

### Turn on the machine

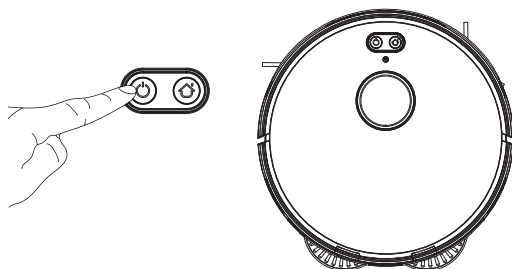

Press the machine cleaning button for a long time to turn on the machine, all the lights are on, and enter the waiting command mode. If the machine is not operated within 10 minutes, the machine will enter the sleep mode.

### Boot charging

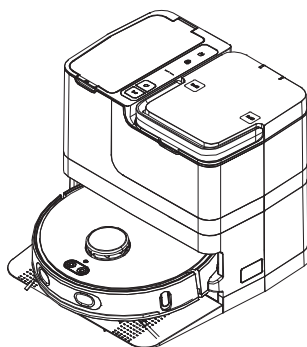


Press and hold the power button of the sweeper to turn on the machine. In any mode, press the "Recharge" button on the host or the "Recharge" button on the base station to make the sweeper recharge automatically. You can also click the recharge button on the APP to make the machine recharge automatically.

## Instructions for use

---

### be self-charging

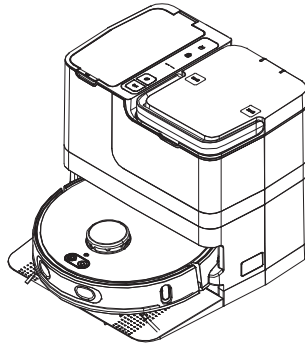

This product meets the European ERP energy consumption standard.

When the cleaning is completed or the battery is too low, the machine will automatically start looking for a charging base to charge.

Please keep the charging base in the energized state, otherwise the machine will not be able to find the base for charging.

## Instructions for use

### Base station status lights and buttons




#### **Water tank status indicator lamp**

1. The water tank is not installed:  
the water tank status light is always red.
2. The sewage is full:  
the water tank status light flashes alternately in red and white.
3. The clear water tank is short of water:  
the water tank status light flashes slowly alternately in red and white.
4. The water tank is normal:  
the white light is always on.
5. The machine host is not connected to the base station,  
the red and white light flashes alternately



#### **Dust bag status display lamp**

1. Full dust:  
the dust bag status light flashes slowly alternately in red and white.
2. The dust bag is not installed:  
the status light of the dust bag is always red.
3. There is no abnormality in the dust bag:  
the status light of the dust bag is always on and white.
4. The machine host is not connected to the base station,  
the red and white light flashes alternately

#### **Recharge button**

Press the base station  The sweeper will return to the base station for charging in any mode.

#### **Cleaning button**

Press the  base station Sweeper starts cleaning, and press it again during cleaning.  Sweeping opportunities will be suspended.


### Matters needing attention in charging

01. When using the machine for the first time, please let the machine run out of power.
02. Please charge the machine for 12 hours for the first time. When the machine is charging, the cleaning button will blink circularly. When the charging is completed, the cleaning button light will stay on for a long time, and when it goes to sleep, the light will go out.
03. If you don't use the machine for a long time, please turn it off.
04. Please recharge the machine as soon as possible after the power is used up.
05. This product can only be charged by the base station equipped in the factory.
06. The battery is repaired and replaced by the after-sales department.

## Instructions for use

---

### Mode switching

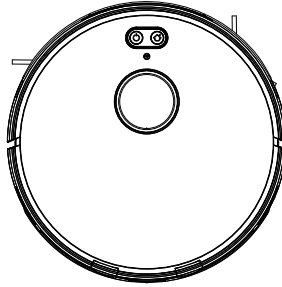

### Power on

01. Long press the "⏻" on the machine to turn on or turn off the machine.
02. Press the "⏻" control button on the machine or the cleaning button on the APP to start the machine working.

### Pause

Pause means switching the machine from working state to selection mode. The following operations can be used to pause the machine:

01. Press the "⏻" control button on the machine to pause the machine.
02. Press the pause button on the APP to pause the machine.

Note: After the machine is paused, it can be operated again.

### Network distribution mode

Long press the "📶" control button on the machine to put the machine into network configuration mode.

### Hibernation

Sleep mode means the machine is in a stopped state and the control button lights are off.

If the machine is not operated for 10 minutes, it will automatically enter sleep mode.


Note: If the machine is not used for a long time, please turn it off.

## Instructions for use

---


### Cleaning mode

#### Plan Cleaning

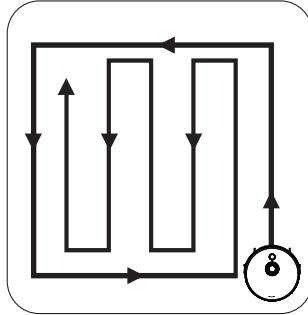

The robot will perform the plan will clean along the cleaning in S shape according to the room environment.

#### Setting Forbidden Area

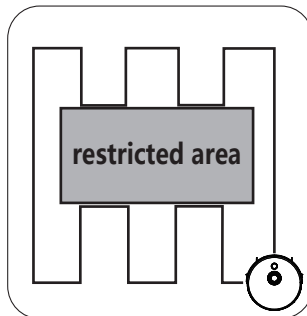


Only available by App control, After setting the forbidden area, the robot will not enter the forbidden area of the room.




## Instructions for use

### Laser relocation

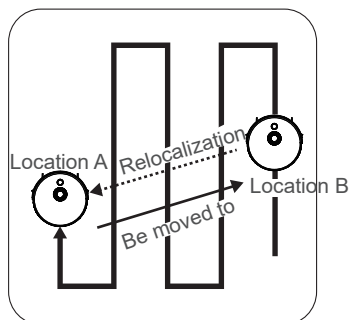

In the process of cleaning, if you move the sweeper to a new place after suspension, and restart it, it seeks to relocate. If the relocation is successful, the sweeper continues to clean. If it fails, the previous cleaning map will be lost, it will restart a new cleaning.

### Dust Collection for the Sweeping Robot

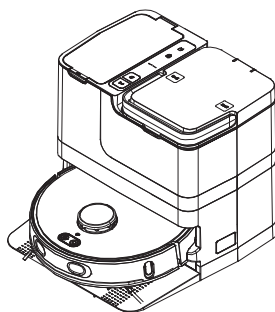


**Automatic Dust Collection:** After completing a specified number of cleaning tasks, the robot will return to the base station to collect dust. The number of tasks before dust collection can be set in the app.

**Controlled Dust Collection:** When the robot is on the base station, you can initiate dust collection immediately by tapping the dust collection button in the app.

## Instructions for use

### Mop Cleaning

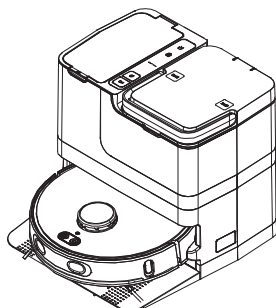

(Please do not remove the robot from the base station or reach into the tray during mop cleaning to avoid burns.)


**Automatic Mop Cleaning:** After a complete cleaning session, the robot will automatically return to the base station to clean and dry the mop.

**Scheduled Mop Cleaning:** You can schedule mop cleaning times during the cleaning process through the app. After the mop is cleaned, the robot will resume cleaning. This cycle will continue according to the scheduled time until the cleaning is complete.

**Controlled Mop Cleaning:** When the robot is on the base station, you can initiate mop cleaning immediately by tapping the mop cleaning button in the app.

**Controlled Mop Drying:** When the robot is on the base station, you can initiate mop drying immediately by tapping the mop drying button in the app.


### Water Refilling for the Sweeping Robot

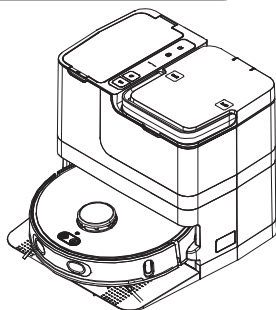

When the robot returns to the base station during a cleaning task to perform base station operations, it will trigger a water level check. If a low water level is detected, water will be automatically refilled. For example, this can happen after completing a full cleaning session or when the robot returns to the base station mid-cleaning to wash the mop.


## Product maintenance

### 5.1 Side brush cleaning and replacement

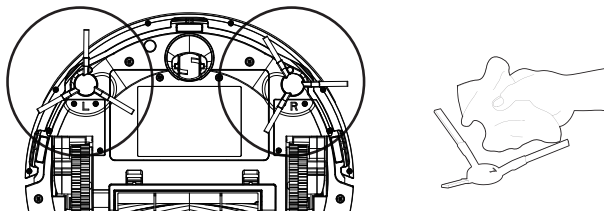

Check the condition of the side brush from time to time to see if it is damaged or entangled with foreign objects. Clean the side brush with a cleaning tool or rag. When the side brush is damaged and cannot be used, please replace it in time.


### 5.2 Maintenance of lifting water tank

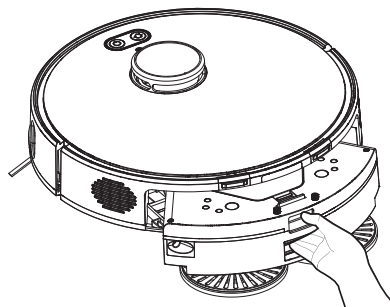


Press the lift tank release key to take out the lift tank.

## Product maintenance

---

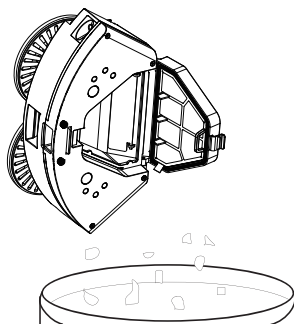


Open the dust box cover and dump the garbage.

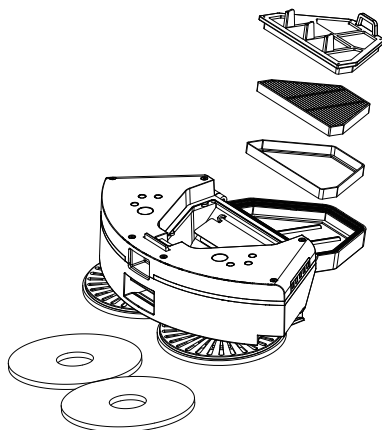


Open the dustbin cover, take out the primary filter cover, hepa filter and rubber sealing ring, then remove the mop cloth.

## Product maintenance

---

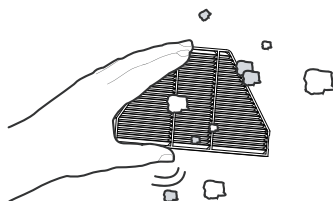

It is not recommended to wash the high-efficiency filter with water. Please pat it to remove the dust.

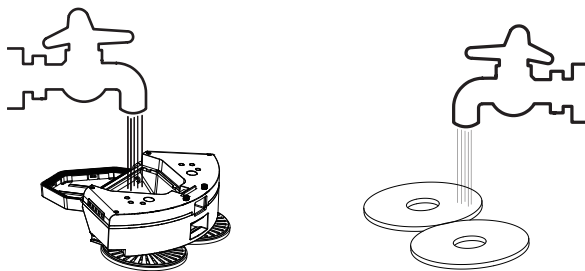

Rinse the dust box and mop.