

CRAIG®

STEREO PORTABLE SPEAKER

with Bluetooth® Wireless Technology

Owner's Manual

PLEASE READ BEFORE OPERATING THIS EQUIPMENT.

Model: CMA3707

INFORMATION:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


FCC warning

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


LOCATION OF CONTROLS

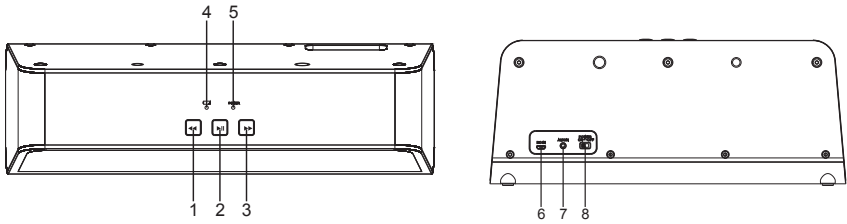

1. ◀◀ Button
2. ▶|| Button
3. ▶▶ Button
4.  (Charge) Indicator
5. POWER Indicator
6. DC IN Jack (Micro USB Port, for charging only)
7. AUX IN Jack
8. POWER ON/OFF Switch


POWER SOURCE

The unit has a built-in Li-ion rechargeable battery, charge it before first time use or when it is drained as follows:

1. Connect the small plug from the supplied USB Connection Cable to the Micro USB Port on the rear of unit.
2. Connect the full size USB Plug from the supplied USB Connection Cable to the USB Port on the Personal Computer or USB Charger (Computer and USB Charger not included).
3. When charging, the  (Charge) Indicator on the top of unit will illuminate. When charging is complete, it will turn off.

NOTES:

Your battery will last longer if you following these simple guidelines for caring and storing:

- A. Before first time use, recharge the unit approximately 2 hours until the unit is fully charged.
- B. If the power of the built-in battery less than 5%, the  (Charge) Indicator will illuminate and blink. Recharge it immediately.
- C. Charge and store the unit within the temperature range of 5°C - 35°C (40°F - 95°F).
- D. Do not overcharge (longer than 24 hours). Excessive charging or running the unit until battery fully drains will damage battery. Battery life will be extended if you keep the battery fully charged.
- E. Battery life naturally shortens slowly over time.
- F. The rechargeable battery incorporated in this product is not user replaceable.

OPERATION

BT (Bluetooth) Pairing:

For first time use or re-pairing the unit to a new BT Device, follow instructions below:

1. Slide the POWER ON/OFF Switch on the rear of unit to ON position to power on the unit, the POWER Indicator on the top of unit will illuminate and blink.
2. Power on the external BT Device and enter to BT searching mode. Start pairing following the on screen instructions from the external BT Device. When paired, the POWER Indicator will stop blinking.
3. If pairing is complete you may now play music with your external BT Device.
4. During playback:
 - Press the ►|| Button to pause; press again to resume normal playback.
 - Press and release the ◀◀ or ▶▶ Buttons repeatedly to adjust volume level as desired.
 - Press and hold the ◀◀ or ▶▶ Buttons repeatedly to skip tracks.
5. When finished listening, slide the POWER Switch to OFF position to shut off the unit.

Notes:

- When the external BT Device searches for the unit, our model number "CMA3707" will appear on the display of external BT Device.
- If while pairing you are asked for a code please try "0000" or "1234".


Normal operation after paired:

1. Power on the external BT Device and enter to BT mode.
2. Slide the POWER ON/OFF Switch on the rear of unit to ON position to power on the unit, the POWER Indicator on the top of unit will illuminate and blink.
3. Wait a few seconds until the unit automatically pair to the BT Device, the POWER Indicator will stop blinking.
4. If pairing is complete you may now play music with your external BT Device.

AUX IN:

To listening from the external Audio Player such like MP3 Player, Discman...etc.

1. Slide the POWER ON/OFF Switch on the rear of unit to ON position to power on the unit, the POWER Indicator on the top of unit will illuminate and blink.
2. Connect one end of the supplied Audio Connection Cable to the AUX Out / Line Out / Phone Jack on the external Audio Player.
3. Connect the other end of the cable to the AUX IN Jack on the rear of unit as illustrated follows. The unit will turn to AUX IN mode automatically.

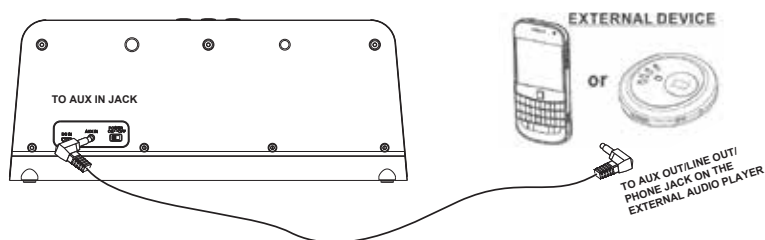

4. Play the music on the connected Player as usual. (Make sure the volume level of the connected Audio Player is turned to high level.)
5. During playback, press and release the ◀◀ or ▶▶ Buttons repeatedly to adjust volume level as desired.
6. When finished listening, slide the POWER ON/OFF Switch to OFF position to turn off the unit.

IMPORTANT:



If the Audio Connection Cable is inserting into the AUX IN Jack, Bluetooth can NOT be use. Unplug the Audio Connection Cable from the AUX IN Jack before use Bluetooth.

TROUBLE SHOOTING GUIDE

Check the following before requesting service:

SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Can't power on	Built-in battery drained	Recharge the battery as page 3
No sound or sound weak	Volume of the unit was set to minimum position	Increase the volume by press and release the ►► Button on the unit repeatedly
Sound distortion	Volume level of paired/connected device is in low level	Rise the volume level of the paired/connected device
	Volume level too high	Reduce the volume level by press and release the ◀◀ Button on the unit repeatedly
	Volume level of the paired/connected device too high	Reduce the volume level of the paired/connected device
BT not functioning	The external BT device had NOT paired to the unit	Pair the external BT device to the unit as page 4
	The external BT device too far from the unit	Place the external BT device close to the unit
	Audio Connection Cable is inserting into the AUX IN Jack	Unplug the Audio Connection Cable from the AUX IN Jack before use BT

SPECIFICATIONS

Power Source:	Built-in DC  3.7 V, 1000 mAh (3.7 WH) rechargeable Li-ion Battery,
	recharge by DC  5 V through the DC IN Jack (Micro USB Port)
Impedance of Speakers:	5 W; 2 Ω per Channel
Audio Power:	3 W per Channel (Total 6 W, RMS)
BT Version:	4.2
BT Operation Distance:	32 Feet in open area

PACKAGE INCLUDES:

- 1 x Owner's Manual
- 1 x USB Connection Cable (For Charging only)
- 1 x Audio Connection Cable with 3.5 mm plugs

SPECIFICATIONS AND ACCESSORIES ARE SUBJECT TO CHANGE WITHOUT NOTICE