

HANGZHOU MCMC TECHNOLOGY CO.,LTD

Test Model: FS-SLHB-Y1



## 1 DO NOT RIDE WITHOUT READING

Intended for use only by persons who are experienced skateboard riders. People with heart conditions, head, back or neck ailments, or pregnant women, should not operate the product. Children 14 and under should not operate the board.

Keep away from all motor vehicle traffic safely when operating the board. Always operate with caution.

Do not touch the belts or motor/motors on your board when in use or immediately after riding as these parts can become very hot.

Do not use the board if the remote control or board is running low on power. Doing this can cause sudden loss of power and/or brakes. Make sure your remote control and board are charged each time before you ride.

Do not ride the board in the rain or in any environments that can cause the motors and battery case to get wet.

Do not ride the board in any environments of the strong electromagnetic interference and radio interference.

Rider's weight, inclines, wheel tread, and battery charge level can affect operating speed. Avoid excessive speeds when going downhill.

Always ride defensively. Be alert for potential obstacles that could cause you to lose control. Be vigilant and avoid pedestrians, skaters, skateboards, scooters, bikes, children, and animals that may cross or enter your path.

The board is intended for use on smooth dry surfaces such as pavement or concrete, without debris, sand, leaves, rocks or gravel. Wet, slick, bumpy, uneven or rough surfaces may reduce traction and could contribute to accidents. Do not ride your board in mud, ice, puddles or water. Do not ride your board in rain, snow or other dangerous weather. Look out for potential obstacles that could cause you to lose control. Always avoid bumps, drainage grates, and sudden surface changes.

Do not attempt to do stunts or tricks while on your board. The board is not designed to withstand abuse from misuse, such as jumping, curb grinding or any other type of tricks.

Racing, stunt riding, or other tricks should be avoided as they elevate the risk of losing control.

Never allow more than one person to ride the board at a time. Do not ride at night or when visibility is limited. Never ride near steps or swimming pools.

Do not allow hands, feet, hair, body parts, clothing, or other items to come in contact with moving parts, wheels, or drive-train belt while the skateboard's motor is running.

Never use headphones or a cell phone when riding. Never pluck a ride with vehicle.

Do not ride your board in wet or icy weather and never immerse the board in water, as the electrical and drive components could be damaged and create other unsafe conditions. Never use the board indoors.

### WHEN USING THE CHARGER

The charger supplied with the board should be regularly examined for damage to the cord, plug, and other parts. In the event you notice damage, the charger must not be used until it has been repaired or replaced.

Use only the recommended charger to charge your board.

Use caution when charging.

The charger is not a toy. Charger should be operated by an adult.

Do not operate charger near flammable materials.

Unplug charger and disconnect from board when not in use. Do not exceed 6 hours of charging time.

Always disconnect your board from the charger prior to wiping down or cleaning your board.

## 2 THE CONTROLLER

The board controller need to be fully charged before your first use. Before charging make sure both the board and the charger are powered off.

- The controller uses a standard micro USB to USB cable to charge.
- Plug the board controller micro USB cable into the bottom of the controller. Plug the USB end into the charger and into an outlet. It takes about 2 hours to fully charged the remote.
- Once the controller is powered on, you can toggle between forward and reverse by pressing the power button once.

### PAIRING THE CONTROLLER

For the first use, the board and controller need to be paired together.

- Before starting make sure the board and controller are turned off.
- Press and hold the power switch on the board and the power switch on the controller until you hear 3 beeps.

The board and controller should now be paired. If not, repeat until they are paired.

## **FCC Warning:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device complies with RF specifications when the device used at 0mm from your body.