



User Manual

Product Name: Bluetooth speaker

Brand: HOTTIPS

Model:22246,22215




Manufacture: Dongguan Jinwenhua Digital Technology Co.,Ltd.

Product Introduction:


Thank you for choosing Hottips!® IPX7 Waterproof Wireless Speaker. This manual will help guide your operation of the Hottips!® IPX7 Waterproof Wireless Speaker. First, familiarize yourself with the wireless functionality of your mobile phone or other devices before use.

Included Contents:


- 1 Hottips!® IPX7 Waterproof Wireless Speaker
- 1 Micro-USB to USB Charging Cable

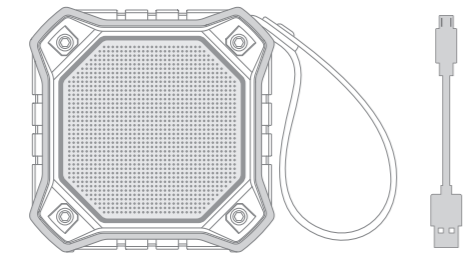

General Functions:

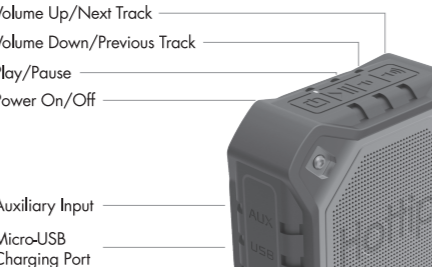

General Connection:

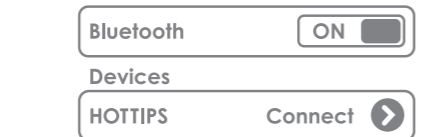 

Function Instructions:

- **Power:** To turn the speaker On and Off, Long press the button until you hear "power on" or "power off."
- **Connecting Bluetooth®:** Once speaker is turned on, it will automatically send its pairing signal to your device. In your device's Bluetooth® settings, find "Hottips" and click connect. Once your device and your Hottips! Waterproof Wireless Speaker is connected you will hear a nice soothing voice saying "paired."
- **Play/Pause:** Press to Play and again to Pause.
- **Volume Up:** Press to turn volume up.
- **Volume Down:** Press to turn volume down.
- **Next Song:** Press for 1 second to go to a next song/track.
- **Previous Song:** Press for 1 second to go to a previous song/track.
- **Calling Functions:** Press when there is an incoming call and press again to end call. Hold for about 2 seconds to reject incoming call.
- **Low Battery Warning:** Hear a "battery low" voice beep and the RED LED will flash.
- **Language Settings:** To change speaker from default English language hold down the and buttons until you find your language of choice. If you rather no voice at all, click through language options until you hear a beeping sound.

Dual Speaker Stereo Pairing:

If you want to **Double Your Sound**, buy a second Hottips!® IPX7 Waterproof Wireless Speaker and pair them together for a louder stereo experience! With **Advanced TWS Technology**, the 2 connected speakers are capable of being up to 33ft. apart in case you want your music at **both** sides of the pool!

1. Turn on both Hottips!® IPX7 Waterproof Wireless Speakers. Press the and the simultaneously for 5 seconds until the voice indicator says "Paired."
2. Activate Bluetooth® on your device and connect to "Hottips." Press and again for 5 seconds to unpair speakers.

Waterproof Safety:

Guaranteed safe in the shower, the rain, by the pool or on a boat. If water does get into speaker make sure to dry out before use. Do Not submerge in water for over **30 minutes** or over **3 feet** deep. However possible it is, the speaker is not intended to play music or make calls while submerged under the water's surface. **WARNING:** Close USB flap tightly before exposing speaker to water to prevent permanently damaging Hottips!® IPX7 Waterproof Wireless Speaker.



Charging Your Device:

1. Connect the included micro-USB charger to the charging port on the left side of the speaker and connect the other end to a USB power supply. During charging, the LED indicator light will turn RED. Once the RED LED indicator light turns BLUE the speaker is now fully charged and ready to be unplugged from the Micro-USB to USB charger!

LED Indicators:

- **Power On:** The left LED indicator shows solid Blue.
- **Bluetooth Pairing:** Blue light flashes quickly when connecting and flashes slowly once connected.
- **Line-In:** Blue light flashes slowly when connected.
- **Charging:** Red light flashes when battery is running low and solid Red while charging. Light will turn solid Blue when charging is complete.

FAQ:

- **Aux Line-In:** Line-in connection is priority over Bluetooth®. Once cable is unplugged, speaker will automatically connect back to device's Bluetooth®.
- **Energy Save:** Speaker will automatically turn off after 2 minutes if not connected or playing. If connected to Bluetooth® but not playing, speaker will automatically shut off after 15 minutes.

Troubleshooting:

- **Poor Sound Quality:** Make sure the speaker and device are paired within the transmission distance of 33ft. and with no barrier between them.
- **Bluetooth Cannot Be Paired:** Ensure that both speaker and device are in pairing mode. If the Blue LED indicator is not flashing quickly, please restart the speaker until it is. Check the Bluetooth® settings on your device to ensure Bluetooth® is enabled and that your device is not in airplane mode.
- **Cannot Charge Speaker:** First check your charging cable and power source connection. If that doesn't work, try using a different micro-USB to USB charging cable to see if that is the problem.

Attention:

1. Please read through this user manual closely to ensure your safety before and while using Hottips!® IPX7 Waterproof Wireless Speaker.
2. Do not modify, repair or dismantle Hottips!® IPX7 Waterproof Wireless Speaker. Doing so may result in fires, electric shocks, complete breakdown of speaker, etc. All if which are not covered under warranty.
3. Do not use any dilutents or volatile liquid to clean Hottips!® IPX7 Waterproof Wireless Speaker.

Audio Specifications:

Driver Unit: 10mm
Frequency Response: 20hz - 20khz
Load Impedance: 4Ω
Speaker Sensitivity: 70dB+/-3dB
Auxiliary Input: 3.5mm

Product Specifications:

Waterproof Level: IPX7
Wireless Specs: Bluetooth 4.2 Technology
Wireless Connection Range: Up to 33 ft.
Listening/Call Time: About 10 Hours at 50% Volume
Charging Time: About 3 Hours
Charge Voltage: 5V/1A
Dimensions (W x H x D): 3.74" x 3.74" x 1.57"
Weight: 0.76lbs.
Battery: 3.7V Lithium-Ion 1500mAh
Tri-Pod Mount: Standard size



WIRELESS & LIMITLESS

FCC Caution.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.