





How to Use

> Pause


While the robot is working, press  on the robot or remote control to pause the cleaning cycle.

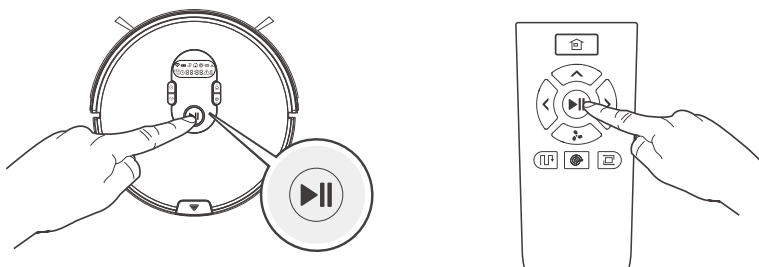

- * Robot will plan a new route after it is paused and restarted. It will repeat cleaning the areas it has covered.
- * Move the robot's position with the remote control when it is paused.
- * Robot will enter sleep mode after idling for 10 minutes, and the light on the right turned off. To reactivate it, press ,  or  on the remote control. To start cleaning, press any button.

> Switching off the robot

Turn the power switch to "O" after the robot is paused.

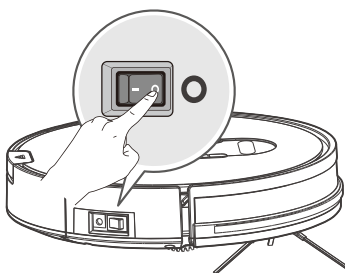





- * To get your robot ready to work anytime, always keep it fully charged by keeping the power switch on after each use.

How to Use

Cleaning modes and functions

The robot comes with several cleaning modes to achieve optimal cleaning performance and better user experience. To select cleaning modes, use the control panel on the robot, remote control or APP.




*When the robot is switched from AUTO mode to another, and returns to AUTO mode after the specific tasks are completed, it will reset a new route and repeat the route that has been covered.

Before setting a cleaning mode, make sure the robot is reactivated (the light at  is on). To reactivate the robot, press ,  or  on the remote control.



> AUTO mode



When the robot finishes cleaning an area in AUTO mode, it will move along the walls to the next area. AUTO mode is suitable for carpet cleaning.

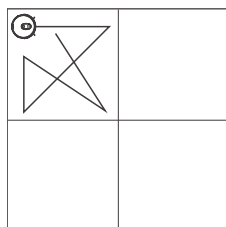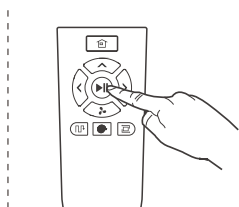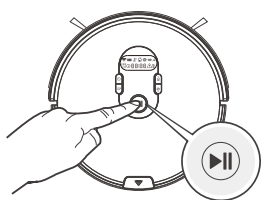Note: Presson  the robot or remote control to start AUTO mode.





> Path mode

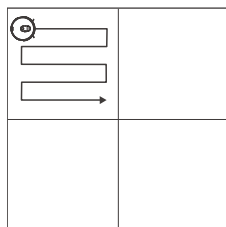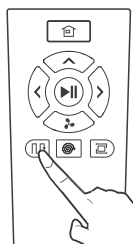
To start Path mode, press  button on the robot or  button on the remote control. The robot will take a M-shaped cleaning route, and approach and clean the areas it has missed during a cleaning cycle.





How to Use


> Point mode

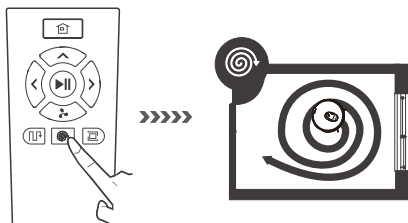For specific areas that require deep cleaning. Press  button on the robot or  button on the remote control to start Point mode.




> MAX mode

For areas with concentrated dust and dirt. For increased suction power and deep cleaning, press  button on the robot when it is in AUTO mode. The display will show HI, denoting high suction power. To return to normal suction, press  button again. The display will show LO, denoting low suction power.

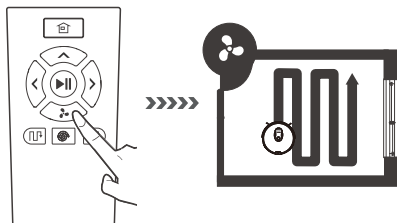


> Broder mode

For the edges and corners of the walls. The robot will clean along the barriers (eg. walls) and return to the charging base after the task is finished.

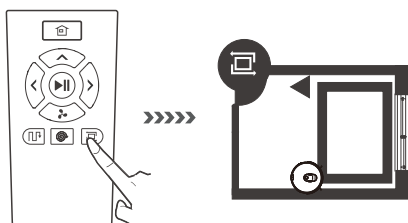

> Self-charging

When the battery runs low, the robot automatically pauses the cleaning cycle and returns to charging base for recharge.

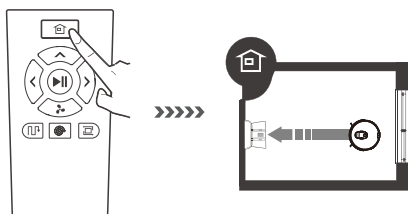


To return the robot to the charging base for recharge, press  button.


How to Use




Setting a schedule

Set a cleaning schedule for the robot and it will automatically clean your home at a specific time. Before setting a schedule with the APP or control panel on the robot, adjust local time on the robot control panel.


> Setting local time

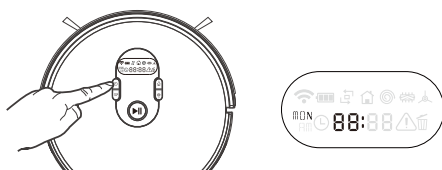To recover the robot from sleep mode, press and hold  button. Set the clock after a beep and when the first two digits on the display flash.



Use  button and  button to adjust the numbers. To adjust local time, use  button to adjust hour, minute, 12/24 hour format and week.


* To adjust the 12/24 hour format, press . The display will show "ON/OFF".

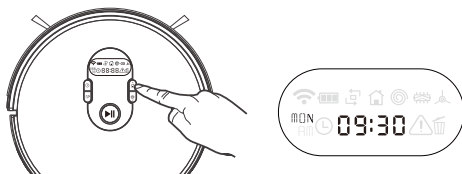

Press  to save the setting.

* The robot will exit the setting after idling for 15 seconds. The setting will not be saved.



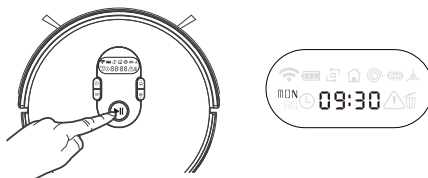




Press  to confirm and save the setting.





How to Use


> Setting a schedule


Method 1:

  To reactivate the robot, and press  button. The robot will buzz and the  and "week" on the display will flash. As the robot enters schedule mode, use  and  to choose the day for scheduled cleaning. Click  to adjust the hour and minute. Press  and  to adjust the numbers and set a schedule.

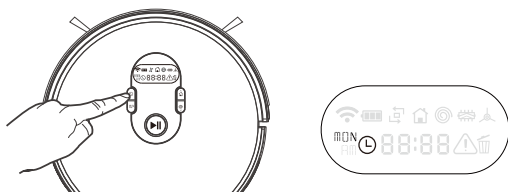





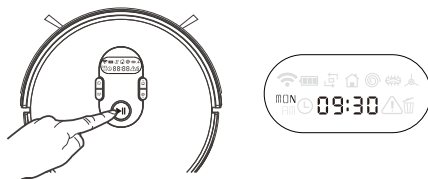


Press  to save the setting. The robot will start cleaning at the scheduled time.

- * The robot will exit the setting after idling for 15 seconds. The setting will not be saved.
- * Press  to confirm and save the setting.



Canceling a schedule

 To reactivate the robot, press  button. The robot will buzz and the  and "week" on the display will flash. As the robot enters schedule mode, use  and  to choose the day for scheduled cleaning. Click  to cancel the upcoming schedule, and the display will show "-:-:". Keep pressing  to activate the upcoming schedule. The display shows the last cleaning schedule.

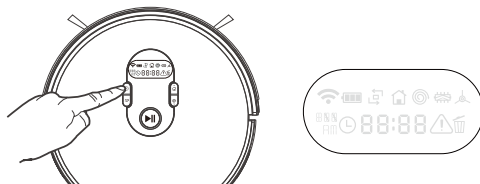


Method 2:

To set a schedule with the APP, see p.26 for details.


APP download & operation

Register & Login

 The robot receives remote commands through "ILIFE Robot" APP.
The instructions below or on the APP interface will guide you through the setup.

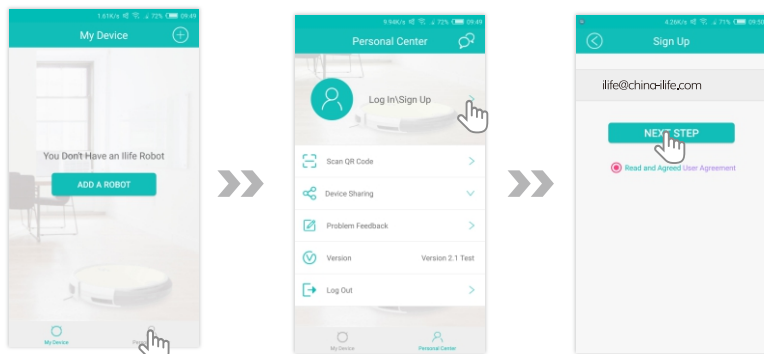

 - 1 Click "Personal Center."
- 2 Click ">" icon to log in or register.
- 3 Enter your email address and click "Read and Agreed User Agreement."

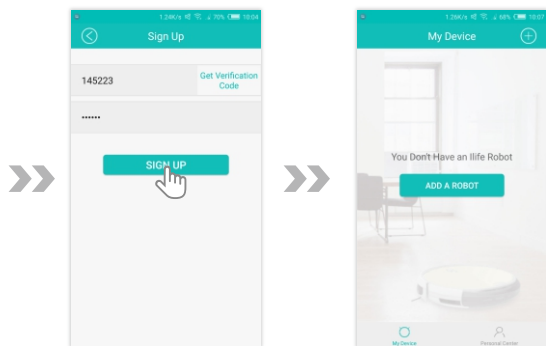

- 4 Click "Get Verification Code" to receive a verification code in your registered email account. Enter the code and set a password on the APP.
- 5 After registration completes, you will be directed to "My Device."