

GOFUNpro User Manual

Product Name: GOFUNpro Model: GFP3


A. Follow the process before you use;

- Plug in USB Cable to Computer, Update and save the real date & time.
- Could charge the **GOFUNpro** via Computer USB port or Android Cell Phone charger, Red LED Blinking indicate charging, Red LED stop blinking, **GOFUNpro** full charged and ready to used.
- Insert 1~64GB TF Card first, mind the Direction,
- Must Insert couldRead/WriteVideo files of C6~C10 high speed TF card.
- **If stop & fail to Record after few seconds, it show GOFUNpro unable to write the Video file to this TF card, change into could read/write Video files of TF card will solve the problem.**
- If are using 64GB TF card, insert the TF card, turn on the **GOFUNpro** power, don't press any Button till RedLED light off & Green LED stop blinking around 5 seconds, than **GOFUNpro** ready to use.




B. Button Control;

- Press **B1** over 2 sec, Green LED on, Power on. Push **B1** over 2 sec again, Power off. Auto Power off in 1 min if no operated any function
- Press **B1** again, started to Record Video, Green LED Blinking, Push again Stop Recording.
- Push **B2**, started capture 1 photo.

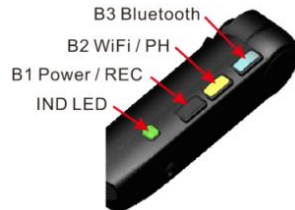

C. WiFi Connect & Control;

- Scan and install the **GOFUNpro** from attach of QR Code card or search **GOFUNpro** under the **APP Store or Google Play** Download and Install to your Cell Phone first.
- Press **B1** turn on the Power, press **B2** over 2 sec, WiFi Power turn on, Yellow LED light blinking, waiting to connect to the Cell Phone, if no connect to any Cell Phone, will auto turn off the Power in 1 min.
- Searching **GOFUNpro** WiFi HSP and connect it Password: **abc12345**.

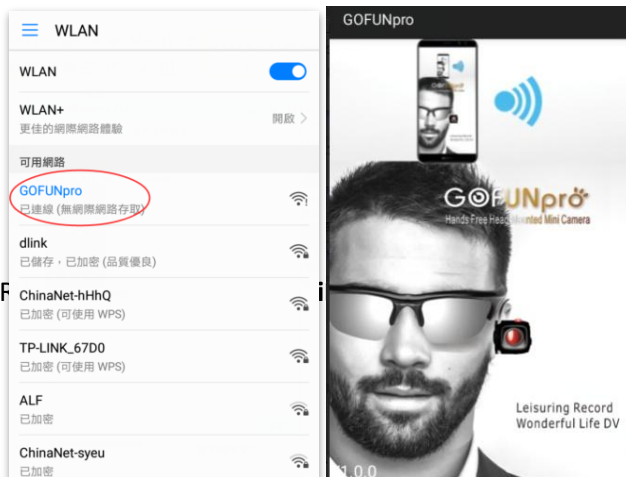

Camera View.


- Tap the Screen will show function Key.



- Tap function icon will started to take picture, Recording Video, Play / Download / Delete TF Card files from Cell Phone

Caution!

- **If fail to display Camera life View, Tap Disconnect WiFi, Tap WiFi Icon to reconnect Again or just Push Reset Button and start all over again.**
- **To save the Battery Power, after done to adjusted the Camera viewing angle, Press B2 Button over 2 sec. To turn off the WiFi power, than Press B1 Button could Record the Video without WiFi Monitoring.**
- **Scan and install the avi player from attached QR Code Card, could play and share the Video or Picture to internet that you take from GOFUNpro.**

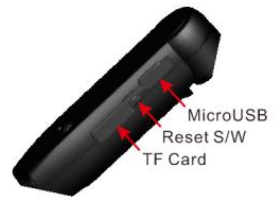

D. Bluetooth

- Press **B3** over 2 sec, Blue LED light on, turn Bluetooth Power on, Press over 2 sec again will turn off the power.
- Switch on the Cell Phone Bluetooth function
- Search and connect **GOFUNpro** device
- Push **B3** button could answer the incoming call
- Push **B3** button could pause the Music playing.
- Using Cell Phone Volume control to adjust the sound Of Volume.



FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.