

User Manual

Remote control instruction:



Pairing use:

Press the reset button 5s on the main controller, and press any key on the remote control to automatically search and pair for use.

Functions of each button:

- 1: power indicator
- 2: head up button, long press button, functional bed/sofa head up;
- 3: head down button, long press button, functional bed/sofa head down;
- 4: one-button flat button, one-button down flat button, functional bed/sofa head and legs reset flat;
- 5: simulate the Angle of the weightless mattress, press the weightless button, and the head and legs of the functional bed/sofa will automatically rise to the customized Angle;
- 6: leg up button, long press button, functional bed/sofa leg up
- 7: leg down button, long press button, function bed/sofa leg down;

NOTE:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.