

封面


工艺：骑马钉 书纸70g 页数:16P
料号： 98-01-2510 成品尺寸:125* 170mm



DAYSNEW

2.4G/Bluetooth Dual-mode Wireless TV Headphone

DB100

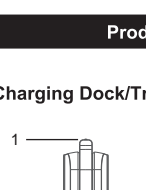


User Manual

Please scan QR code and watch video guide


Product Overview

Overview of the Charging Dock/Transmitter

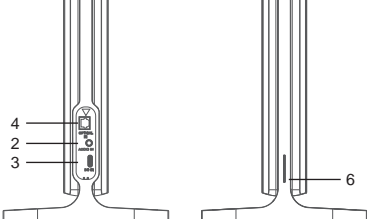


- Headphones charging PIN contact
- 63.5mm audio interface (AUDIO IN)
- Type-C power interface
- Optical TOSLINK audio interface (AUDIO IN)
- SIGNAL communication signal indicator light
- CHARGE charge indicator light

Overview of the Headphones

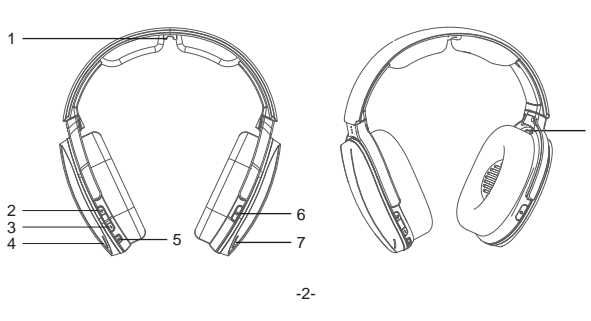


-2-

How to Charge the Headphones

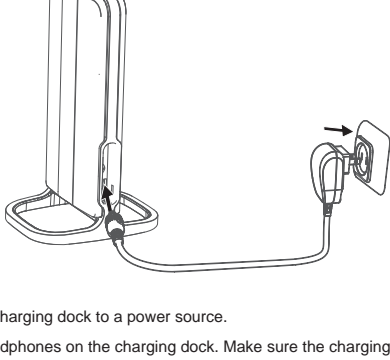


- Connect the charging dock to a power source.
- Place the headphones on the charging dock. Make sure the charging contacts under the headband match well with the charging pins on the charging dock.
- The charging indicator on the charging dock keeps flashing green once charging starts, and it stops flashing and stays green when the headphones are fully charged.

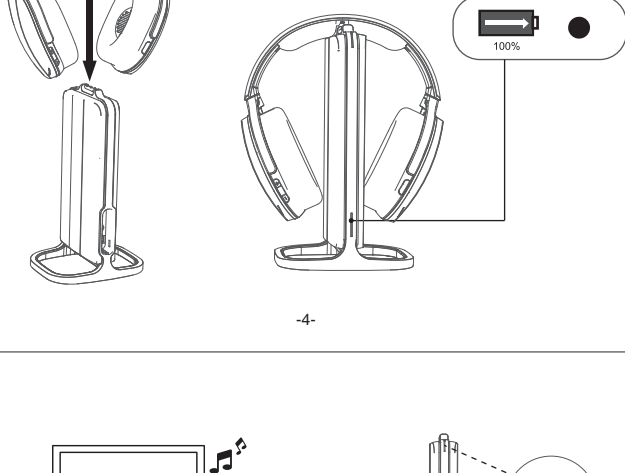

-4-

How to Connect the Transmitter to TV

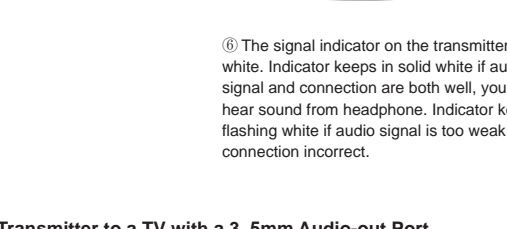


- Connect the charging dock to a power source.
- Place the headphones on the charging dock. Make sure the charging contacts under the headband match well with the charging pins on the charging dock.
- The charging indicator on the charging dock keeps flashing green once charging starts, and it stops flashing and stays green when the headphones are fully charged.

- Connect the power adapter of the transmitter one end to the socket, and the other end to the Type-C interface.
- Connect one end of the 3.5mm audio cable to the audio input port of the transmitter and the other end to TV's audio OUTPUT(not input) port. If there is no sound, make sure your TV speakers are set to [headphones].

-6-

How to pair headphone to audio device with Bluetooth

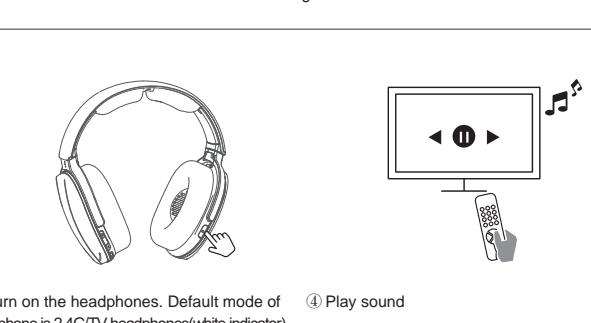

- Turn on the headphones. Default mode of headphone is 2.4G/TV headphones(white indicator). Then short press the Bluetooth/2.4G switch button(Voice prompt: Bluetooth headphone). The SIGNAL indicator light of the headphones will turn from white into blue. Indicating headphone now is in Bluetooth mode.
- If the headphones have been paired with a Bluetooth device before, they will re-connect automatically (Voice prompt: Bluetooth connected).

-8-

- The signal indicator on the transmitter turns white. Indicator keeps in solid white if audio signal and connection are both well, you will hear sound from headphone. Indicator keeps flashing white if audio signal is too weak or connection incorrect.

- Play sound
- The signal indicator on the transmitter turns white. Indicator keeps in solid white if audio signal and connection are both well, you will hear sound from headphone. Indicator keeps flashing white if audio signal is too weak or connection incorrect.

- Connect the transmitter to a TV with a 3.5mm Audio-out Port
- Connect one end of the 3.5mm audio cable to the audio input port of the transmitter and the other end to TV's audio OUTPUT(not input) port. If there is no sound, make sure your TV speakers are set to [headphones].

-6-

- Turn on the headphones. Default mode of headphone is 2.4G/TV headphones(white indicator). Then short press the Bluetooth/2.4G switch button(Voice prompt: Bluetooth headphone). The SIGNAL indicator light of the headphones will turn from white into blue. Indicating headphone now is in Bluetooth mode.
- If the headphones have been paired with a Bluetooth device before, they will re-connect automatically (Voice prompt: Bluetooth connected).

- Play sound
- The signal indicator on the transmitter turns white. Indicator keeps in solid white if audio signal and connection are both well, you will hear sound from headphone. Indicator keeps flashing white if audio signal is too weak or connection incorrect.

- Connect the transmitter to a TV with a 3.5mm Audio-out Port
- Connect one end of the 3.5mm audio cable to the audio input port of the transmitter and the other end to TV's audio OUTPUT(not input) port. If there is no sound, make sure your TV speakers are set to [headphones].

-6-

- Turn on the headphones. Default mode of headphone is 2.4G/TV headphones(white indicator). Then short press the Bluetooth/2.4G switch button(Voice prompt: Bluetooth headphone). The SIGNAL indicator light of the headphones will turn from white into blue. Indicating headphone now is in Bluetooth mode.
- If the headphones have been paired with a Bluetooth device before, they will re-connect automatically (Voice prompt: Bluetooth connected).

- Play sound
- The signal indicator on the transmitter turns white. Indicator keeps in solid white if audio signal and connection are both well, you will hear sound from headphone. Indicator keeps flashing white if audio signal is too weak or connection incorrect.

- Connect the transmitter to a TV with a 3.5mm Audio-out Port
- Connect one end of the 3.5mm audio cable to the audio input port of the transmitter and the other end to TV's audio OUTPUT(not input) port. If there is no sound, make sure your TV speakers are set to [headphones].

-6-

- Turn on the headphones. Default mode of headphone is 2.4G/TV headphones(white indicator). Then short press the Bluetooth/2.4G switch button(Voice prompt: Bluetooth headphone). The SIGNAL indicator light of the headphones will turn from white into blue. Indicating headphone now is in Bluetooth mode.
- If the headphones have been paired with a Bluetooth device before, they will re-connect automatically (Voice prompt: Bluetooth connected).

- Play sound
- The signal indicator on the transmitter turns white. Indicator keeps in solid white if audio signal and connection are both well, you will hear sound from headphone. Indicator keeps flashing white if audio signal is too weak or connection incorrect.

- Connect the transmitter to a TV with a 3.5mm Audio-out Port
- Connect one end of the 3.5mm audio cable to the audio input port of the transmitter and the other end to TV's audio OUTPUT(not input) port. If there is no sound, make sure your TV speakers are set to [headphones].

-6-

- Turn on the headphones. Default mode of headphone is 2.4G/TV headphones(white indicator). Then short press the Bluetooth/2.4G switch button(Voice prompt: Bluetooth headphone). The SIGNAL indicator light of the headphones will turn from white into blue. Indicating headphone now is in Bluetooth mode.
- If the headphones have been paired with a Bluetooth device before, they will re-connect automatically (Voice prompt: Bluetooth connected).

- Play sound
- The signal indicator on the transmitter turns white. Indicator keeps in solid white if audio signal and connection are both well, you will hear sound from headphone. Indicator keeps flashing white if audio signal is too weak or connection incorrect.

- Connect the transmitter to a TV with a 3.5mm Audio-out Port
- Connect one end of the 3.5mm audio cable to the audio input port of the transmitter and the other end to TV's audio OUTPUT(not input) port. If there is no sound, make sure your TV speakers are set to [headphones].

-6-


- Turn on the headphones. Default mode of headphone is 2.4G/TV headphones(white indicator). Then short press the Bluetooth/2.4G switch button(Voice prompt: Bluetooth headphone). The SIGNAL indicator light of the headphones will turn from white into blue. Indicating headphone now is in Bluetooth mode.
- If the headphones have been paired with a Bluetooth device before, they will re-connect automatically (Voice prompt: Bluetooth connected).

- Play sound
- The signal indicator on the transmitter turns white. Indicator keeps in solid white if audio signal and connection are both well, you will hear sound from headphone. Indicator keeps flashing white if audio signal is too weak or connection incorrect.

- Connect the transmitter to a TV with a 3.5mm Audio-out Port
- Connect one end of the 3.5mm audio cable to the audio input port of the transmitter and the other end to TV's audio OUTPUT(not input) port. If there is no sound, make sure your TV speakers are set to [headphones].

-6-

In the Box

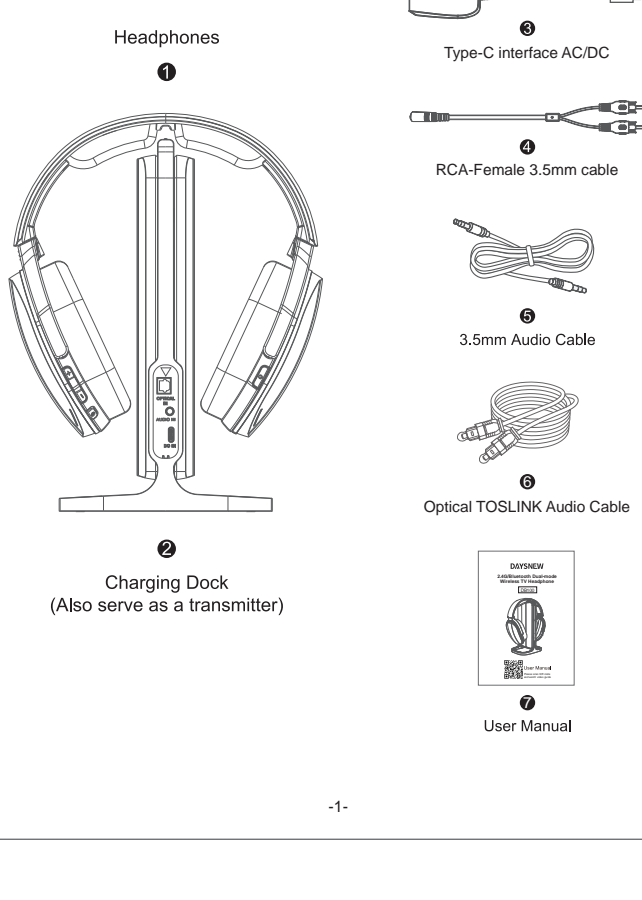

-1-

- Charging PIN contact
- Volume up button
- Volume down button
- SIGNAL indicator
- Bluetooth/2.4G switch button
- Power button
- Power indicator light
- Headphones cover on/off button (R side)

QuickGuide of LED Indicators

Headphone	Power on	The power indicator on the right ear cup stays red.
	Power off	The power indicator on the right ear cup goes off.
	Low Battery	The signal indicator on the left ear cup flashes green and you hear a beep every 1 minute until the headphones turn off automatically.
	Connected	Solid white(2.4 mode) Solid blue(Bluetooth mode)
Charging dock/ Transmitter	Charging	The charging indicator on the charging dock keeps flashing green.
	Fully Charged	The charging indicator on the charging dock stays green.

How to Turn on/off the Headphones

Power on/off: Press and hold the power button for 2 seconds.
Every time the headphones is turned on, it is in TV Headphones mode.

-3-

- Charging PIN contact
- Volume up button
- Volume down button
- SIGNAL indicator
- Bluetooth/2.4G switch button
- Power button
- Power indicator light
- Headphones cover on/off button (R side)

QuickGuide of LED Indicators

Headphone	Power on	The power indicator on the right ear cup stays red.
	Power off	The power indicator on the right ear cup goes off.
	Low Battery	The signal indicator on the left ear cup flashes green and you hear a beep every 1 minute until the headphones turn off automatically.
	Connected	Solid white(2.4 mode) Solid blue(Bluetooth mode)
Charging dock/ Transmitter	Charging	The charging indicator on the charging dock keeps flashing green.
	Fully Charged	The charging indicator on the charging dock stays green.

How to Turn on/off the Headphones

Power on/off: Press and hold the power button for 2 seconds.
Every time the headphones is turned on, it is in TV Headphones mode.

-3-

- Charging PIN contact
- Volume up button
- Volume down button
- SIGNAL indicator
- Bluetooth/2.4G switch button
- Power button
- Power indicator light
- Headphones cover on/off button (R side)

QuickGuide of LED Indicators

Headphone	Power on	The power indicator on the right ear cup stays red.
	Power off	The power indicator on the right ear cup goes off.
	Low Battery	The signal indicator on the left ear cup flashes green and you hear a beep every 1 minute until the headphones turn off automatically.
	Connected	Solid white(2.4 mode) Solid blue(Bluetooth mode)
Charging dock/ Transmitter	Charging	The charging indicator on the charging dock keeps flashing green.
	Fully Charged	The charging indicator on the charging dock stays green.

How to Turn on/off the Headphones

Power on/off: Press and hold the power button for 2 seconds.
Every time the headphones is turned on, it is in TV Headphones mode.

-3-

- Charging PIN contact
- Volume up button
- Volume down button
- SIGNAL indicator
- Bluetooth/2.4G switch button
- Power button
- Power indicator light
- Headphones cover on/off button (R side)

QuickGuide of LED Indicators

Headphone	Power on	The power indicator on the right ear cup stays red.
	Power off	The power indicator on the right ear cup goes off.
	Low Battery	The signal indicator on the left ear cup flashes green and you hear a beep every 1 minute until the headphones turn off automatically.
	Connected	Solid white(2.4 mode) Solid blue(Bluetooth mode)
Charging dock/ Transmitter	Charging	The charging indicator on the charging dock keeps flashing green.
	Fully Charged	The charging indicator on the charging dock stays green.

How to Turn on/off the Headphones

Power on/off: Press and hold the power button for 2 seconds.
Every time the headphones is turned on, it is in TV Headphones mode.

-3-

- Charging PIN contact
- Volume up button
- Volume down button
- SIGNAL indicator
- Bluetooth/2.4G switch button
- Power button
- Power indicator light
- Headphones cover on/off button (R side)

QuickGuide of LED Indicators

Headphone	Power on	The power indicator on the right ear cup stays red.
	Power off	The power indicator on the right ear cup goes off.
	Low Battery	The signal indicator on the left ear cup flashes green and you hear a beep every 1 minute until the headphones turn off automatically.
	Connected	Solid white(2.4 mode) Solid blue(Bluetooth mode)
Charging dock/ Transmitter	Charging	The charging indicator on the charging dock keeps flashing green.
	Fully Charged	The charging indicator on the charging dock stays green.

How to Turn on/off the Headphones

Power on/off: Press and hold the power button for 2 seconds.
Every time the headphones is turned on, it is in TV Headphones mode.

-3-

- Charging PIN contact
- Volume up button
- Volume down button
- SIGNAL indicator
- Bluetooth/2.4G switch button
- Power button
- Power indicator light
- Headphones cover on/off button (R side)

QuickGuide of LED Indicators

Headphone	Power on	The power indicator on the right ear cup stays red.
	Power off	The power indicator on the right ear cup goes off.
	Low Battery	The signal indicator on the left ear cup flashes green and you hear a beep every 1 minute until the headphones turn off automatically.
	Connected	Solid white(2.4 mode) Solid blue(Bluetooth mode)
Charging dock/ Transmitter	Charging	The charging indicator on the charging dock keeps flashing green.
	Fully Charged	The charging indicator on the charging dock stays green.

How to Turn on/off the Headphones

Power on/off: Press and hold the power button for 2 seconds.
Every time the headphones is turned on, it is in TV Headphones mode.

-3-

- Charging PIN contact
- Volume up button
- Volume down button
- SIGNAL indicator
- Bluetooth/2.4G switch button
- Power button
- Power indicator light
- Headphones cover on/off button (R side)

QuickGuide of LED Indicators

Headphone	Power on	The power indicator on the right ear cup stays red.
	Power off	The power indicator on the right ear cup goes off.
	Low Battery	The signal indicator on the left ear cup flashes green and you hear a beep every 1 minute until the headphones turn off automatically.
	Connected	Solid white(2.4 mode) Solid blue(Bluetooth mode)
Charging dock/ Transmitter	Charging	The charging indicator on the charging dock keeps flashing green.
	Fully Charged	The charging indicator on the charging dock stays green.

How to Turn on/off the Headphones

Power on/off: Press and hold the power button for 2 seconds.
Every time the headphones is turned on, it is in TV Headphones mode.

-3-

- Charging PIN contact
- Volume up button
- Volume down button
- SIGNAL indicator
- Bluetooth/2.4G switch button
- Power button
- Power indicator light
- Headphones cover on/off button (R side)

QuickGuide of LED Indicators

Headphone	Power on	The power indicator on the right ear cup stays red.
	Power off	The power indicator on the right ear cup goes off.
	Low Battery	The signal indicator on the left ear cup flashes green and you hear a beep every 1 minute until the headphones turn off automatically.
	Connected	Solid white(2.4 mode) Solid blue(Bluetooth mode)
Charging dock/ Transmitter	Charging	The charging indicator on the charging dock keeps flashing green.
	Fully Charged	The charging indicator on the charging dock stays green.

How to Turn on/off the Headphones

Power on/off: Press and hold the power button for 2 seconds.
Every time the headphones is turned on, it is in TV Headphones mode.

-3-

Specifications

Transmission Mode :2.4G + Bluetooth
Bluetooth Version: V5.3
Working Range: 30M(2.4G)/50M(Bluetooth)
Frequency Response: 15Hz-20KHz
Driver Unit: Ø40mm
SN Ratio: 75dB
Distortion: 0.5%
Battery Capacity: 1.2V 700mAh
Working Time: 9 Hours
Charge Time: 3 Hours
Standby power consumption: < 0.5 W (standard standby mode)
When stop playing, the unit will automatically turn off in around 10 minutes.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for these instructions may void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

-14-

Important Safety Instructions

- Use of headphones will impair your ability to hear other sounds. Use caution while using your headphones when you are engaging in any activity that requires your full attention.
- If you have a pacemaker or other electrical medical devices, you should consult your physician before using this product.
- This package contains small parts that may be hazardous to children and should be kept out of reach from children. This product is not a toy – never allow children to play with this product. Always store the product out of reach from children. The bags themselves or the many small parts they contain may cause choking if ingested.
- Never try to dismantle the product yourself, or push objects of any kind into the products, as they may cause short circuits which could result in a fire or electric shock.
- None of the components can be replaced or repaired by users. Only authorized dealers or service centers may open the product. If any parts of your product require replacement for any reason, including normal wear and tear or breakage, please contact us.
- Avoid exposing your product to heat and humidity to protect against damage to the product or injury to you.
- Keep all products, cords, and cables away from operating machinery.
- If the product overheats, if the product has been dropped or damaged, if the product has a damaged cord or plug, or if the product has been dropped in a liquid, discontinue use and contact us.
- Do NOT use in areas where there are explosive hazards.

Warranty

TV headphones are backed by a one-year warranty.
If you have any questions or suggestions about the product or packaging, please contact us(amazon@artiste-audio.com) or online platform.

CLASSIC TECH DEVELOPMENT LIMITED
Address: 12/F., Yue Xiu Industrial Building, 87 Hung To Road, Kwun Tong, Kowloon, Hong Kong.
Phone: +852 2790-8778
Website: www.artiste-audio.com
Technical Support: amazon@artiste-audio.com
2.4G/Bluetooth Dual-mode Wireless TV Headphone DB100
Made in China

-15-

封底