 


## AE0010 Bright Logo Bluetooth® Speaker User Manual



It is recommended to read this user manual carefully and keep it for future reference.

### Product Overview:

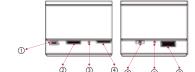

1. Micro USB Port
  2. Control Buttons: (Pause/Pick up/Hang up/Reject/Redial Mode) Change the FM channel
  3. Micro SD Card Slot
  4. Micro SD Card Slot
  5. ON/OFF
  6. LED Indicator
  7. USB Port
- Note: You can see the controls on the bottom of the speaker

### Specifications:

- Bluetooth version 3.0
- Charge voltage 5V
- Lithium battery 300mAh, 3.7V
- Frequency: 2800Hz - 16kHz
- Volume Up/Down: 10 hours.
- Charging Time: 2 hours
- Working distance: Up to 10M
- Frequency: 4 ohms
- Power: 3W
- Distortion: less than 0.5%
- SNR: 95 dB
- Support Micro SD up to 32GB
- 1 LED

### Operation

Switch the ON/OFF button to "ON" to power on the device, to use the following functions:

Note: Once finished using, switch the button to "OFF" to turn off the device.

### Playing music via Bluetooth:

When the speaker is powered on, the blue LED light will flash quickly, which indicates that the device is ready to be paired. From the Bluetooth menu of your device, search for new devices and select "3205". Once paired, the blue LED light of the receiver will remain fixed.

During this pairing, you can control the music from your mobile device or from the receiver.

• Short press to play/pause the music.

• Slide and release the control button to change the song, and hold it to the side to adjust the volume.

Note: Long press to change mode

### Hands-free:

When the device is connected via Bluetooth, you can use the Hands-Free function.

- Short press to pick up/hang up a call and long press to reject the incoming call.
- Press twice consecutively to recall the last outgoing phone number.

Note: During the call, you can adjust the volume of the by keeping the control button to the left or right.

### FM Mode:

Press and hold until you reach FM mode.

Insert the micro USB cable into the Micro USB port on your device, short press to scan the FM channels. Once finished, slide and release the control button to change the channel and hold it to the side to adjust the volume.

### Audio Input Line In:

Insert the audio cable into the micro USB port, and insert the 3.5mm jack into your mp3/mp4 player/mobile phone or other compatible device to play the music.

Note: When connecting the cable, the device does not change mode automatically. Long press to switch to AUX Mode.

### Shutter:

In Bluetooth mode, connect the camera of your mobile device and slide button twice consecutively to take the pictures.

### Playing music by Micro SD Card / USB Flash drive:

Insert the card / USB flash drive into the appropriate slot and the music will start playing automatically.

Note: When connecting the card, the device does not change mode automatically. Long press to switch to SD Card / USB mode automatically. Long press to change mode.

### Troubleshooting:

FAQ	Solution
Unstable connection with other devices.	1. Check whether the speaker is within the power of range or set it off and on again. 2. Check whether the speaker is in proximity that cause interference in a residential installation. This equipment generates noise and can interfere with other equipment in the same area. If possible, relocate the equipment causing interference, or turn off the equipment causing interference. 3. Make sure your device is in "Pairing Mode".
The sound is low or distorted.	1. Check the Bluetooth device volume and volume of the speaker. 2. Check the speaker volume and volume of the device.
Occasional music stops.	1. Check whether the power is off or in operation mode. 2. Check whether the speaker is in proximity that cause interference. 3. Make sure the speaker is not too close to the device.

The LED indicator does not light up

1. The battery is low, so recharge the device.  
 2. Check the power of the device.

### Warnings:

Change or modify a product not expressly agreed by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates noise and can cause harmful interference in a residential installation. If possible, relocate the equipment causing interference, or turn off the equipment causing interference.

Note: It is not necessary that the device is connected via Bluetooth. If it is previously, the speaker will switch to SD Card / USB mode automatically. Long press to change mode.

Charging:

Insert the Micro USB connection into the Micro USB port on your device, short press to scan the FM channels. Once finished, slide and release the control button to change the channel. During the charging process, a red indicator light will remain on.

Note: The charging time can not exceed 8 hours.



Made in China