 
 
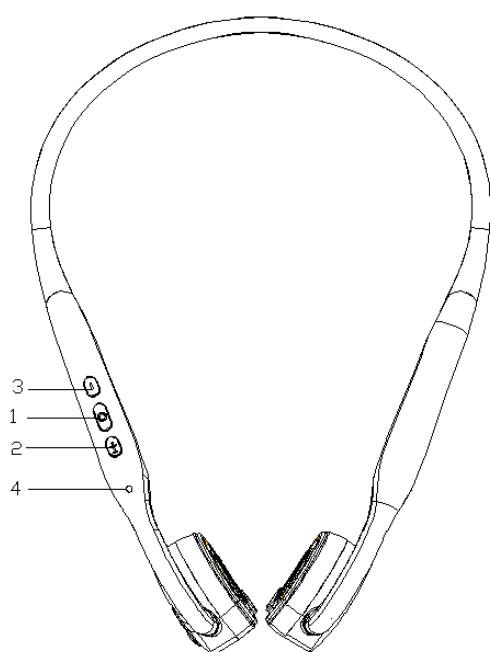 


# 骨传导无线耳机说明书

## Manual Instruction for Bone Conduction Headphones

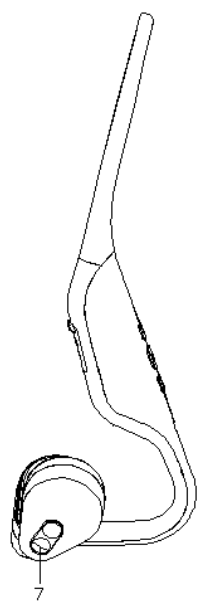

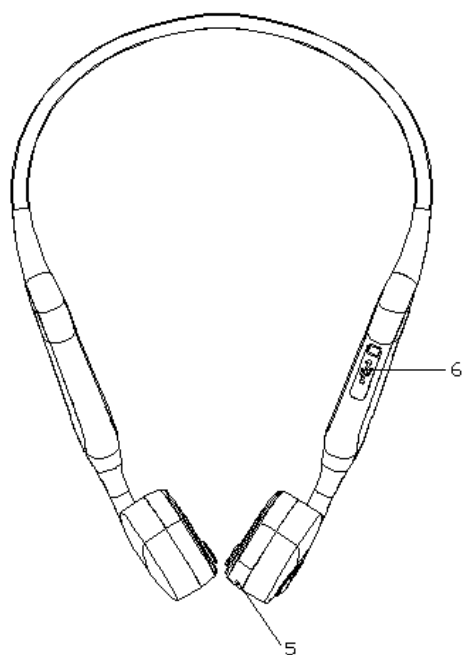

—：

I:

按键功能概述：

Summary of button functions:

1：开机/关机/播放/暂停

2 : 音量增加/下一曲

3 : 音量减小/上一曲

4 : LED 指示灯

5 : 麦克风

6 : USB 充电口

7 : 多功能键 : 暂停/播放/接电话/挂电话/语音助手

1: On/Off/Play/Pause

2: Vol+ /Next

3: Vol- /Pre

4: LED indicating light

5: Microphone

6: USB charging port

7: Multi-functional button: Pause/Play/Answer/Hang-up/Assistant

二 :

II:

控制说明

Controls

开机 : 耳机处于关机状态 , 长按开机键 , 保持 3 秒 , LED 蓝灯闪亮 , 提示音 : power on;

On: When the headphone is in power-off state, press and hold power button for 3 seconds with blue LED flickering, reminding tone: power on.

关机 : 耳机处于开机状态 , 长按开机键 , 保持 3 秒 , LED 红灯闪一下关机 , 提示音 : poweroff;

Off: When the headphone is in power-on state, press and hold power button for 3 seconds with red LED flickering once, reminding tone: power off.

链接 BT：关机状态，长按开机键 5 秒，进入配对状态，LED 指示灯红蓝灯闪烁，耳机提示

音：Pairing;设备（智能手机、平板电脑等）搜索到 **BH128**，点击连接；

Connect BT: When the headphone is in power-off state, press and hold it for 5 seconds to enter a pairing state with red and blue LEDs flickering and reminding tone: pairing. After the device (smart phone, tablet computer, etc.) discovers BH128, press it to connect.

链接成功：耳机成功连接至设备时，LED 蓝灯 3 秒闪一下，耳机提示音：Connected;

Connected successfully: When the headphone is successfully linked to the device, blue LED will flicker every 3 seconds with reminding tone: Connected

暂停/播放：音乐播放状态下，单击一下开机键/多功能键为暂停，再单击一下为播放；

Pause/Play: When the headphone is playing a music, press the power button/multi-functional button to pause and press it again to play.

接听/挂断：来电状态下：单击开机键/多功能键为接听，通话状态下，单击为挂断；

Answer/Hang-up: When there is an incoming call, press the power button/multi-functional button to answer the call. When there is an on-going call, press it to hand it up.

音量增加：单击音量增加键；

Vol+: Press the Vol+ once to turn up the volume.

音量减小：单击音量减小键；

Vol-: Press the Vol- once to turn down the volume.

下一曲：长按音量增加键 2 秒；

Next: Press and hold the Vol+ for 2 seconds.

上一曲：长按音量减小键 2 秒；

Pre: Press and hold the Vol- for 2 seconds.

语音助手：双击多功能键进入语音模式，再双击退出；

Assistant: Press the multi-functional button twice to enter the speech pattern and press it twice again to quit.

复位：插上 USB 充电线后，耳机将会复位并关机充电；

Reset: After plugging the USB charging line, the headphone will be reset and powered off for charging.

清除配对信息：开机键和音量加键同时长按 3 秒；

Clear all pairing info: Press and hold the power-on button and Vol+ button for 3 seconds at the same time.

充电：使用 USB 充电线时，将耳机插入 USB 电源，充电状态下，LED 指示灯为红色，充电完成时，则为蓝色；

 
Charging: In case of using USB charging line for charging, connect the headphone with the USB power. During the charging, LED turns red. After charging, the LED turns blue.

三：

III:

骨传导原理：

Principles of bone conduction:

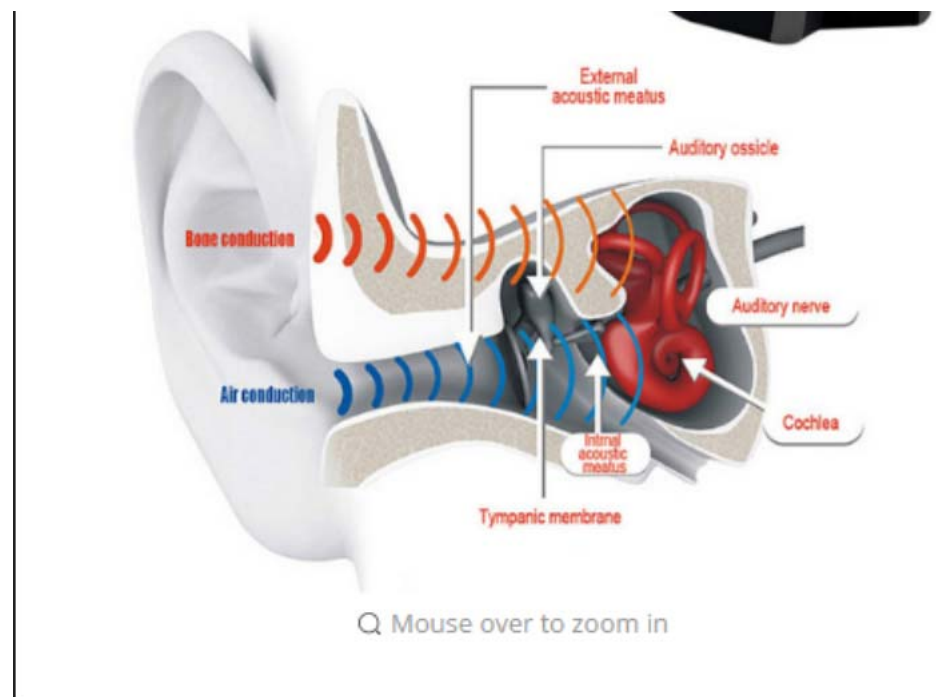

骨传导直达大脑听觉神经 Sound directly conducted to the auditory nerve of the brain  
through bone 空气传导 Aerial conduction 外耳道 External auditory canal 耳  
膜 Eardrum 内耳道 Internal auditory canal 耳蜗 Cochlea 大脑听觉神经  
Auditory nerve of brain 骨传导 Bone conduction 空气传导 Aerial conduction

我们听到的大部分声音，都是声波经过空气到达耳膜，然后声波使耳膜发生震动进而将声音传至内耳道；

Most of the sound we hear is the result of sound waves passing through our eardrum to make it vibrate so that the sound waves can be conducted to the internal auditory canal.

另一种方式是，声波通过骨头震动直接传至内耳而不经耳膜，这也是人们听到自己声音的

一种方式，这种声音的传播方式就是骨传导。

 
The other way is that the sound waves are directly conducted to the internal auditory canal through the vibration of the bone instead of eardrum. This is another way of people hearing their own sound and this sound conduction is called bone conduction.

四：

IV:

佩戴说明

How to wear

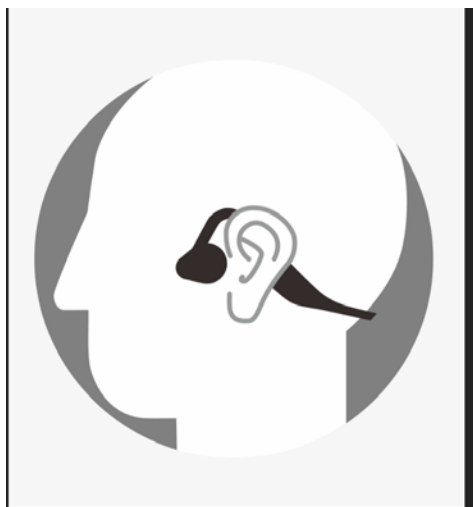

将耳机挂在颈后，两侧的扬声器贴在面颊骨，调整佩戴的舒适度

Hang the headphone behind your neck with both speakers clinging to your cheekbones. After that, adjust it until you feel comfortable.

五：

V:

## 规格

音乐播放时间-----标准状态：4 小时

待机时间-----15 天

充电时间-----1.5 小时

B T 版本-----5.0

喇叭阻抗----- $10\Omega\pm 3\text{db}$

麦克灵敏度----- $-36\pm 3\text{db}$

产品重量-----35.5g

连接距离-----15 米

## Specifications

Music play time-----Standard: 4 hours

Standby time-----15 days

Charging time-----1.5 hours

BT version-----5.0

Speaker impedance----- $10\Omega\pm 3\text{db}$

Microphone sensitivity----- $36\pm 3\text{db}$

Product weight-----35.5g

Connection distance-----15 meters

六：

VI:

重要说明



## Attentions

·本款耳机骨传导扬声器的正确佩戴位置为耳朵前方的面颊骨处，请勿将骨传导扬声器置于耳内；

·长时间听大音量的音乐可能会带来不适感，请尽可能使用中等左右的音量，避免长时间使用大音量；

·无论音量大小，使用耳机都将影响您对周围环境声音的感知，使用耳机时多加注意；

·切勿抛扔、坐压耳机或将其浸入水中；

·耳机应远离火、水和高压设备；

·不适合三岁以下儿童使用，包含小零件；

·请勿将其归类为生活垃圾，而将其送往当地相应的电器电子设备回收站；

Please wear the bone-conduction speakers of the headphone at your cheekbones before your ears and do not put them in your ears.

Listening to music for an excessive long time may make you feel uncomfortable, please try to use a medium volume instead of a big one.

No matter how the volume is, please do not make it prevent you from hearing the surrounding sounds. Please take care when using the headphone.

Do not throw, press the headphone or put it in the water.

The headphone should keep away from fire, water and high voltage devices.

It is not for children' s use as it contains small parts.

Please do not treat it as domestic waste. Instead, send it to your electrical and electronic recycling station.

若用户因违反以上警告内容造成的人身财产损失，本公司不承担任何责任

If there is any injury or property loss due to violation of the above contents, we will not bear any responsibility.

## 产品保修卡

## Warranty Card

用户姓名：

购买日期：

联系电话：

联系地址：

电子邮箱：

购买渠道：

User' s name:

Date of purchase:

Phone number:

Address:

Email:

Purchase channel:

保修条款

Warranty articles

1：用户购机时，随机带有一本说明书以及保修卡，用户填写完整后妥善保管，作为保修凭证。

2：自购机之日起，1 年内耳机在正常情况下出现质量问题，持卡用户可享受免费维修服务。

3：以下不属于保修范围：

A：人为或是不可抗拒因素造成损坏；

B：产品正常磨损；

4：如因人为、超过保修日期和不可抗拒因素造成的故障，我们将收取维修成本。

5：产品出现故障需要返厂保修是，请联系我司，并填写好具体姓名、地址、电话以及故障现象。

1: There is a Manual Instruction and Warranty Card with the device purchased. User should fill in the card and keep it well as a warranty certificate.

2: Since the date of purchase, if there is any quality problem occurring to the headphone within one year, user can enjoy free maintenance service with the Warranty Card.

3: The circumstances hereby are not covered by the warranty:

A: Manmade damage or damage caused by force majeure

B: Normal wear

4: We will claim maintenance cost for the manmade damages, damages occurring beyond the warranty period or damages caused by force majeure.

5: When the product has fault and needs to return to factory for repairing, please contact us and fill in the Card with your name, address, phone number and fault.

**FCC Warning**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.