




TAXI BOOKING DEVICE

Getting started with the Taxi Butler

Model:PRO

Connect to Wi-Fi

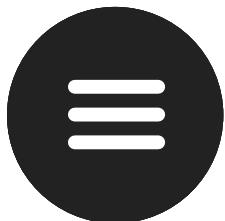

Open the settings menu

Click the hamburger icon in the top left-hand corner.



Select Wi-Fi

Select Wi-Fi in the settings menu.



Choose your Wi-Fi Network

Choose your Wi-Fi network and enter the password.

Order a taxi




Enter advanced booking details

Click on the “Order a taxi” button to enter booking details like destination, pickup time and passenger info.



Press this button once to order

Once you’ve entered the booking details, press the physical button to place the order. To order another taxi simultaneously, simply repeat this process.

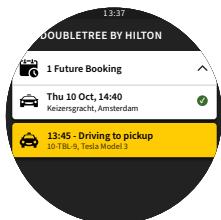

See when your taxi arrives

Once a driver accepts the ride, you will be given an estimated time of arrival and driver details. The booking will turn green when the taxi has arrived.



Cancel a taxi

Click on the booking that needs to be cancelled, then press on “Cancel booking” at the bottom.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radiator& your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.