

Contents and overview

A Controller

- 1 On/off switch
- 2 Battery cover
- 3 Battery compartment

B Vehicle

- 1 On/Off switch
- 2 Battery compartment
- 3 Battery connector

C Movement

- 1 Drift Left & Drift Right
- 2 Backward
- 3 Left
- 4 Right
- 5 Drift Left
- 6 Drift Right

D Charging Battery

E Wheel Alignment

Batteries

9.6V rechargeable batteries and charger are supplied.
1 × 9v battery for controller is supplied.

Assembly instructions

IMPORTANT:

Controller

1. Slide ON/OFF switch to OFF. **A ①**
2. Grasp the tab of the battery compartment cover and lift the cover up. **A ②**
3. Put the 9V battery in the compartment according to the polarity symbols (+ and -) marked inside. **A ③**
4. Replace the battery compartment cover.

Vehicle

1. Slide ON/OFF switch on the bottom of the vehicle to OFF. **B ①**
2. Use a coin to turn the two battery door stoppers until they stop, then remove the battery door. **B ②**
3. Make sure the 9.6V battery pack has a full charge as per the charging instructions.
4. Plug the battery pack connector into the connector found in the battery compartment. **B ③**
5. Carefully tuck the wire into the compartment and insert the battery pack so that it lies flat in the compartment.
6. Replace the battery door and use a coin to turn the stoppers back.

Operating instructions

1. Slide ON/OFF switch on the bottom of the vehicle to ON. **B ①**
2. Slide ON/OFF on the controller to ON. **A ①**
3. Follow the directions below to control the movement and direction of the vehicle:

Left Control Lever

- Push forward to go forward. **C ①**
- Pull backward to go backward. **C ②**
- Release to stop.

Right Control Lever

- Push left to turn left. **C ③**
- Push right to turn right. **C ④**
- Release to go straight.

Drifting Function:

- Press A (the left top button) to drift to left side. **C ⑤**
- Press B (the right top button) to drift to right side. **C ⑥**

4. Slide ON/OFF switches on both vehicle and controller to the OFF position and remove all batteries when not in use.

Wheel Alignment

Steering can be adjusted with the trim switch located on the bottom chassis area. Turn either left and right until you have made the adjustment to maintain a straight path of movement. **E ①**

Troubleshooting

If the vehicle does not react:

- Is the switch on the vehicle turned to on?
- Have the batteries been inserted correctly?
- Are the battery contacts bent or dirty?
- Are the batteries exhausted or faulty?

If the vehicle does not react correctly:

- Are the batteries weak?
- Have the vehicle's wheels picked up lint, hair, threads or dust? Carefully remove such materials from the wheel bearings.
- Are there other radio controlled vehicles being used in the same area, perhaps using the same frequency?
- Are there metal grids or fence nearby? These may cause the vehicle to act in an uncontrolled way.
- Are walkie talkies or CB radios being used in the area? These can cause interference.

Attention!

1. You cannot operate 2 vehicles in the same area when they both have the same operating frequency.
2. The vehicle's range varies depending on surroundings and operation.
3. For maximum battery life rest the vehicle after 15 minutes of continuous operation. A rest period of 30 minutes is recommended.
4. Do not drive the vehicle on sand, mud, snow or through puddles, or use outside if raining.
5. Do not store vehicle or controller near sources of heat or in direct sunlight for long periods.
6. Do not leave outside overnight as night dampness is harmful to interior mechanism.
7. If there is any indication of thunder, do not play outside.
8. Do not attempt to pick up the vehicle when in motion.
9. Keep fingers, hair and loose clothing away from the tyres and wheel hub when the vehicle is switched on.
10. Vehicle can sometimes cause interference with television or radio reception. Move to another area if this happens.
11. Remove batteries from vehicle and controller when not in use.
12. Do not drop or attempt to crash the vehicle into walls or other obstacles.
13. Do not try to disassemble any part of the vehicle.
14. Do not use any type of chemical for cleaning purposes as the vehicle body could be damaged.
15. It is recommended that this toy and all accessories be periodically examined for potential hazards, and that any potentially hazardous parts be repaired or replaced.
16. IF THIS TOY IS BEING OPERATED IN THE PRESENCE OF CHILDREN UNDER 8 YEARS OF AGE, ADULT SUPERVISION IS RECOMMENDED.
17. Only operate the product and its accessories when fully assembled and in accordance with this manual.
 - This product and its accessories are not suitable for children under the age of 36 months, because of small part that can be swallowed.
 - Intended for children age 4 and older

CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert item correctly by matching the + and - polarity markings.
2. 'DO NOT mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. RECHARGEABLE BATTERIES: Do not mix these with any other types of battery. Always remove from the product before recharging. Recharge batteries under adult supervision.
8. DO NOT RECHARGE OTHER TYPES OF BATTERIES.
9. As with all small items, these batteries should be kept away from children. If swallowed, seek medical attention immediately.

CAUTION-ELECTRICALLY OPERATED:

NOT RECOMMENDED FOR CHILDREN UNDER 8 YEARS HANDLE WITH CAUTION TO PREVENT ELECTRIC SHOCK.
INPUT: 100-240V 50-60HZ 300mA
OUTPUT: 12V DC 500mA.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- * Reorient or relocate the receiving antenna.
- * Increase the separation between the equipment and receiver.
- * Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- * Consult the dealer or an experienced radio/TV technician for help.



If any further question, please contact by e-mail address: general@echotoyskh.com

