 


材质:纸
颜色:彩色

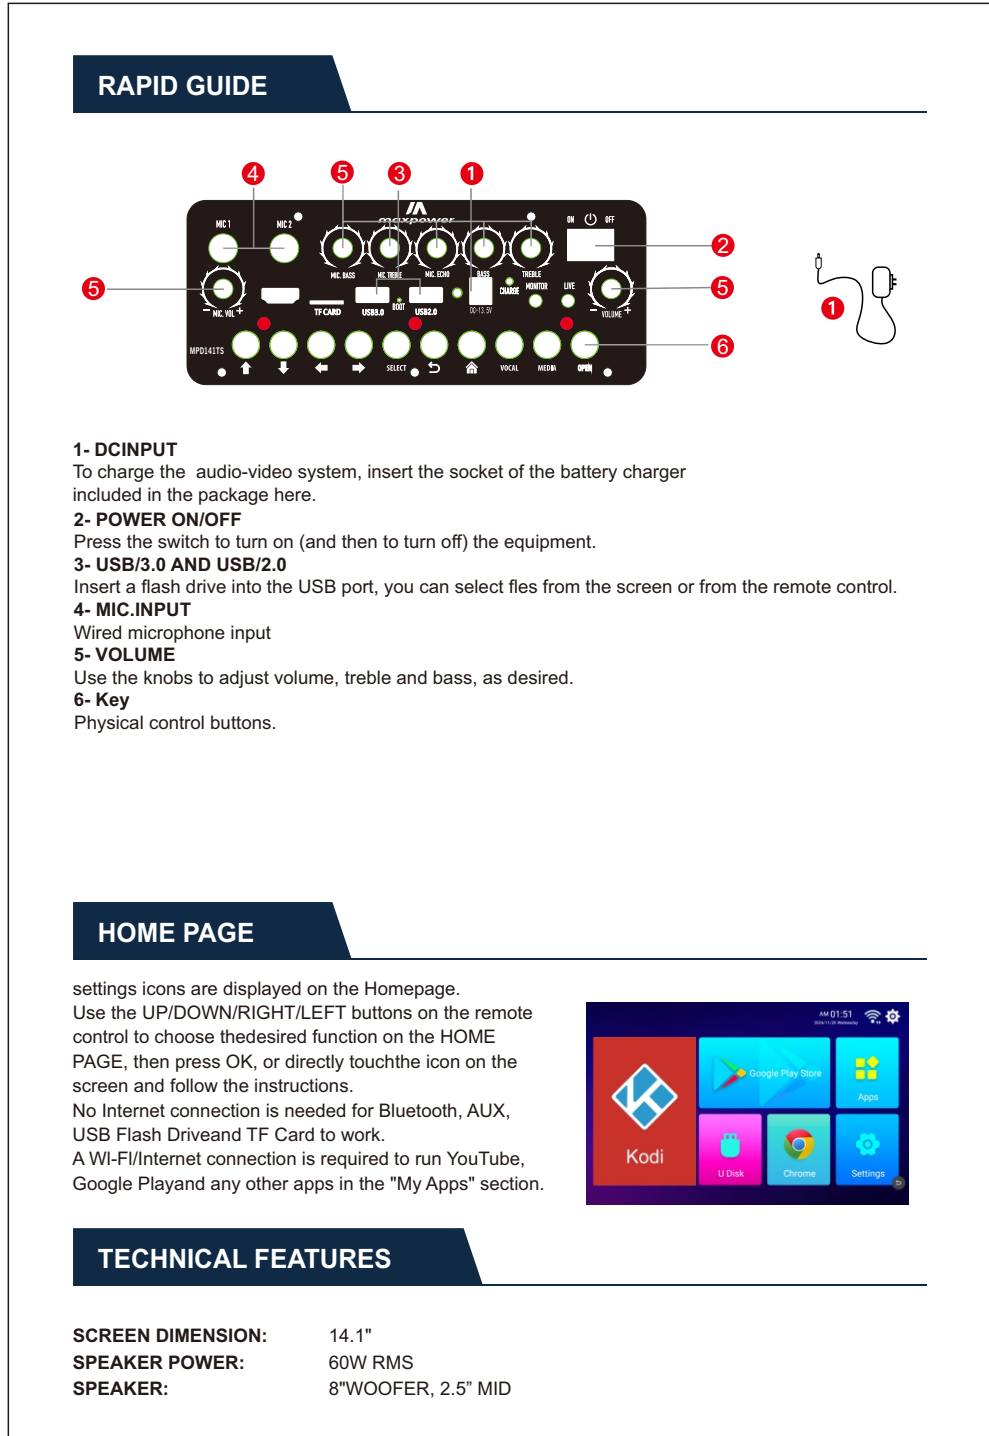


正面

1



HOME PAGE


settings icons are displayed on the Homepage. Use the UP/DOWN/RIGHT/LEFT buttons on the remote control to choose the desired function on the HOME PAGE, then press OK, or directly touch the icon on the screen and follow the instructions. No Internet connection is needed for Bluetooth, AUX, USB Flash Drive and TF Card to work. A Wi-Fi/Internet connection is required to run YouTube, Google Play and any other apps in the 'My Apps' section.

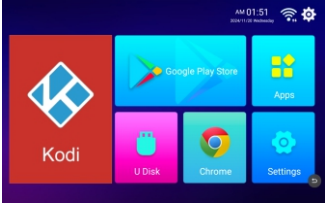 

TECHNICAL FEATURES

SCREEN DIMENSION: 14.1"
SPEAKER POWER: 60W RMS
SPEAKER: 8"WOOFER, 2.5" MID

 2

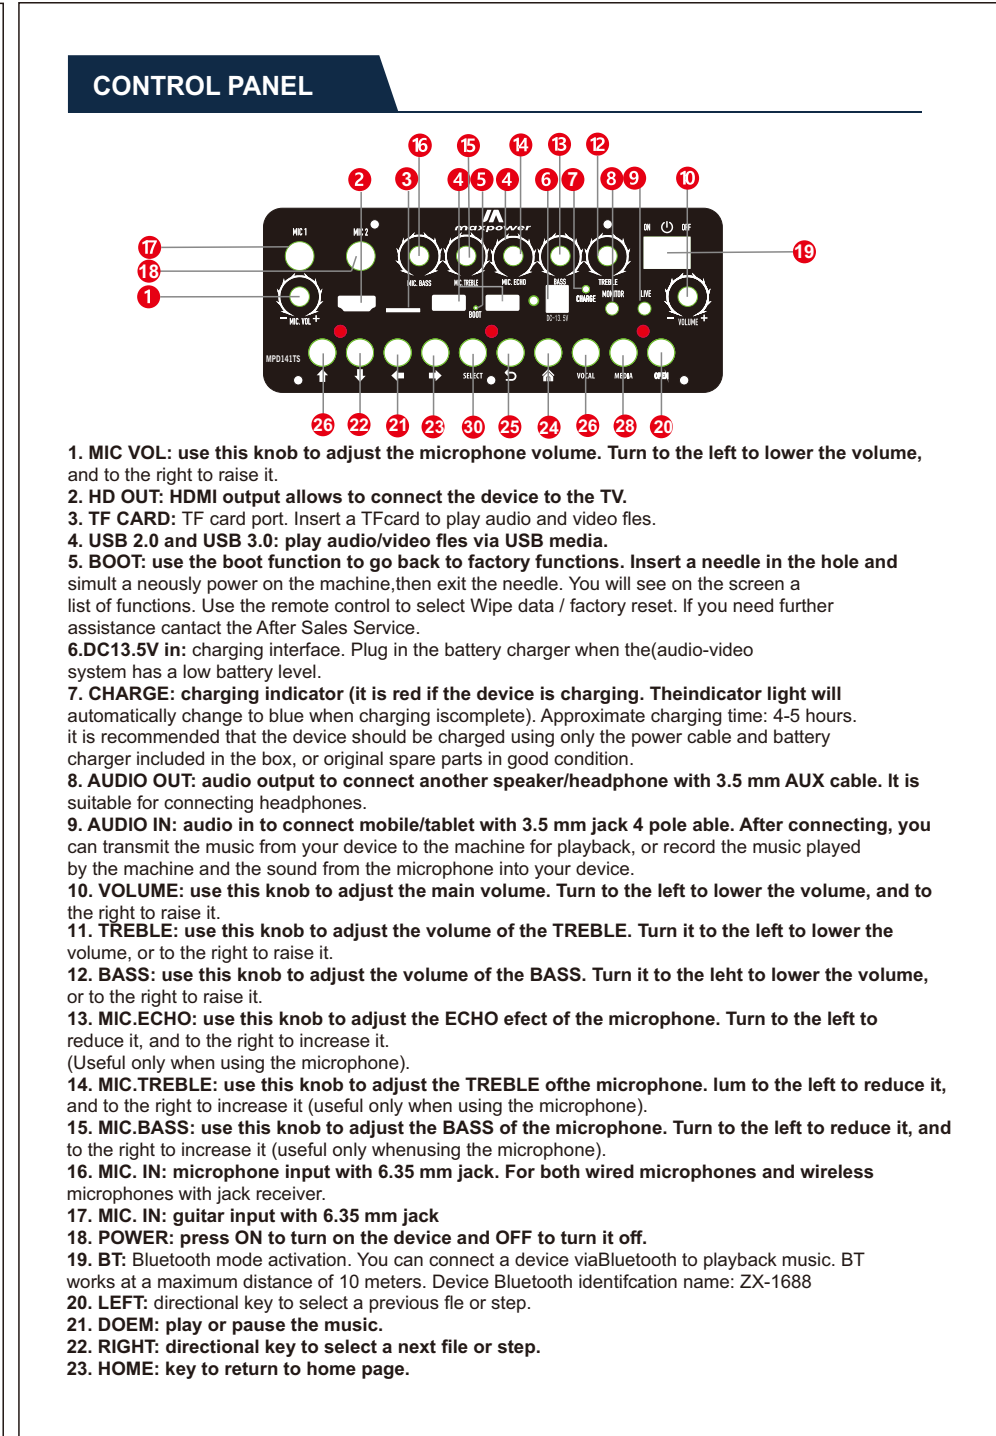


CONTROL PANEL

1. MIC VOL: use this knob to adjust the microphone volume. Turn to the left to lower the volume, and to the right to raise it.
2. ID OUT: HDMI output allows to connect the device to the TV.
3. TF CARD: TF card port. Insert a TF card to play audio and video files.
4. USB 2.0 and USB 3.0: play audio/video files via USB media.
5. BOOT: use the boot function to go back to factory functions. Insert a needle in the hole and simultaneously power on the machine, then exit the needle. You will see on the screen a list of functions. Use the remote control to select Wipe data / factory reset. If you need further assistance, contact the After Sales Service.
6. DC13.5V in: charging interface. Plug in the battery charger when the (audio-video) system has a low battery level.
7. CHARGE: charging indicator (it is red if the device is charging. The indicator light will automatically change to blue when charging is complete). Approximate charging time: 4-5 hours. It is recommended that the device should be charged using only the power cable and battery charger included in the box, or original spare parts in good condition.
8. AUDIO OUT: audio output to connect another speaker/headphone with 3.5 mm AUX cable. It is suitable for connecting headphones.
9. AUDIO IN: audio in to connect mobile/tablet with 3.5 mm jack 4 pole cable. After connecting, you can transmit the music from your device to the machine for playback, or record the music played by the machine and the sound from the microphone into your device.
10. VOLUME: use this knob to adjust the main volume. Turn to the left to lower the volume, and to the right to raise it.
11. TREBLE: use this knob to adjust the volume of the TREBLE. Turn it to the left to lower the volume, or to the right to raise it.
12. BASS: use this knob to adjust the volume of the BASS. Turn it to the left to lower the volume, or to the right to raise it.
13. MIC ECHO: use this knob to adjust the ECHO effect of the microphone. Turn to the left to reduce it, and to the right to increase it.
14. MIC TREBLE: use this knob to adjust the TREBLE of the microphone. Turn to the left to reduce it, and to the right to increase it (useful only when using the microphone).
15. MIC BASS: use this knob to adjust the BASS of the microphone. Turn to the left to reduce it, and to the right to increase it (useful only when using the microphone).
16. MIC IN: microphone input with 6.35 mm jack. For both wired microphones and wireless microphones with jack receiver.
17. MIC IN: guitar input with 6.35 mm jack.
18. POWER: press ON to turn on the device and OFF to turn it off.
19. BT: Bluetooth mode activation. You can connect a device via Bluetooth to playback music. BT works at a maximum distance of 10 meters. Device Bluetooth identification name: ZX-1688.
20. LEFT: directional key to select a previous file or step.
21. DOWN: play or pause the music.
22. RIGHT: directional key to select a next file or step.
23. HOME: key to return to home page.


24. RTN: key to return to the previous page.
25. UP: key to start voice change app (Useful only when using the microphone).
26. VOICE: Original backing vocals switching.
27. MEDIA: Multimedia features.
28. OK: Confirm key.

 WI-FI CONFIGURATION

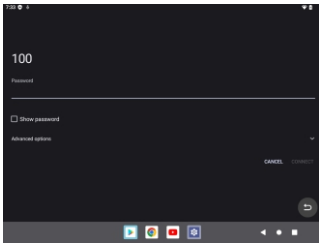

Touch the SETTING icon on the home page or press the directional keys on the remote control, until you reach the desired icon, then press the OK key. Scroll down the list of functions to select Wi-Fi and press OK (or select the function by touching the screen). Activate the Wi-Fi and select the desired network. Enter the password (if required), for connection.

 BT CONFIGURATION

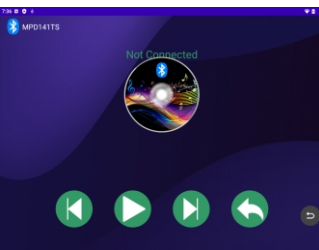


Touch the Bluetooth icon from the Home screen or press the BT button on the control panel or on the remote control, to start the Bluetooth connection. Open your device settings in the Bluetooth section and select the device. You can now listen to music files on your device through the device. To select the tracks, you can use the device that is connected to device, or the following options:
-CONTROL PANEL: Press the PREV. and NEXT buttons to choose tracks. Press the PLAY/PAUSE key to pause or restart a paused track. Press the BT, HOME or BACK buttons to exit Bluetooth mode.
-REMOTE CONTROL AND TOUCHSCREEN: It is possible to choose a track using the icons on the screen or selecting them with the remote control.

DEVICE SETTINGS


To set the device, use the directional buttons on the remote control or directly touch the SETTINGS icon on the screen. Press the BACK key or the arrow icon in the bottom right corner of the screen, to exit a function. Press the OK key on the remote control or tap the screen to enter a function. You can adjust some functions of the device in the settings section by following the directions on the screen:
DATE and TIME SETTING: Connecting the machine to Wi-Fi, date and time will automatically update. If this does not happen, due to connection problems, you can follow these steps:
1- from the home page, touch SETTINGS icon and select SYSTEM -> DATE & TIME
2- select TIME ZONE and look for your region.
LANGUAGE SETTING: 1- from the home page, touch SETTINGS icon and select SYSTEM -> LANGUAGES & INPUT, then LANGUAGES
2- Continue with ADD A LANGUAGE and choose the desired language. To make it the main language of the device, use your finger to touch the language indicated on the screen and drag it to the first place. The language will automatically change. To back up your data and files, or go to factory data reset, go to SYSTEM -> BACKUP or RESET OPTIONS.
STAND BY MODE: Default stand by mode in 30 mins and you can change the time slot to never, 1 hour or 2 hours in SETTING -> DISPLAY -> SCREEN TIMEOUT. You can wake up the machine by either using Power button on remote control, touching the screen or pushing one of the buttons (except LED button) on control panel.

 MEDIA PLAYER

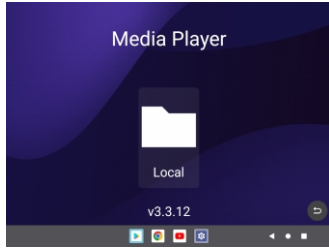

Media: from the Homepage, select the Media icon, then insert a USB flash drive or mini-TF card and touch the screen to select one of the options (see image) depending on the support you want to play. Select PICTURE, MUSIC or VIDEO, depending on what you want to play. The list of the files available will appear. Select a file, then the playback will follow the order of the file on the support.

 VIDEO PLAYER

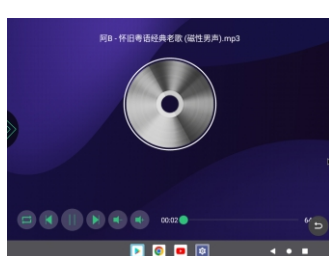

To go back to the play list, press BACK (or the arrow icon in the bottom right corner), then choose the desired file. Tap icon 1 to select the playback mode: single loop, random play, list loop. Tap icon 2 to select the stereo channel. Press the PREV. or NEXT buttons, or use icons 3 and 5 on the screen, to playback the previous or next track. Press the PLAY/PAUSE button, or use icon 4, to pause or play a track. To set the volume, use the knobs, the remote control or use the icons 6 and 7. Press the HOME key to exit the playback mode.

 
Remote control



Key definition

1. LCD backlight switch.
2. Turn sound off.
3. Microphone priority.
4. MENU.
5. Microphone volume adjustment
6. Music volume adjustment
7. Play, pause.
8. Loop Playback.
9. HOME.
10. Return.
11. Up, down, left, right.
12. OK.
13. MENU.
14. Enter YOUTUBE.
15. Numerical key.
16. More applications.
17. Next page.
18. Previous page.

3

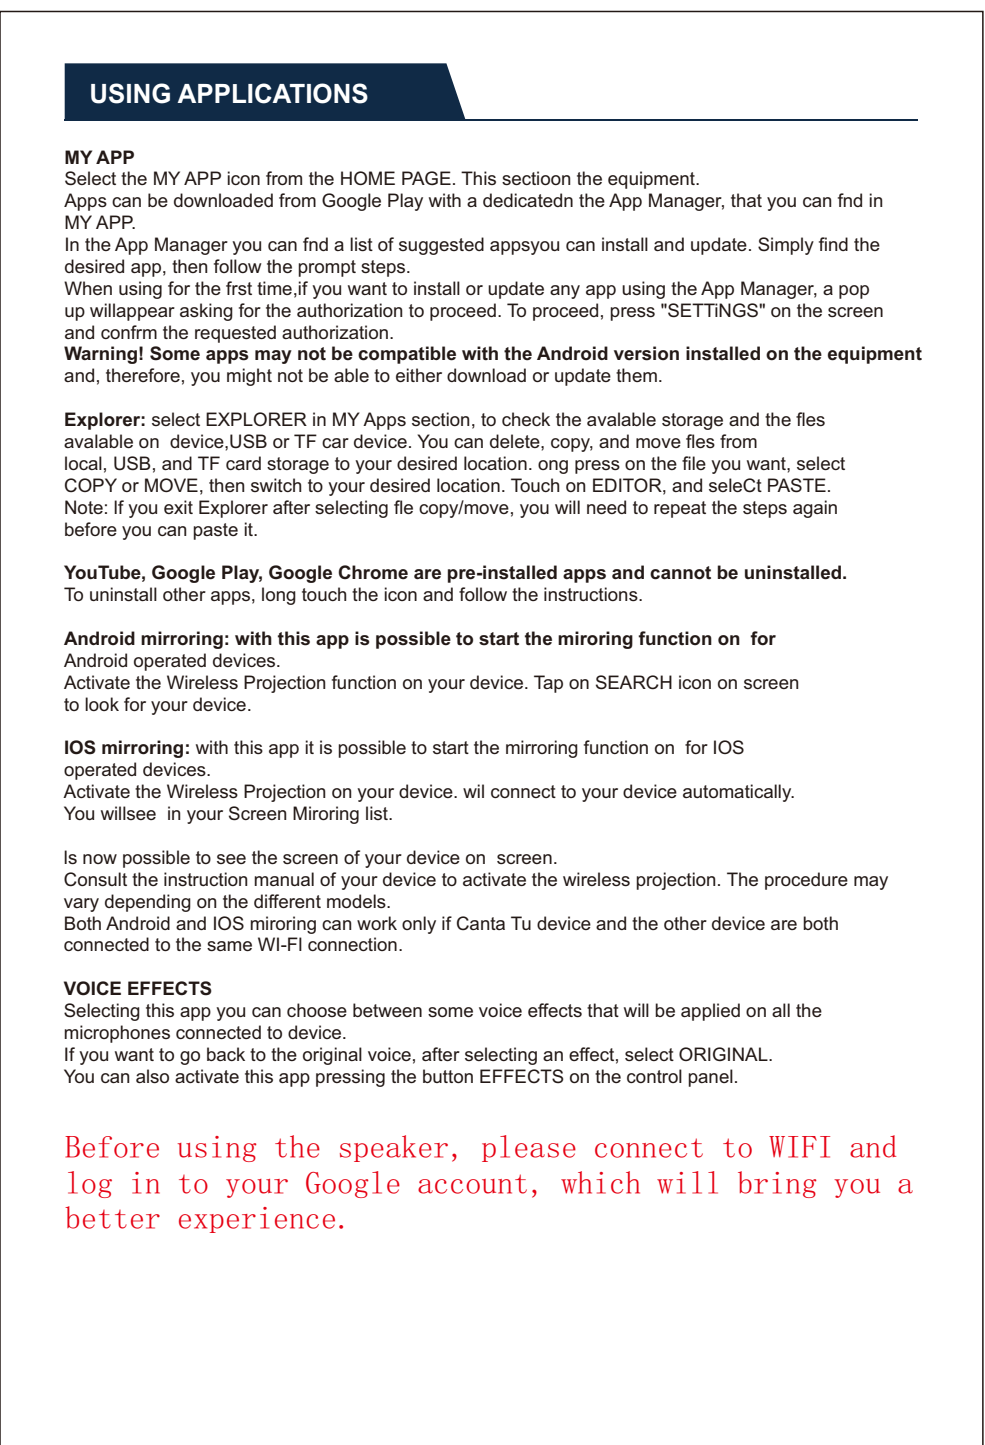

USING APPLICATIONS

MY APP

Select the MY APP icon from the HOME PAGE. This section contains the equipment. Apps can be downloaded from Google Play with a dedicated App Manager, that you can find in MY APP. In the App Manager you can find a list of suggested apps you can install and update. Simply find the desired app, then follow the prompt steps. When using for the first time, if you want to install or update any app using the App Manager, a pop up will appear asking for the authorization to proceed. To proceed, press 'SETTINGS' on the screen and confirm the requested authorization.

Warning! Some apps may not be compatible with the Android version installed on the equipment and, therefore, you might not be able to either download or update them.

Explorer: select EXPLORER in MY Apps section, to check the available storage and the files available on device, USB or TF card device. You can delete, copy, and move files from local, USB, and TF card storage to your desired location, or press on the file you want, select COPY or MOVE, then switch to your desired location. Touch on EDITOR, and select PASTE. Note: If you exit Explorer after selecting the copy/move, you will need to repeat the steps again before you can paste it.

YouTube, Google Play, Google Chrome are pre-installed apps and cannot be uninstalled. To uninstall other apps, long touch the icon and follow the instructions.

Android mirroring: with this app it is possible to start the mirroring function on for Android operated devices. Activate the Wireless Projection function on your device. Tap on SEARCH icon on screen to look for your device.

iOS mirroring: with this app it is possible to start the mirroring function on for iOS operated devices. Activate the Wireless Projection on your device. It will connect to your device automatically. You will see in your Screen Mirroring list.

 
It is now possible to see the screen of your device on screen. Consult the instruction manual of your device to activate the wireless projection. The procedure may vary depending on the different models. Both Android and iOS mirroring can work only if the Cantu Tu device and the other device are both connected to the same Wi-Fi connection.

VOICE EFFECTS Selecting the app you can choose between some voice effects that will be applied on all the microphones connected to device. If you want to go back to the original voice, after selecting an effect, select ORIGINAL. You can also activate this app pressing the button EFFECTS on the control panel.

Before using the speaker, please connect to WIFI and log in to your Google account, which will bring you a better experience.

4

5

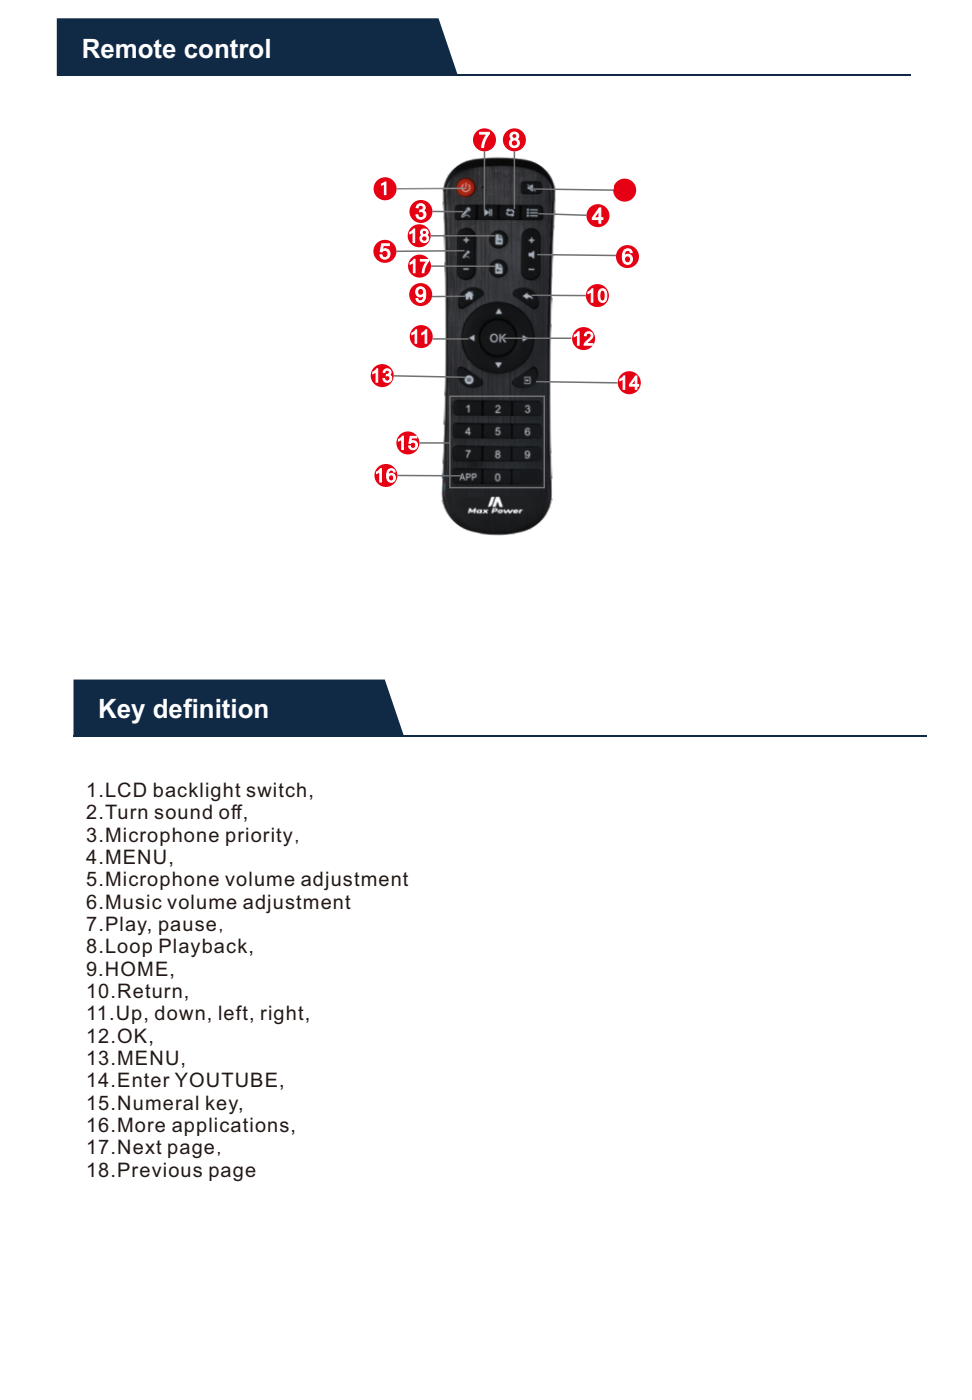

背面

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.