



NEO M6

DEVICE LAYOUT

- 1 **Left Soft Key**  
Used to exit the Menu Option and Home Screen
- 2 **Center/Soft Button**  
Press to end an any incoming or outgoing or answer incoming call
- 3 **Call Button**  
Press to call a listed number or to accept incoming call
- 4 **Volume Buttons**  
Used to adjust the volume level or enter your contact
- 5 **Lock/Unlock Button**  
Long press to Home Screen to Lock device
- 6 **Right Soft Key**  
Press to scroll through Contacts, Open an Home Screen
- 7 **Power/Cancel Button**  
Long press to Power off or device Press to cancel the incoming
- 8 **Navigation Button**  
Navigate the menu by pressing up/down/left/right
- 9 **Change Audio Profile**  
Long press Home Screen to change the Audio Profile
- 10 **Touch Light Button**  
Long press to Home Screen to turn on the Light Touch

Status Icons


Changing Audio Profiles

Changing the Audio Profiles allows you to change the device volume levels. This menu will be found in Home Screen > Menu (≡) > Settings > Profiles

There are preset Audio Profiles:

- General - These are the default audio levels (recommended)
- Silent - These settings mute all audio notification
- Meeting - These settings put all audio to vibration
- Indoor - These settings make all audio levels low
- Outdoor - These settings make all audio max

You can edit any of these settings by selecting Option (≡)

In these settings you will be able to change the ringtone, adjust volume levels, select ring type, and additional audio settings

Turn the device ON or OFF

Long Press the Power Button (⏻) > Enter Unlock PIN, if necessary

To unlock the device Press the Left Soft Key (≡), then the Star Key (★)

Make or answer a Call

To make a call, go to the Home Screen and enter the number. Once the number is completed, Press the Call button (☎)

To answer calls, to accept the call press the Call button (☎) > To reject the call, press the Cancel button (⏻)

Calling Options

To enter Speaker Mode during a phone call, press the Confirmation Button (SPEAKER)

To adjust the volume levels, press up and down on the Navigation Button

To end the call press the Cancel button (⏻)

For more options, select Menu by pressing Left Soft Key (≡) > In this menu you can hold a new call, Place call on hold, Start recording call, Mute Call, adjust volume via contacts, call logs, or open messages.

Send Text/Multimedia Messages

Enter the Message Application by entering the Menu (Left Soft Key) and scroll up with the navigation button to the Application Messages.

Select the message (1) For Text Message press SMS or (2) For Multimedia Message press MMS.

(1) To enter the recipient, enter the phone number. Scroll down to enter the message portion of the text. Do not complete, select Options and Select Send

(2) To enter the recipient, enter the phone number. Enter the desired information (Subject, Text, Image, Video or Audio). Once complete, select Options and Select Send

View Messages

To view the received messages, press Inbox.

To view the sending messages, press Outbox.

To view the draft messages, press Draft.

To view the sent messages, press Settings.

Display Settings

In Display setting you are able to change your wallpaper, adjust brightness settings, change screen timeout, change the keypad lock time, and change your screen saver settings.

You will find this menu in HomeScreen > Menu (≡) > Settings > Display Settings

Contact Menu

In the Contact Menu you can save, edit, import, and export your contacts.

You can access your contacts by Home Screen > Menu > Inboxes

Adding a New Contact

To add a new contact select

1. Select Options LSK (≡)
2. Select Menu
3. Insert a Profile Picture, Name, Mobile number, Home number, and to a group or set the ringtone.
4. Select Save LSK (≡)

Setting up Speed Dial

To add a number to speed dial, follow the steps below:

1. Select Options LSK (≡)
2. Select Settings
3. Select SIM 1/2 Network accounts
4. Select your SIM card from the preset network accounts

Select Option

1. Select Speed dial
2. Select which number you want to set up
3. Input the number
4. Select ok

Importing/Exporting Contacts

To import/export your contacts you must have them in csv format.

1. Select Options LSK (≡)
2. Select Import/Export
3. Select which one you would like to do

Browser Menu

The Browser Application allows you to navigate the World Wide Web.

To enter the browser, follow the steps below: Home Screen > Menu > Inboxes

Reverse the Tab

To search something online:

1. Select Input URL
2. Enter the website URL, you would like to search

To set up the network GPRS setting:

1. Select Options LSK
2. Select Settings
3. Select SIM 1/2 Network accounts
4. Select your SIM card from the preset network accounts

Using Bookmarks

To access pages faster, use bookmarks.

There are preset pages like Facebook where you can check your account

You can create your own bookmark page as well.

1. Select Options
2. Select Add
3. Select Bookmark
4. Select Bookmark
5. Input the information and save it

Typing with keyboard

The device uses T9 keyboard settings.

These are the keys for each letter

1. Press multiple times to select different punctuation marks
2. A-Z
3. 0-9
4. G-12
5. J-K-L
6. M-N-O
7. P-Q-R-S
8. T-U-V
9. W-X-Y-Z
0. Space
1. All this symbols in this menu
2. All this symbols to change Abc, abc, ABC, 123, or writing help.

Auto power on/off

To create text, see this sample:

To spell out the word "WORLD"

W - Press number 9 key one time  
O - Press number 6 key three times  
R - Press number 7 key three times  
L - Press number 1 key three times  
D - Press number 1 key one time

Auto power on/off

To input a number in text

1. Select the # key and select 1/3
2. Input the number

Phone Settings

To access the phone settings, go to: Home Screen > Menu > Settings > Phone Settings

In this menu you will be able to set time, set date, change time format, change date format, or change update time settings

Language Settings

This menu can allow you to change the language from English, French, Spanish, or Portuguese

Shortcut Settings

This menu allows you to change the home screen shortcut keys to different applications.

Auto power on/off

This menu can set your device to automatically power on/off on preset times.

Power Management

This menu shows the battery percentage of the device.

Restore Factory

This menu will erase all data on the device, password is 0000

SOS Settings

The SOS functionality on the device allows you to set up five (5) emergency numbers that will receive a custom text message and will automatically call the numbers in the order they are set.

Disclaimer: No numbers are preset to the device, user must set their own numbers. Device must have an active service plan for this function to work properly.

Turning SOS on/off

SOS functionality can be turned on/off at any time. Select SOS turn on/off, checkmark is on by default.

Adding Telephone Number

To add a telephone number:

1. Select Telephone number
2. Select the priority of the number
3. Input the number

Edit Message Content

To edit the message content

1. Select Message content
2. Edit the existing message
3. Select OK

Activating SOS

To activate the SOS, long press the SOS button

WARNING

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device must not cause any interference, including interference that may cause undesired operation of the device.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Note: This equipment has been tested and found to comply with the limits for Class B digital devices pursuant to part 15 of the FCC rules, which provides for certain protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur if a particular installation requires the use of a particular shielded cable.

If this equipment does cause harmful interference to radio or television reception, you can try to correct the interference by turning the equipment off and on, the user is encouraged to try to correct the interference by reorienting the equipment.

Caution: The radiation from the equipment and cables may interfere with the operation of other electronic equipment. To avoid this, do not use the equipment in a confined space (e.g., bedroom).

Use of the equipment with a power source other than a standard AC power source may cause interference to other electronic equipment. To avoid this, do not use the equipment with a power source other than a standard AC power source.

Use of the equipment with a power source other than a standard AC power source may cause interference to other electronic equipment. To avoid this, do not use the equipment with a power source other than a standard AC power source.

Use of the equipment with a power source other than a standard AC power source may cause interference to other electronic equipment. To avoid this, do not use the equipment with a power source other than a standard AC power source.

Use of the equipment with a power source other than a standard AC power source may cause interference to other electronic equipment. To avoid this, do not use the equipment with a power source other than a standard AC power source.

Use of the equipment with a power source other than a standard AC power source may cause interference to other electronic equipment. To avoid this, do not use the equipment with a power source other than a standard AC power source.