 



NEO MB
DEVICE LAYOUT


- 1 **Left Soft Key**
Used to exit the Menu Option and Home Screen
- 2 **Center/SOS Button**
Press to call in any emergency or contact in Home Screen for SOS
- 3 **Call Button**
Press to call loaded number or to accept incoming call
- 4 **Volume Buttons**
Used to adjust volume or answer incoming call
- 5 **Lock/Unlock Button**
Long press to Home Screen to Lock device
- 6 **Right Soft Key**
Press to scroll through Contacts, Open in Home Screen
- 7 **Power/Cancel Button**
Long press to Power off or device Press to cancel the operation
- 8 **Navigation Button**
Changes the view by pressing up/down/OK/Left
- 9 **Change Audio Profile**
Long press to Home Screen to change the Audio Profile
- 10 **Touch Light Button**
Long press to Home Screen to turn on the Light Touch

Status Icons

Changing Audio Profiles

Changing the Audio Profiles allows you to change the device volume levels. This menu will be found in:
Home Screen > Menu (≡) > Settings > Profiles

- There are present Audio Profiles:
1. General - These are the default audio levels (recommended)
 2. Silent - These settings mute all audio notification
 3. Meeting - These settings mute all audio to vibration
 4. Indoor - These settings make all audio levels low
 5. Outdoor - These settings make all audio levels max

You can edit any of these settings by selecting Option (≡) In these settings you will be able to change the ringtone, adjust volume levels, select ring type, and additional audio settings.

Turn the device ON or OFF

Long Press the Power Button (⏻) > Enter Unlock PIN, if necessary.
To unlock the device Press the Left Soft Key (←), then the Star Key (★)

Make or answer a Call

To make a call, go to the Home Screen and enter the number. Once the number is completed, Press the Call Button (☎)

Calling Options

To enter Speaker Mode during a phone call, press the Confirmation Button (SOS)

To adjust the volume levels, press up and down on the Navigation Button

To end the call press the Cancel Button (⏻)

For more options, select Menu by pressing Left Soft Key (←) In this menu you can hold a new call, Place call on hold, Start recording call, Mute Call, adjust volume, use contacts, call logs, or open messages.

Send Text/Multimedia Messages

Enter the Message Application by entering the Menu (Left Soft Key) and scroll up with the navigation button to the Application Messages.

- (1) For Text Message press SMS or
- (2) For Multimedia Message press MMS.

To enter the recipient, enter the phone number. Scroll down to enter the message portion of the text. Do not complete, select Options and Select Send

To enter the recipient, enter the phone number. Enter the desired information (Subject, Text, Image, Video or Audio). Once complete, select Options and Select Send

Using Speed Dial

To view the received messages, press Inbox.

To view the sending messages, press Outbox.

To view the draft messages, press Draft.

To view the sent messages, press Settings.

Display Settings

In Display setting you are able to change your wallpaper, adjust brightness settings, change screen timeout, change the keypad lock time, and change your screen saver settings. You will find this menu in:
HomeScreen > Menu (≡) > Settings > Display Settings

Contact Menu

In the Contact Menu you can save, edit, import, and export your contacts.

You can access your contacts by Home Screen > Menu > Inboxes

Adding a New Contact

1. To add a new contact select
1. Select Options LSK (≡)
2. Select New
3. Insert a Profile Picture, Name, Mobile number, Home number, and to a group or set the ringtone.
4. Select Save LSK (≡)

Setting up Speed Dial

To create text, see this sample:

1. Select Options LSK
2. Select Settings
3. Select SIM 1/2 Network accounts
4. Select your SIM card from the preset network accounts

Using Bookmarks

To access pages faster, use bookmarks. There are present pages faster, use bookmarks where you can check your account

Importing/Exporting Contacts

To import/export your contacts you must have them in csv format.

1. Select Options LSK (≡)
2. Select Import/Export
3. Select which one you would like to do

Browser Menu

The Browser Application allows you to navigate the World Wide Web.

To enter the browser, follow the steps below:
Home Screen > Menu > Inboxes

Reverse the Tab

1. Press multiple times to select different punctuation marks
2. A-Z
3. 0-9
4. G-F
5. J-K-L
6. W-X-Y-Z
7. P-Q-R-S
8. T-U-V
9. W-X-Y-Z
0. Space
1. All this symbols in this menu
2. All this symbols in this menu
3. All this symbols in this menu
4. All this symbols in this menu

Set up Network Account

1. To set up the network GPRS setting
1. Select Options LSK
2. Select Settings
3. Select SIM 1/2 Network accounts
4. Select your SIM card from the preset network accounts

Using Bookmarks

To access pages faster, use bookmarks. There are present pages faster, use bookmarks where you can check your account

Importing/Exporting Contacts

To import/export your contacts you must have them in csv format.

1. Select Options LSK (≡)
2. Select Import/Export
3. Select which one you would like to do

Typing with keyboard

The device uses T9 keyboard settings.

These are the keys for each letter

1. Press multiple times to select different punctuation marks
2. A-Z
3. 0-9
4. G-F
5. J-K-L
6. W-X-Y-Z
7. P-Q-R-S
8. T-U-V
9. W-X-Y-Z
0. Space
1. All this symbols in this menu
2. All this symbols in this menu
3. All this symbols in this menu
4. All this symbols in this menu

Set up Network Account

1. To set up the network GPRS setting
1. Select Options LSK
2. Select Settings
3. Select SIM 1/2 Network accounts
4. Select your SIM card from the preset network accounts

Using Bookmarks

To access pages faster, use bookmarks. There are present pages faster, use bookmarks where you can check your account

Importing/Exporting Contacts

To import/export your contacts you must have them in csv format.

1. Select Options LSK (≡)
2. Select Import/Export
3. Select which one you would like to do

Phone Settings

To access the phone settings, go to:
Home Screen > Menu > Settings > Phone Settings

Date & Time

In this menu you will be able to set time, set date, change time format, change date format, or change update time settings

Language Settings

This menu can allow you to change the language from English, French, Spanish, or Portuguese

Shortcut Settings

This menu allows you to change the home screen shortcut keys to different applications.

Auto power on/off

This menu can set your device to automatically power on/off on preset times.

Power Management

This menu shows the battery percentage of the device.

Restore Factory

This menu will erase all data on the device, password is 0000

SOS Settings

The SOS functionality on the device allows you to set up five (5) emergency numbers that will receive a custom text message and will automatically call the numbers in the order they are set.

Disclaimer: No numbers are preset to the device, user must set their own numbers. Device must have an active service roaming for this function to work properly.

Turning SOS on/off

SOS functionality can be turned on/off at any time. Select SOS turn on/off, checkmark is on by default.

Adding Telephone Number

1. To add a telephone number
2. Select Telephone number
3. Input the number

Edit Message Content

To edit the message content

1. Select Message content
2. Edit the existing message
3. Select OK

Activating SOS

To activate the SOS, long press the SOS button

WARNING

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:
(1) This device must not cause any interference, including interference that may cause undesired operation of the device.

Note: This equipment has been tested and found to comply with the limits for Class B digital devices, pursuant to part 15 of the FCC rules, which poses a small risk of harmful interference in a residential installation. This equipment complies with FCC radiation exposure limits set forth for uncontrolled environments. However, there is no guarantee that interference will not occur in a particular installation.

Use of this equipment does cause harmful interference to radio and television reception if it is not used in accordance with the instructions. If you do not follow the instructions, you may experience more interference than is allowed by the FCC. If you are having trouble with this equipment, you may wish to contact the manufacturer for assistance.

Caution: The radiation from the equipment and cables may interfere with other equipment, especially if they are not shielded or grounded. Connect the shield or an approved audio/video shield to help reduce the interference.

Interference

All devices are contained using standard operating practices according to the FCC with the device transmitting at its highest certified power level in ground-to-ground mode, although the FCC is determined at the highest certified power level. The actual dB level of the device while operating can be well below the maximum value. In general, the closer you are to a mobile, base station antenna, the lower the power output.

Be aware and shielded by the FCC. If you do, then the maximum exposure rate established by the FCC. Side by side, shown are performance in practice and maximum as required by the FCC.

For body worn operation, this device has been tested and meets the FCC exposure guidelines when used with an accessory designed for this product or when used with an accessory that complies with the FCC. Do not use any other accessories that are not listed on the product or that possess the highest a maximum of 2 mW/cm² in the body.

Do not connect with the above mentioned may result in violation of FCC exposure guidelines.