

 
USER MANUAL

Please read this manual thoroughly before using and
keep it for future reference.

CONTENTS

FUNCTION OVERVIEW	01
GETTING STARTED	02
Power On/Off	02
Battery	02
Sleep Mode	02
Screenshot	02
HOME SCREEN	03
Icons on the Bottom Menu	03
Home Settings, Widgets and Wallpapers	03
SETTING BASICS	04
Quick Settings	04
More Settings	05
NETWORK CONNECTION	09
Wifi Connection	09
Bluetooth Pairing	10
APP MANAGEMENT	11
App Download and Installation	11
App Management	11
INTERNET NAVIGATION	11
MULTIMEDIA	12
Connecting to a Computer	12
Connecting to an External Device	13
TROUBLESHOOTING	15

FUNCTION OVERVIEW

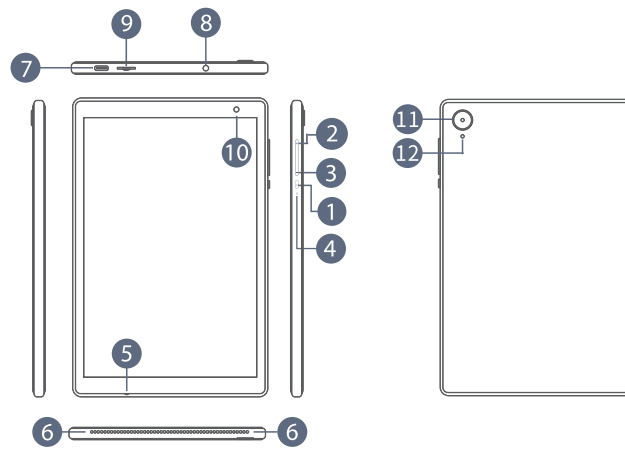

- | | | |
|--------------------|-------------------|---------------------|
| 1. Power On/Off | 2. Volume+ | 3. Volume- |
| 4. Forced Shutdown | 5. Microphone | 6. Speakers |
| 7. USB-C Port | 8. Headphone Jack | 9. Memory Card Tray |
| 10. Front Camera | 11. Rear Camera | 12. Flash |

*Google, Android, Google Play and other marks are trademarks of Google LLC.

GETTING STARTED

Power On/Off

- * Press and hold the power button for 3-5s to turn on your tablet. Select your language and set up your tablet following the start guide.
- * Press and hold the power button for 2s, then release it. It will show **Power off** and **Restart** on the screen. Tap **Power off** to turn off the tablet.
- * Press and hold the power button for 10s to do a forced reboot when it's frozen.

Battery

- * A rechargeable Li-ion battery is installed in the tablet.
- * DO NOT attempt to replace the tablet battery by yourself because you may damage the battery, which might cause overheating, fire or injury.
- * DO NOT dispose of tablet in a fire. DO NOT expose the tablet battery to any heat source, direct sunlight or high temperature.
- * Only use the **ORIGINAL** power adapter provided by us to charge the tablet battery.
- * We suggest you drain the battery completely once a month if only use your tablet occasionally.
- * The Li-ion battery in your tablet should be serviced or recycled by an authorized service provider, and must be recycled or disposed of separately from household waste.
- * Dispose of battery according to your local environmental laws and regulations.

Sleep Mode

Simply press the power button once to switch the tablet to the **Sleep Mode** when the tablet is **ON**; press again to wake it up.

Tip:

 
Go to **Settings> Display> Screen timeout** to set the time of entering the **Sleep Mode**.

Screenshot


Press and hold the Volume- button and the **Power On/Off** button together to capture a picture.

HOME SCREEN

Icons on the Bottom Menu

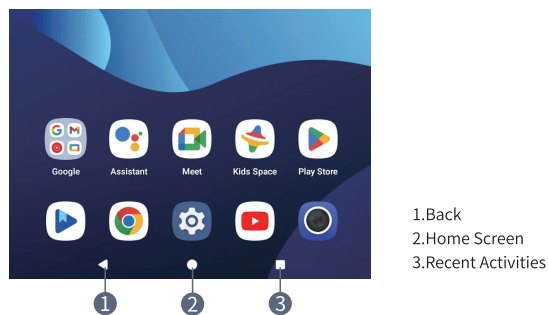

Home Settings, Widgets and Wallpapers

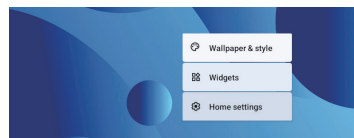 

Tap and hold the empty section of a Home screen, **Home settings**, **Widgets** and **Wallpapers & style** will be displayed.

1. Tap **Home Settings** to start customizing your Home Screen.

Notification dots:

Show/hide the small circular dots that sit on the upper right corner of your App icons.

Add icon to Home Screen:

Allow the new Apps installed on Play Store to be displayed on the Home Screen.

Disable launcher landscape:

 
Allow the launcher to show horizontally or vertically.

2. Tap **Widgets**, touch and hold any application (e.g. Clock), then slide and add it to a Homed screen. Remove it by sliding it to **Remove**.
3. Tap **Wallpaper & style** to change the current wallpaper of the tablet from the default wallpapers, live Wallpapers or your photos.

SETTING BASICS


Quick Settings

Swipe down from the top of the screen to access Quick Settings.

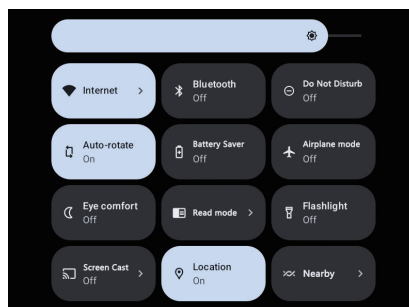


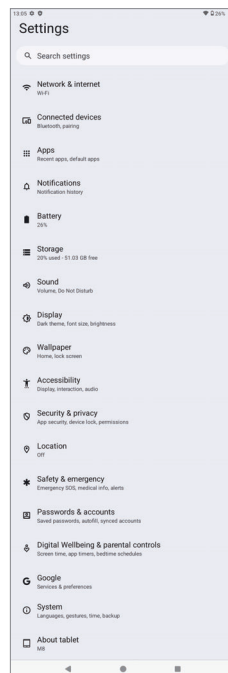 
- 📶 : **WiFi**. Tap to connect/disconnect to a wireless network
- 📶 : **Bluetooth**. Enable/disable the Bluetooth of the tablet
- 🔇 : **Do Not Disturb**. Block sound after enabling this function
- 🔄 : **Auto-rotate**. Turn on/off the **Auto-rotate** of the screen
- 🔋 : **Battery Saver**. Tap to choose the power setting you prefer to save the battery time
- ✈️ : **Airplane Mode**. Turn on/off all the network connectivity
- 🌙 : **Eye comfort**. Enable/disable the eye protection mode
- 📖 : **Read mode**. The screen will be black and white after enabling this option
- 🔦 : **Flashlight**. Turn on/off the torch.
- 📺 : **Screen Cast**. Mirror the display of the tablet to compatible devices, e.g. TV box or Fire TV Stick.

 : **Location.** Enable/disable the location services.

Tap the  icon to change the options in the Quick Settings. Long press each icon to enter the interface of its detailed settings.

More Settings

Swipe down from the top of the screen, then tap the  icon to enter the detailed setting interface. Or, tap the Settings App on the Home screen to enter.



Network & internet

- * Connect to any working Wifi
- * Enable/disable the **Airplane Mode**
- * Add VPN Connections
- * Select a private DNS mode

Connected devices

- * Pair with Bluetooth devices and check the paired devices
- * Turn on/off Bluetooth
- * Check the connection status of the cast devices
- * Add and check printers
- * Check the received files from other devices via bluetooth connection
- * Enable **Nearby Share** to share files with nearby devices that support this function and more

Apps

- * Check the Apps recently opened
- * Check all the Apps on the tablet
- * Clear the cache of the Apps
- * Set default apps
- * Unused Apps
- and more

Notifications

- * Turn on/off the notification for each app
- * Show or hide the notification history
- * Allow or disallow the apps to show bubbles
- * Set privacy preferences for notifications
- * Enable or disable **Notification dot on an app icon** and more

Battery

- * Check the time for **Screen usage since full charge**
- * Enable/disable **Battery percentage** and **Battery Manager**
- * Display or hide the remaining power as a percentage

Storage

- * View and manage your storage space

Sound

- * Set sound level for **Media**, **Alarm** and **Notification**
- * Enable/disable **Do Not Disturb** to mute sound
- * Show/hide the media player when the media session has ended
- * Set default notification sound and alarm sound
- * Enable/disable **Screen locking sound**, **Charging sounds**, and **Touch sounds** and more

Display

- * Adjust the screen brightness
- * Enable/disable the **Dark theme**
- * Turn on/off **Night Light**
- * Adjust the time of entering the sleep mode
- * Turn on/off the auto-rotation of the screen
- * Adjust the font size and display size
- * Set a screen saver
- * Set what to show when the tablet is locked and more

Wallpapers and Styles

- * Set wallpaper for home screen and lock screen
- * Show notifications on the lock screen or not
- * Change icons with themes

Accessibility

* For vision and hearing impaired users, manage settings for **Screen reader**, **Display**, **Interaction controls**, **Captions**, **Audio** and **General**

Security & privacy

- * Check the security status
- * Set screen lock pattern, e.g. Password, PIN, Swipe etc
- * Allow the admin apps to **Find My Device** and lock or erase a lost device
- * Check and set app permissions
- * Enable or disable the Camera access and Microphone access
- * Set to show/hide the password when input a password
- * Set what to show when the tablet is locked and more

Location

- * Turn on/off the location services for specific Apps
- * Set apps that have access to location
- * Check and set Location services and more

Passwords & accounts

- * Add and remove the google accounts, manage google passwords.


Digital Wellbeing & parental controls

- * Check your app usage based on **Screen time**, **Notifications received**, or **Times opened** from **Dashboard**
- * Manage the related notification settings to reduce interruptions
- * Set up Parental controls to help your kids balance their screen time and more

Google

- * Set the preferences for Google related services

System

- * Set Language
Tap **Languages & input>Languages>+Add a language** to add your language. After adding, hold and slide the  to the top to change the language
- * Set gestures of using the tablet
- * Set the date and time
- * Turn on/off the option of Backup
- * Manage multiple users and profiles
- * Restore factory setting
Tap Reset options>Erase all data (factory reset) to restore the factory setting
- * Reset WiFi, Bluetooth, and app preferences
- * Memory expansion
Use some of the internal storage space to expand the running memory to improve the system experience

About tablet

 
- * Check the detailed information about the tablet
- * Check and update the tablet's system

NETWORK CONNECTION

Wifi Connection

Go to network settings from the Settings App or by long pressing the Wifi icon in **Quick Settings**.

1. Tap **Network & internet** and turn on the **WiFi**. All the WiFi connections available will be listed.
2. Select your WiFi and input the correct password.

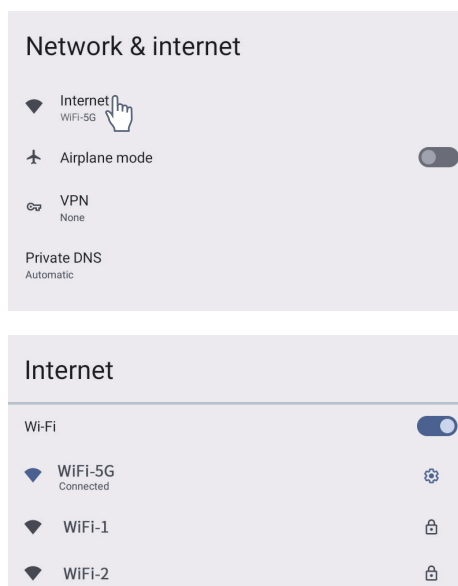

Bluetooth Pairing

Launch the App **Settings** and go to **Connected devices**, or long press the Bluetooth icon in **Quick Settings**.

1. Tap **+Pair new device** to enter the scanning interface. Devices available will be displayed after a few seconds.
2. Tap the desired device to get a pairing code and click **PAIR** on both devices. The automatic connection is applied to some devices.

APP MANAGEMENT

App Download and Installation

1. Tap and open **Play Store** on the Home screen.
2. Log into your google account, search and download the App you need.

App Management

Move the App

Tap and hold the App, then slide it to a desired screen.

Remove the App from the Home screen

Touch and hold the App, then slide to  **Remove** to remove it from your Home screen.

Uninstall the App

Touch and hold the App, then slide to the  **Uninstall** to uninstall the App.

Clear the Cache of the App

1. Go to **Settings > Apps**.
2. Select an **App> Storage & cache > CLEAR CACHE** to clear the cache.

INTERNET NAVIGATION

Please make sure the tablet is connected to a working WiFi network before navigating the Internet.

You may use the pre-installed Chrome browser or use another browser downloaded from **Play Store**.

MULTIMEDIA

Connecting to a Computer

1. Connect your tablet to the computer with a USB cable.
2. **File Transfer** is the default setting. Go to your computer and find your tablet to transfer files between your tablet and computer.

 
Tips:

 
Go to **Quick Settings**, tap **USB file transfer turned on** > **Tap for more options** > **USB Preferences** to select the option preferred.

* Select **MIDI** to play MIDI instruments on the tablet.

* Select **PTP** to transfer photos between the devices.

* Select **No data transfer** to charge your tablet.

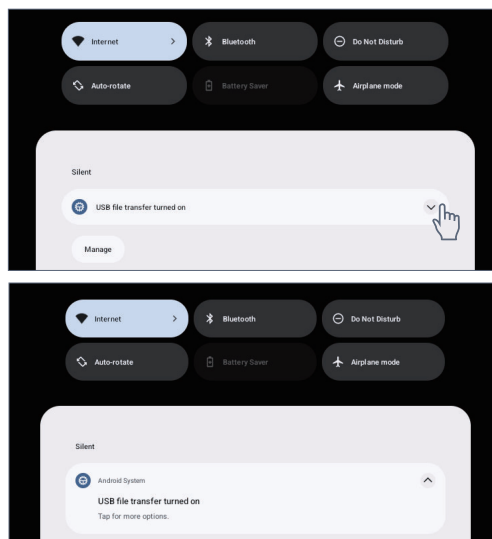


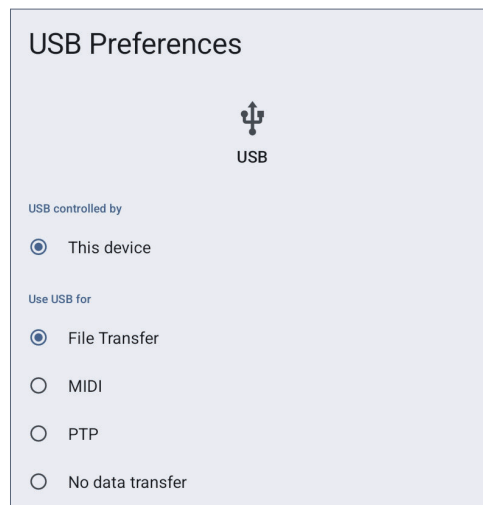


Connecting to an External Device

1. Install a memory card into the memory card slot when the tablet is off.



  2. Turn on the tablet, then go to Quick Settings and tap SET UP.
3. Set the memory card as a portable storage by selecting Portable storage. Enter memory card storage to move files between the card and tablet.

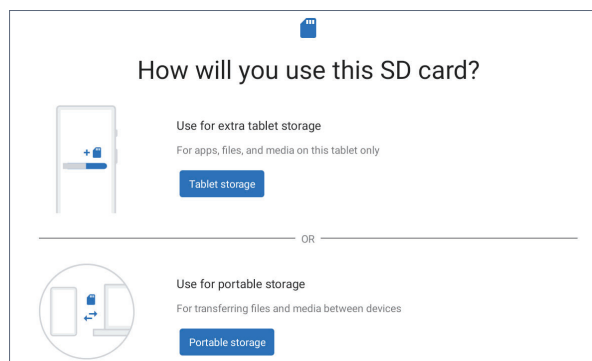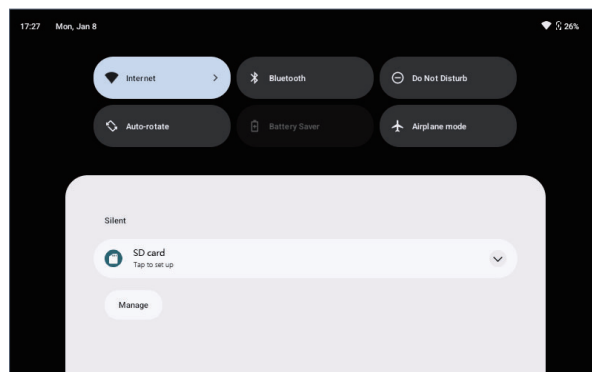

TROUBLE SHOOTING

Q1. The tablet doesn't power on.

- *Reboot your tablet after charging for more than 30 minutes.
- *Press the power button to check if the tablet is in the Sleep Mode.
- *Press and hold the power button for 10s to do a forced reboot.

Q2. The tablet doesn't charge.

- * Make sure the USB cable is properly plugged into the charging port.
- *Try another compatible USB cable and adapter.

Q3. Error message occurs during the operation.

- * Uninstall the App with the error message, then download and install again.
- * Press and hold the power button for 10s to do a forced reboot.

Q4. The tablet cannot be detected by the computer.

- *Make sure the tablet is powered on.
- *Try another USB cable.Try another USB port on the computer.
- *Instead of **No data transfer**, choose **File Transfer** or **PTP** when connecting the tablet to the computer.

Q5. The tablet cannot connect to the WiFi.

- *Make sure the **WiFi** in your tablet is **ON**.
- *Make sure you input the correct password when connecting the WiFi.
- *Restart the router.
- *Make sure there is no filter setting or device connection limitation in the setting of the router.
- *Forget the current Wifi, reset the router and connect the Wifi again.

Q6. The storage space of the tablet is not enough.

- *Delete the Apps you don't use.
- *Clear the cache of the Apps regularly.
- *Install a memory card to expand the storage.

Q7. The tablet comes with scratches on the screen.

*Check if the scratches are on the film. If yes, please remove the film.

Q8. The screen is unresponsive.

*Check if the screen is dusty or greasy. If yes, please gently wipe the screen with a cloth to clean it.

Q9. The font size is too small to read.

*Please go to Settings>Display>Display size and text to adjust the text size.

Q10. How to use your voice to search a fact?

*Tap the microphone icon on Google Search bar, tell the tablet what you want to know and it will show you the search results

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Specific Absorption Rate (SAR) information:

This device meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. FCC RF Exposure Information and Statement the SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: This device has also been tested against this SAR limit.

This device was tested for typical body-worn operations with the back of the This device kept 0mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain an 0mm separation distance between the user's body and the back of This device. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

ISED Requirements

This device complies with , Science, and Economic Development Canada-free RSS standard(s). Operation is subject to the following two Terms and conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This device complies with the NRC of Innovation, Science and Development economic Canada applicable to licence-free radios. The exploitation of is authorized under the following two conditions:

- (1) the device must not produce interference, and
- (2) the user of the device must accept any radio interference suffered, even if jamming is likely to compromise its operation.

The device has been tested and complied with IC limits.

The device has been tested and conforms to IC SAR limits.

Operation of this device in the band 5150-5250 MHz is restricted to indoor use only.

The operation of this device in the 5150-5250 MHz band is limited to one use indoor only.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This transmitter must not be placed or operate in conjunction with another antenna or other transceiver

Device has been tested and complied with IC SAR limits. The device has been tested and is conforms to IC SAR limits.

Notes:



1. High Sound Pressure
2. Hearing Damage Risk
3. Don't listen to high volume levels for long periods.

