 
 
 


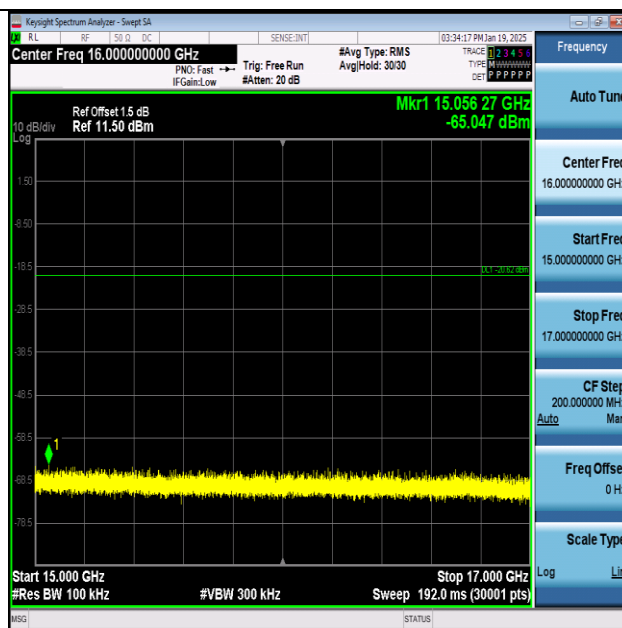


Thread-Ant1-2405-15000~17000-PASS

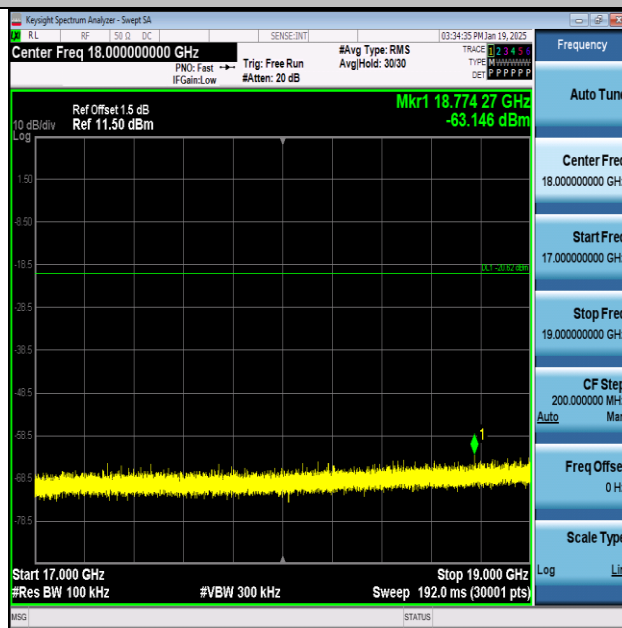


Thread-Ant1-2405-17000~19000-PASS

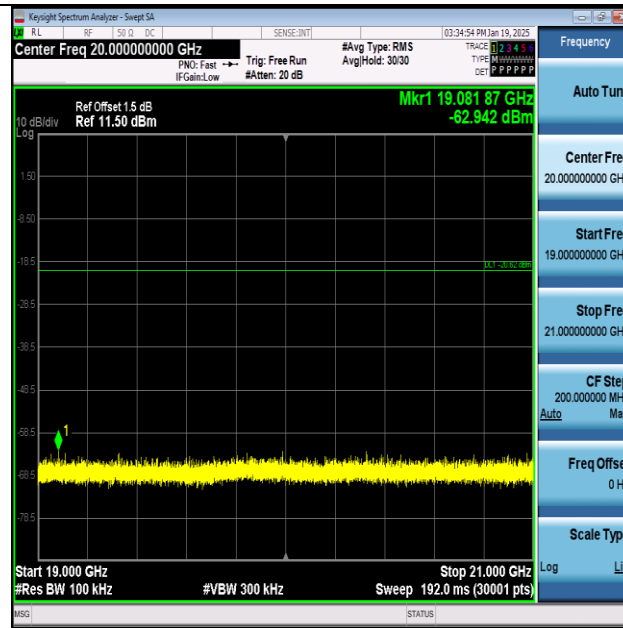

 
Thread-Ant1-2405-19000~21000-PASS

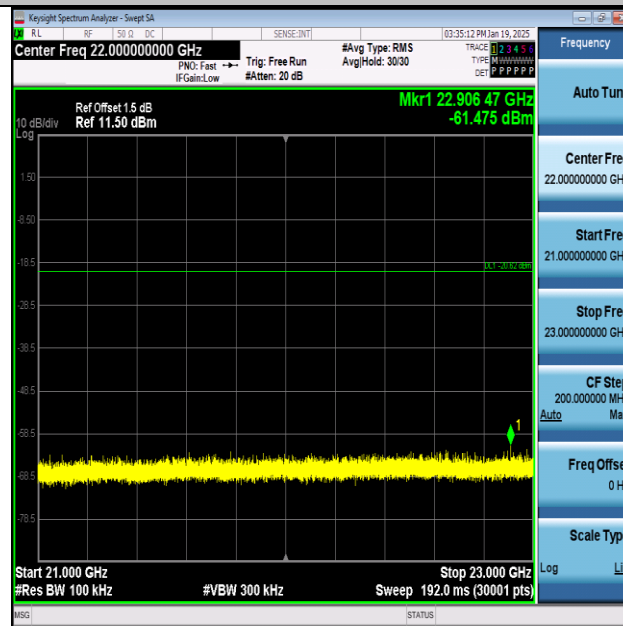


Thread-Ant1-2405-21000~23000-PASS

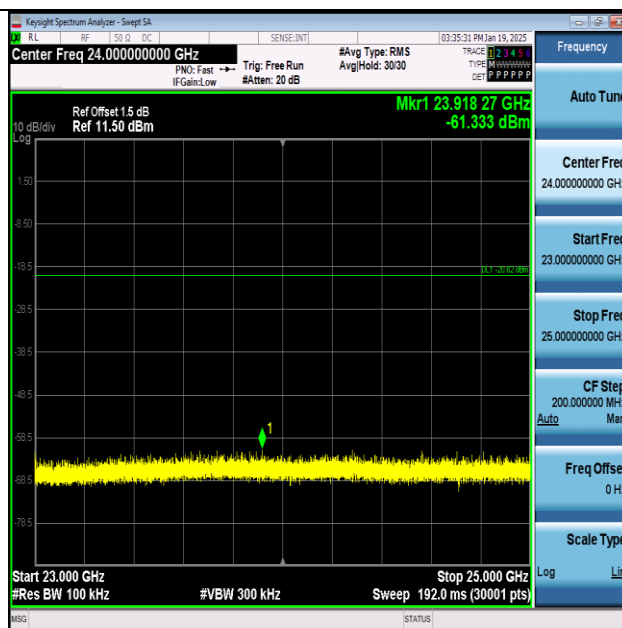 


Thread-Ant1-2405-23000~25000-PASS

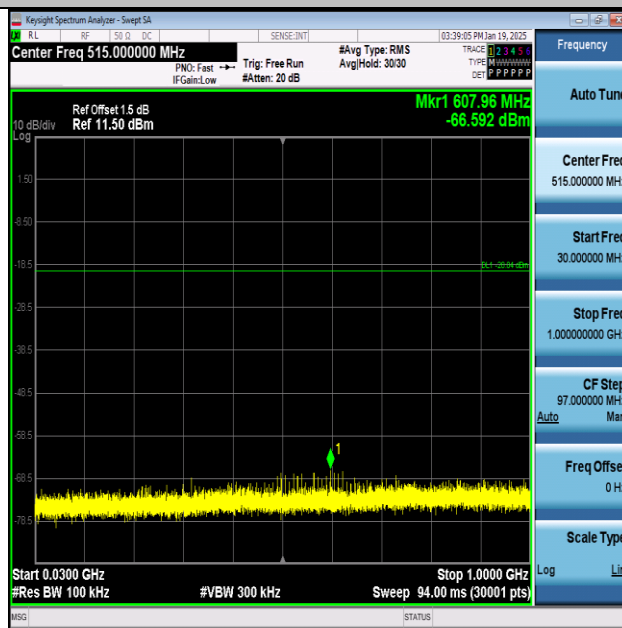 


Thread-Ant1-2440-30~1000-PASS

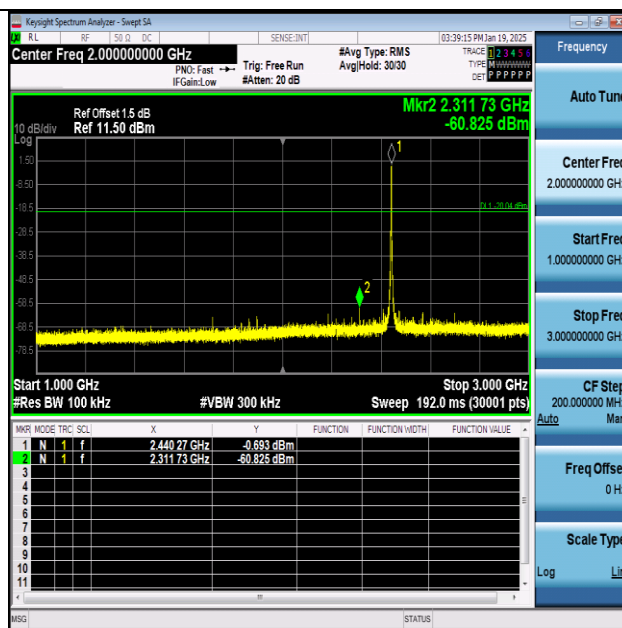 


Thread-Ant1-2440-1000-3000-PASS

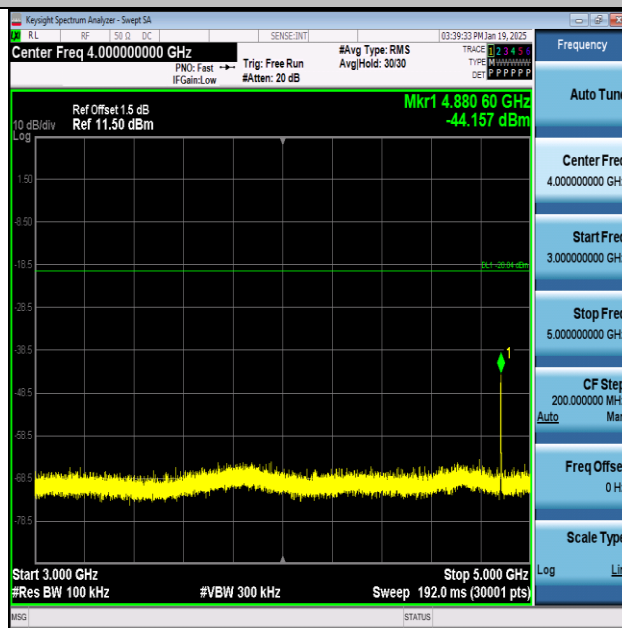 


Thread-Ant1-2440-3000-5000-PASS

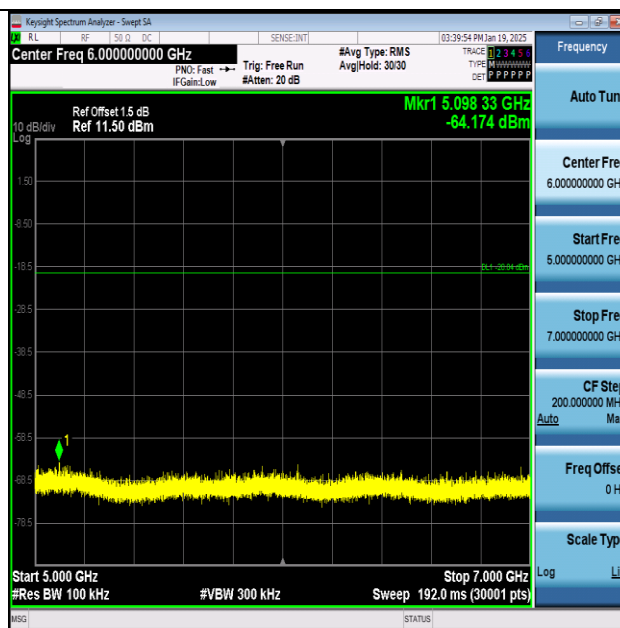 


Thread-Ant1-2440-5000~7000-PASS

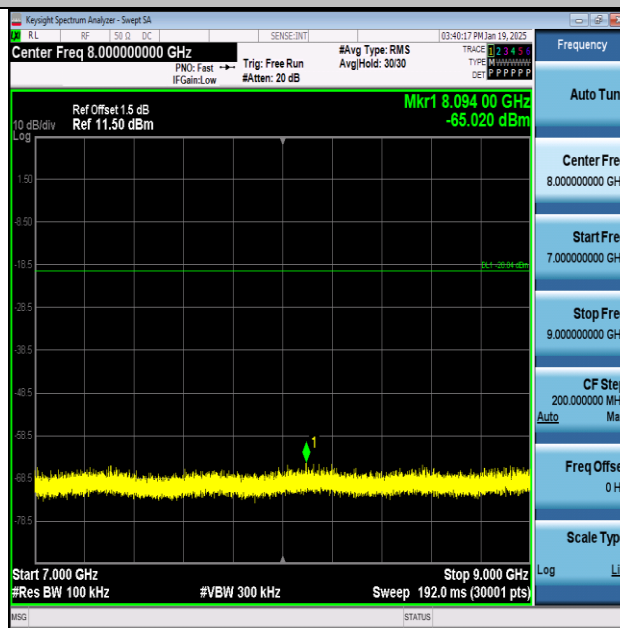 


Thread-Ant1-2440-7000~9000-PASS

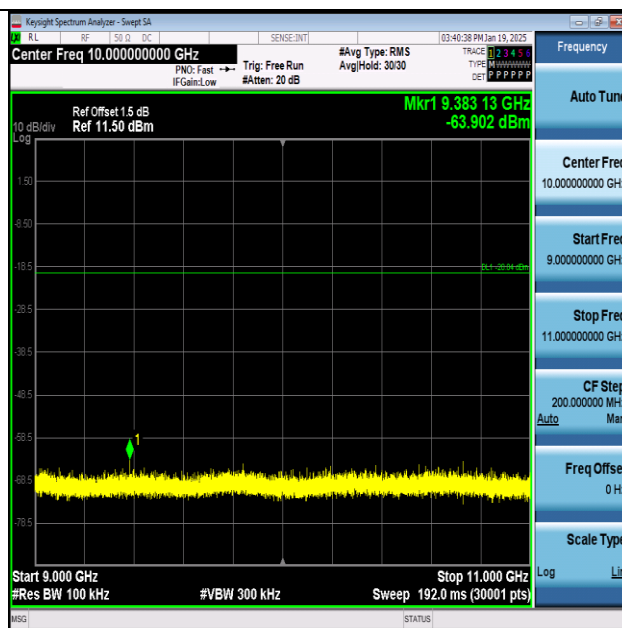 


Thread-Ant1-2440-9000~11000-PASS

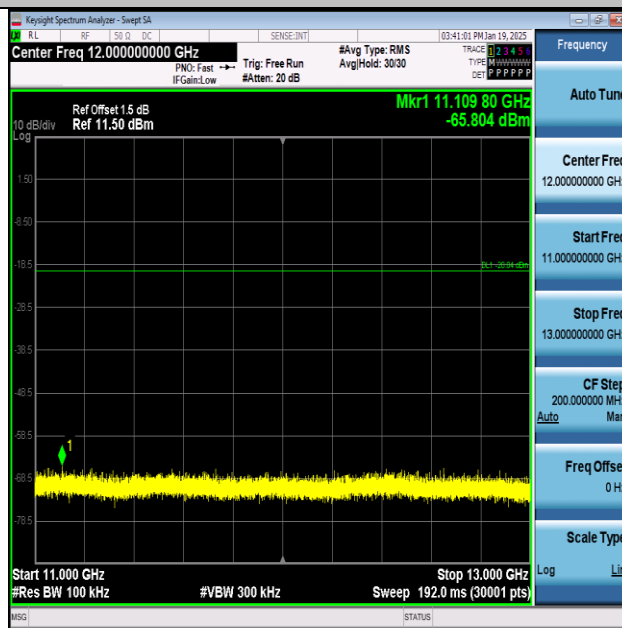 


Thread-Ant1-2440-11000~13000-PASS

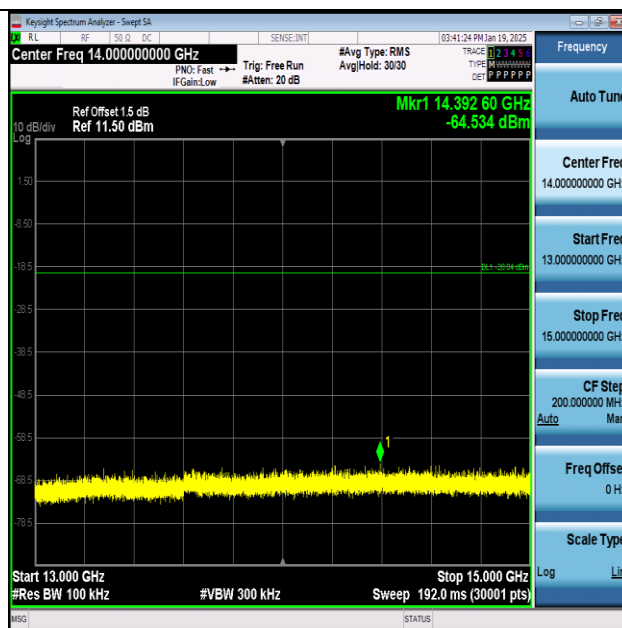 


Thread-Ant1-2440-13000~15000-PASS

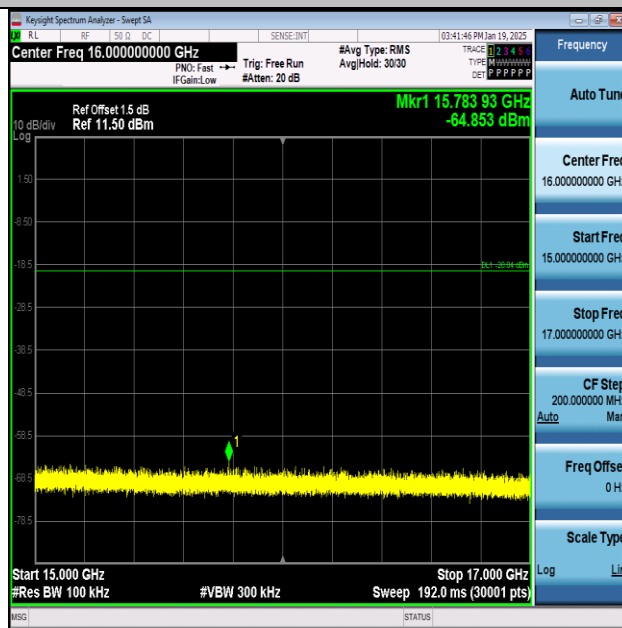 


Thread-Ant1-2440-15000~17000-PASS

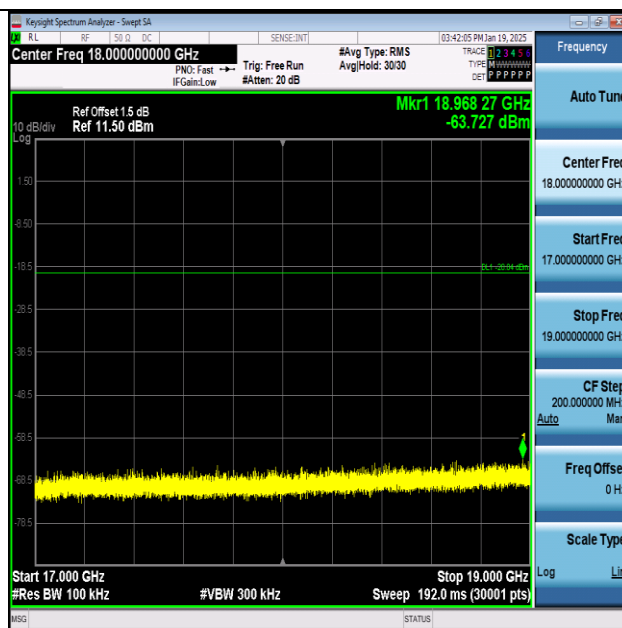 


Thread-Ant1-2440-17000~19000-PASS

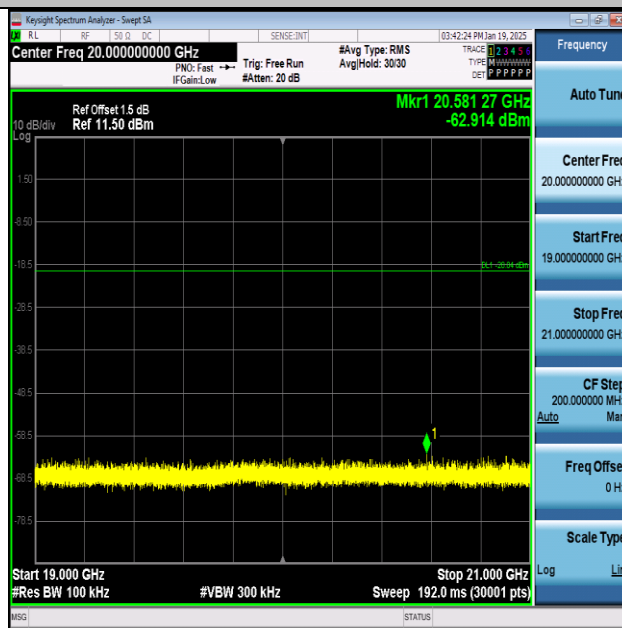 


Thread-Ant1-2440-19000~21000-PASS

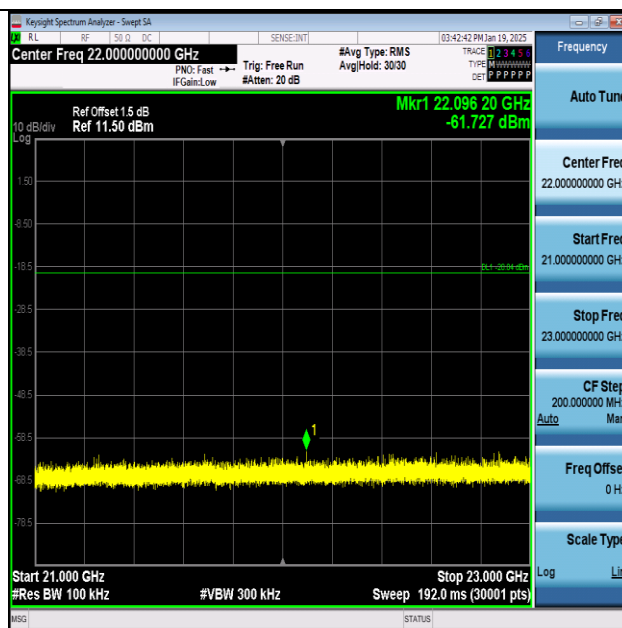 


Thread-Ant1-2440-21000~23000-PASS

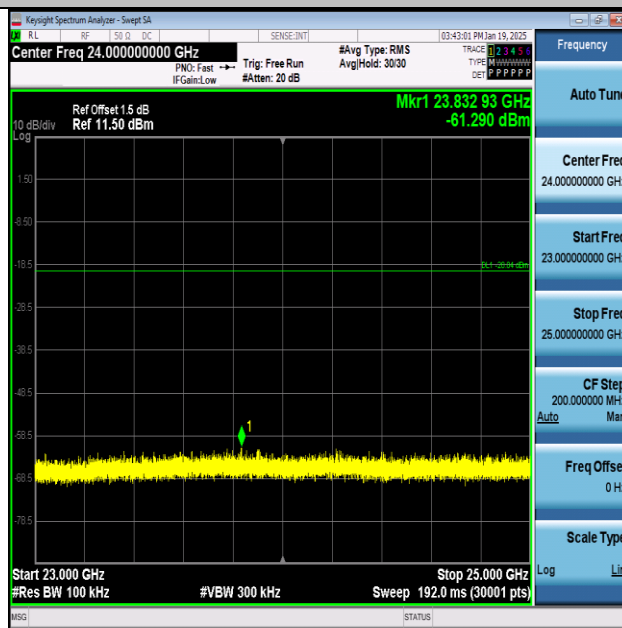 


Thread-Ant1-2440-23000~25000-PASS

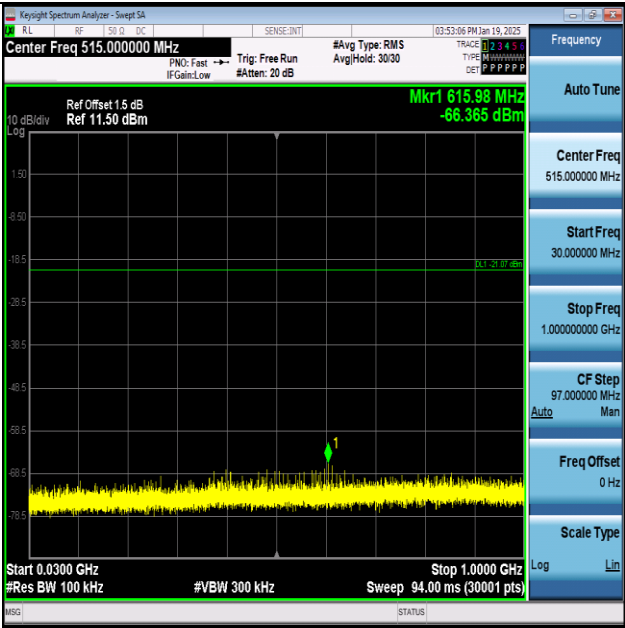 


Thread-Ant1-2480-30~1000-PASS

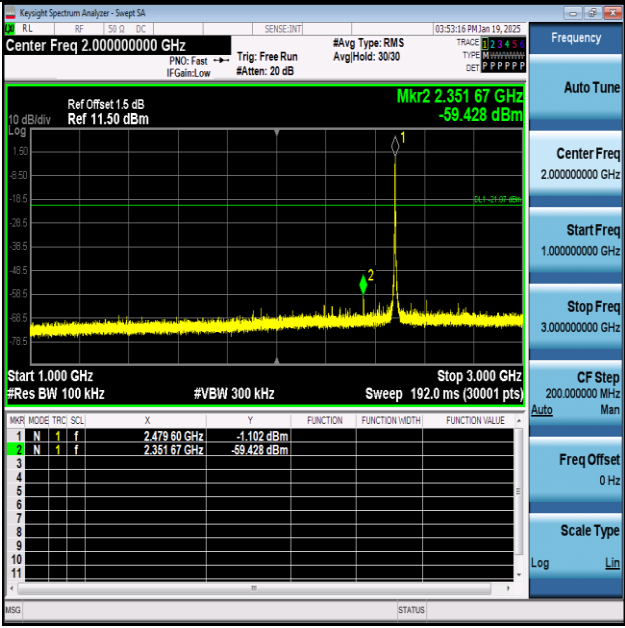 


Thread-Ant1-2480-1000~3000-PASS

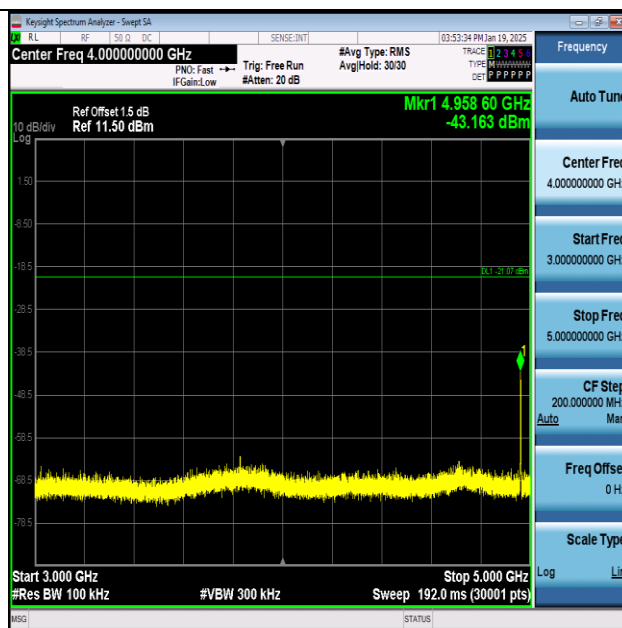 


Thread-Ant1-2480-3000-5000-PASS

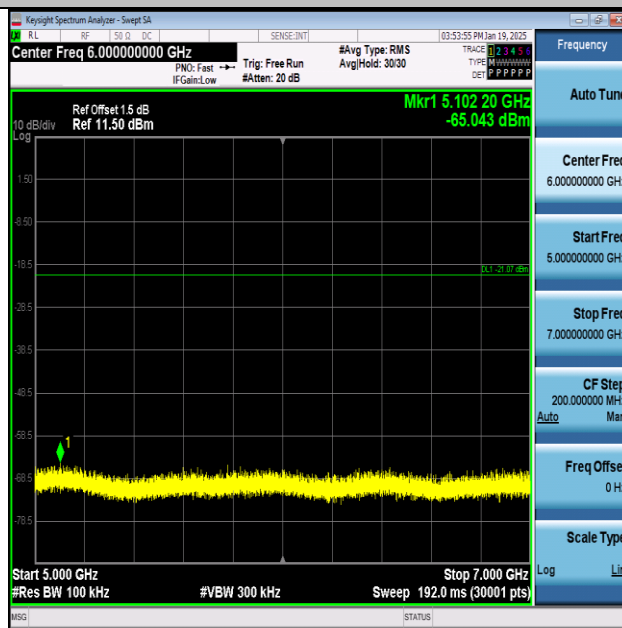 


Thread-Ant1-2480-5000-7000-PASS

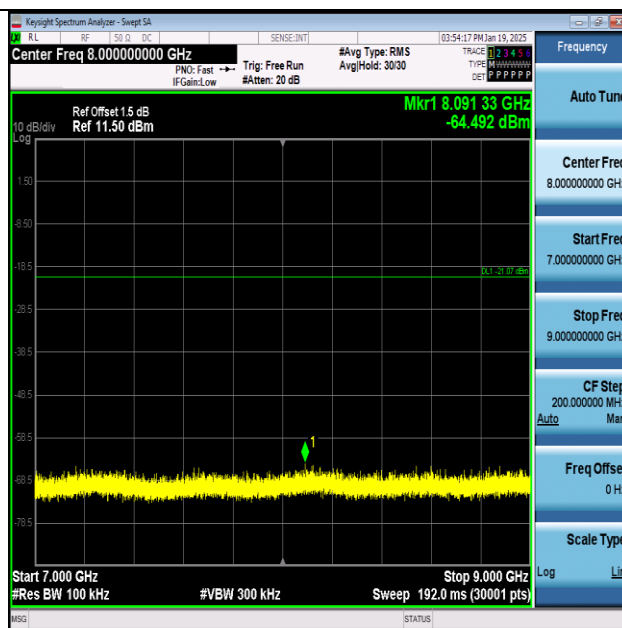 


Thread-Ant1-2480-7000-9000-PASS

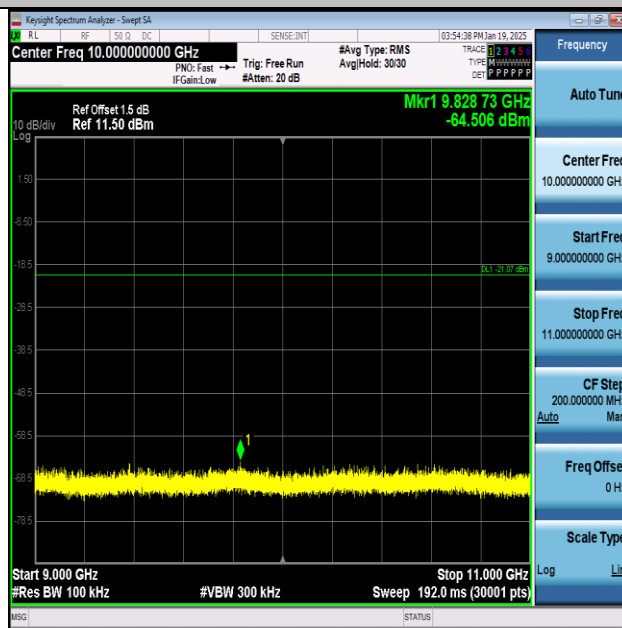 


Thread-Ant1-2480-9000-11000-PASS

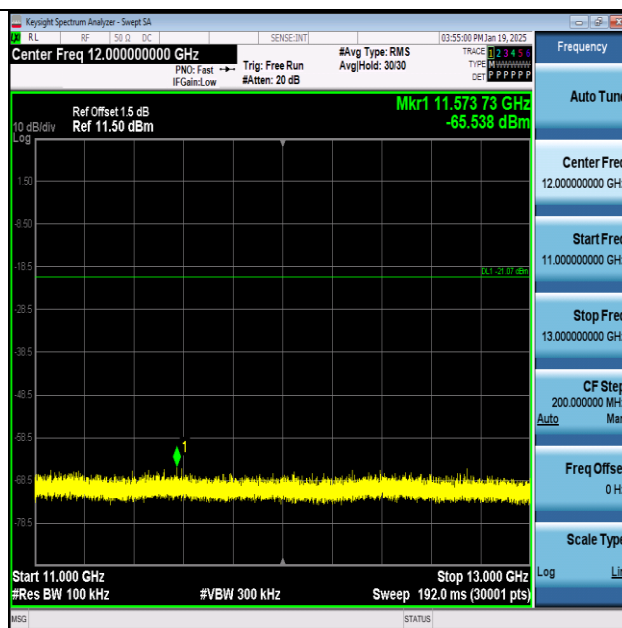 


Thread-Ant1-2480-11000~13000-PASS

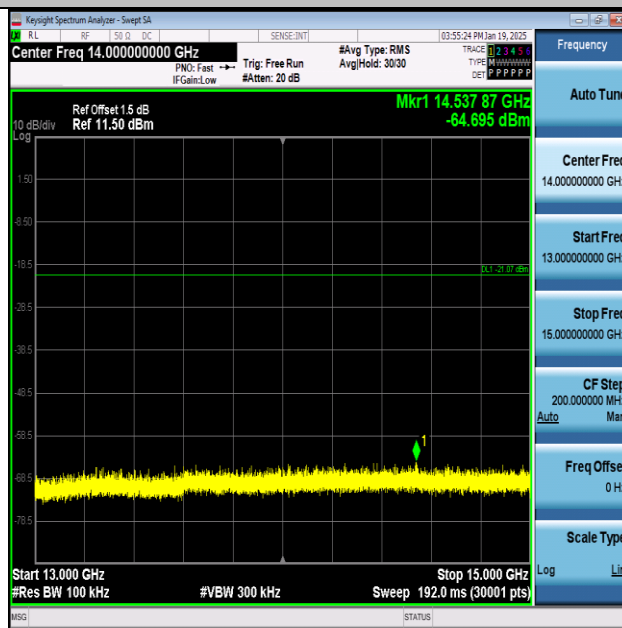 


Thread-Ant1-2480-13000~15000-PASS

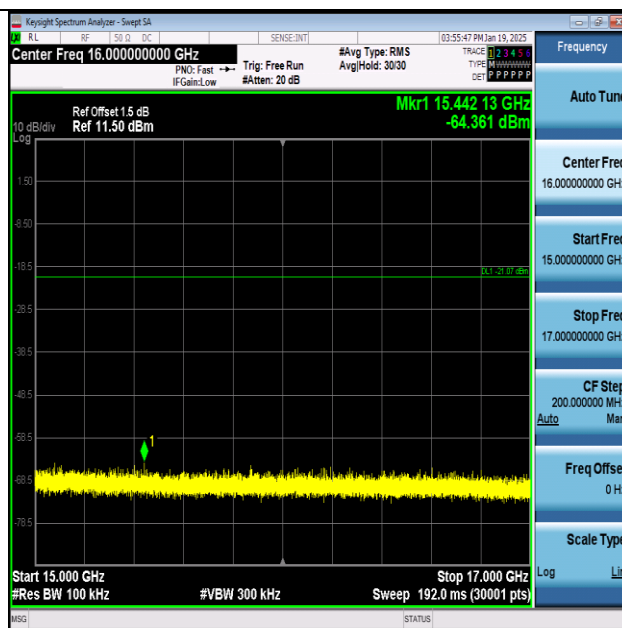 


Thread-Ant1-2480-15000~17000-PASS

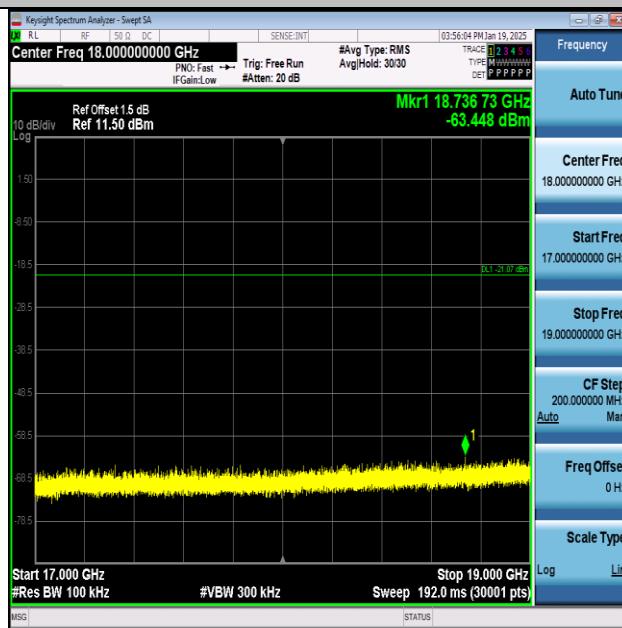 


Thread-Ant1-2480-17000~19000-PASS

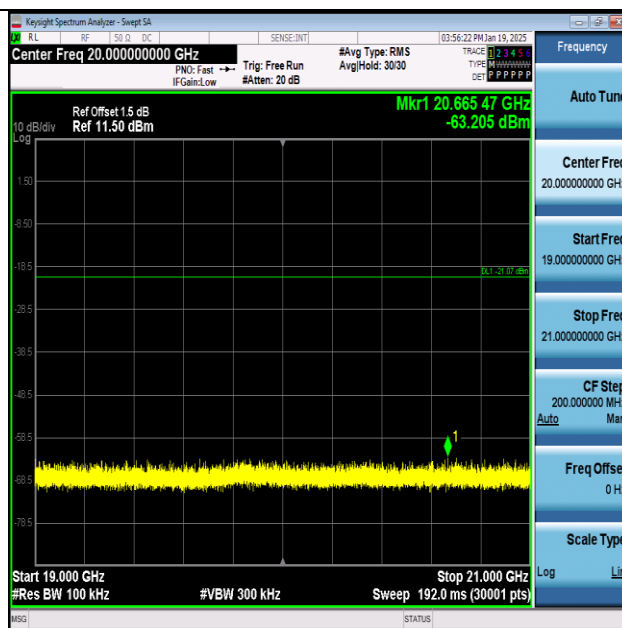 

Thread-Ant1-2480-19000~21000-PASS

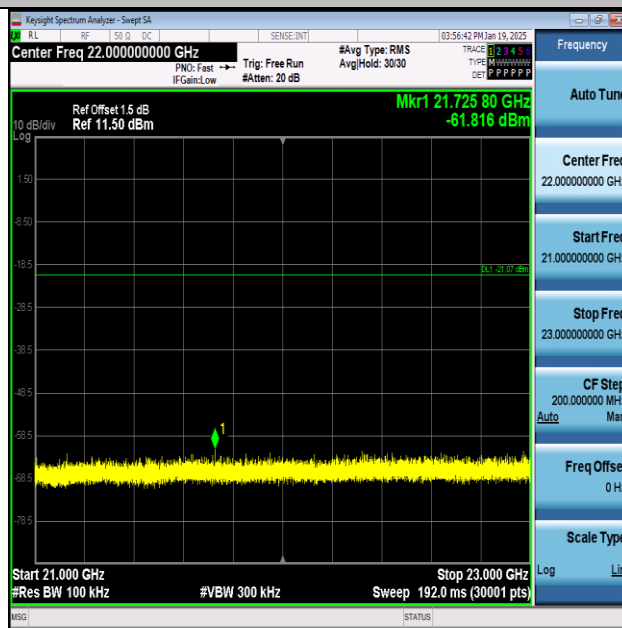 


Thread-Ant1-2480-21000~23000-PASS

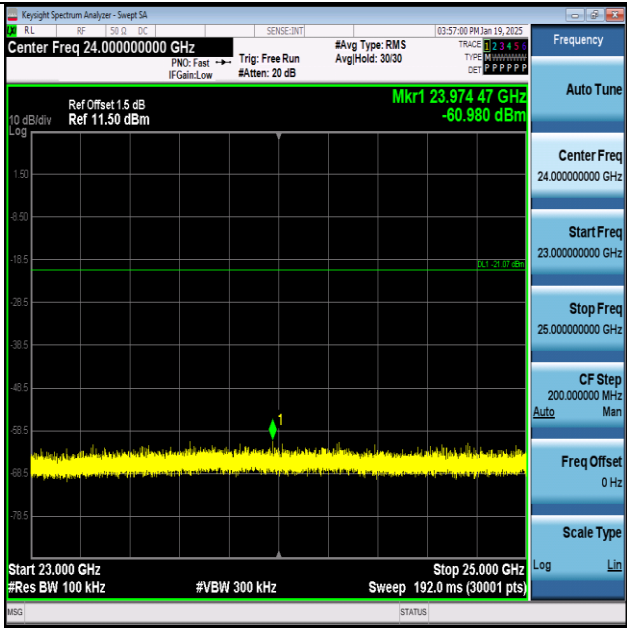 


Thread-Ant1-2480-23000-25000-PASS

Appendix G: Duty Cycle


TestMode	Antenna	Frequency[MHz]	Transmission Duration [ms]	Transmission Period [ms]	Duty Cycle [%]
Thread	Ant1	2405	30.0	0.00	100
Thread	Ant1	2440	30.0	0.00	100
Thread	Ant1	2480	30.0	0.00	100

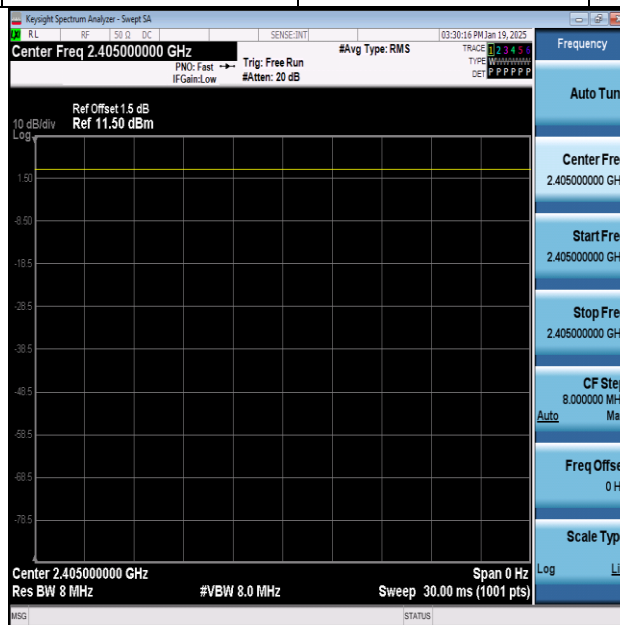 

NTNV-Thread-Ant1-2405

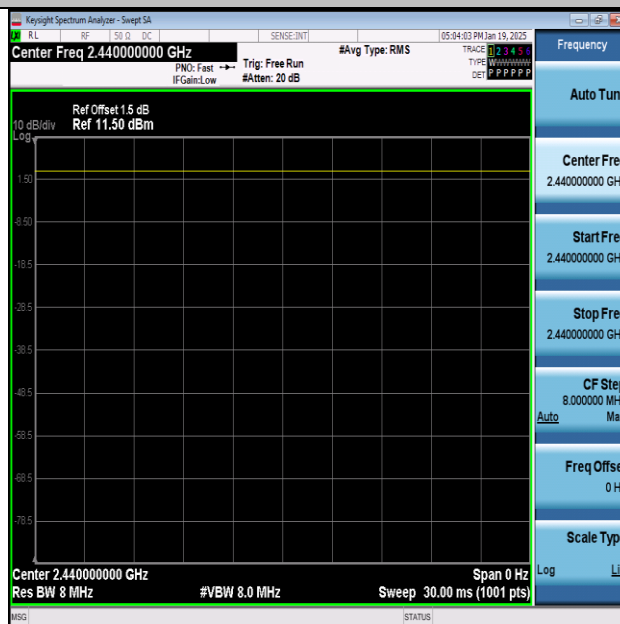 

NTNV-Thread-Ant1-2440

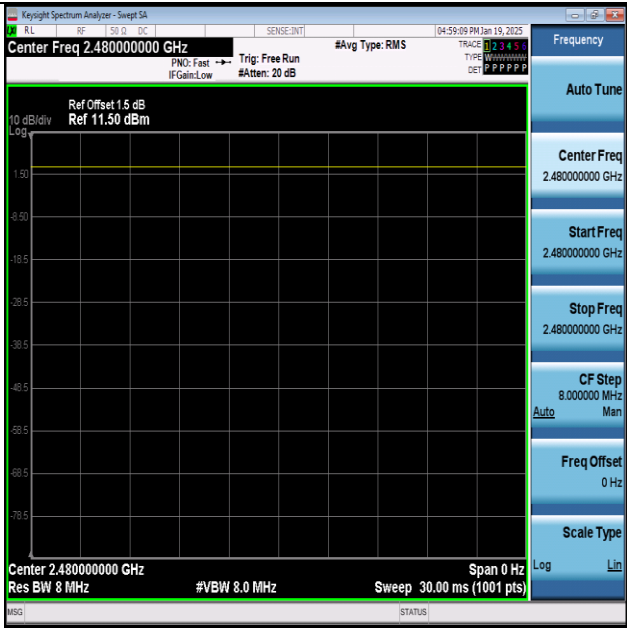 

NTNV-Thread-Ant1-2480