


Party Speaker User manual



Top panel operation

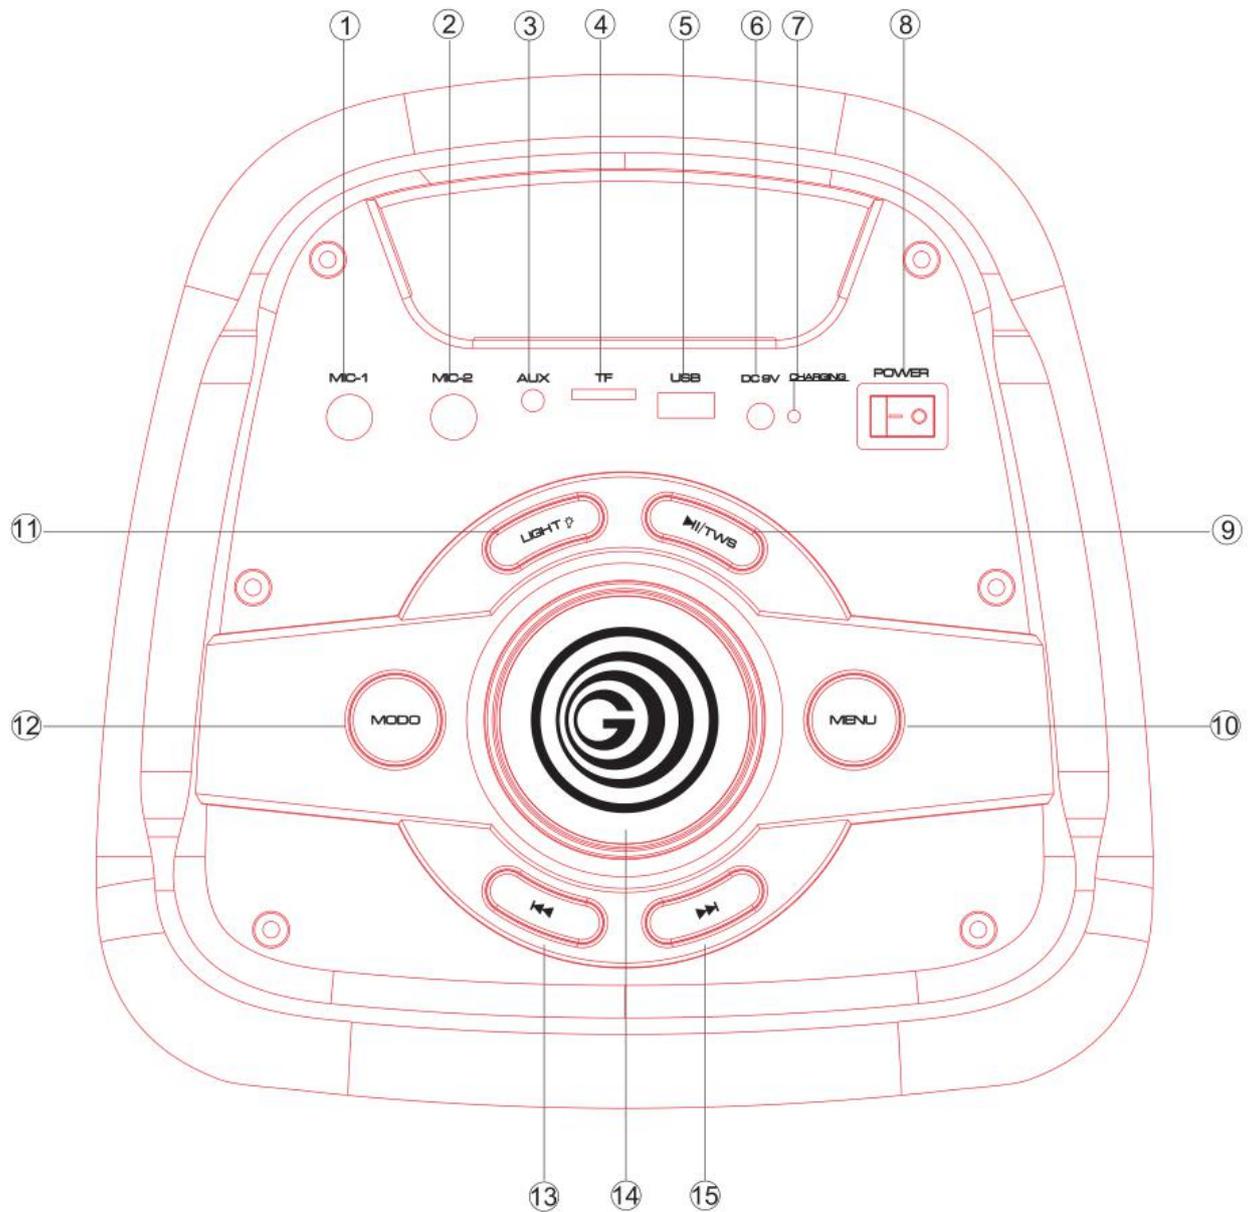

- 1:Microphone Input
- 2:Microphone Input
- 3:Aux-in(3.5mm)
- 4:TF Card input
- 5:USB Playing back
- 6:DC 9V input(charging slot)
- 7:Charging indicator
- 8:Power on/off
- 9:Play/pause under USB/TF/BT,.

10:MENU(control BASS/Treble/MIC Volume),Long press this button to restore factory settings

11: Light mode switching and on/off,short switch to get different mode,long press to on/off the light

Next sound(under USB/TF/BT/FM mode)


12:MODE switch

13:Short press to get previous song, long press to fast backward

14:Main volume

15: Short press to get next song, long press to fast forward

Remote control

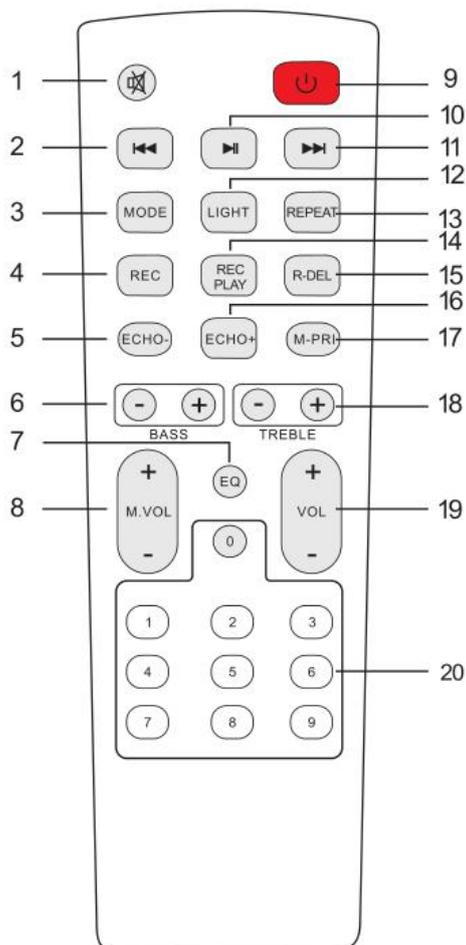

1.Mute

Available to be mute at any mode

2.Previous Song

Under USB/TF card mode - previous song.

Under BT connection mode- previous song.

3.Mode

Press shortly to skip to Wireless BT/LINE IN/USB/TF /FM mode.

4.Record function

Under USB/TF card mode,press “REC” button to record

5.Echo-

6.BASS+/-

7.EQ function

8.Microphone Volume+/-

9.Stand by

10.Pause&Play

11.Next song

Under USB/TF card mode - next song.

Under BT connection mode- next song.

12.Light mode

13.Repeat funtion

14.Record play

15.Record delete

16.Echo+

17.Microphone priority

18.Treble+/-

19.Main Volume

20.Number buttons

Under USB/TF mode to choose songs

Under FM mode to choose channels

OPERATING INSTRUCTIONS

● **Wireless BT Pairing Mode:**

Press MODE or Blue button on the unit or the remote control until BT is selected.

1. Put the cell phone within 20 meters;

2.Activate the BT features on your cell phone so that the cell phone starts to search for the BT device. Please refer to the users' manual for details

3. Select the correct model No. **(ED-605)**The device found by the cell phone;

4. Shortly press PLAY/PAUSE button  to play or pause music. Short press “” or “” key to select the previous or next track.

● **LINE IN MODE:**

Press MODE button on the unit or the remote control until LINE is selected. Play the music of the device connected to the LINE input.

● USB Mode:

1. After start up, press MODE to select “USB” and insert the USB device. The unit will automatically read and play the music in the USB device.

2. Press “” key shortly to pause or play.

3. Shortly press “” key to the previous song.

4. Shortly press “” key to the next song

● FM Mode

-Turn on the power and press the MODE button repeatedly to select the FM function (the frequency is displayed on the display).

-Press the play button to activate the automatic memorization (the tuner searches for stations available and memorizes automatically). The number of memorized stations depends on the reception in your area.

-Use the next/previous buttons to listen to the memorized stations.

-To select a memorized station directly, press the corresponding numeric key on the remote cont

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.