

Excelvan

KID15

TABLET PC

User Manual

EN **DE** **FR** **IT** **ES**

CONTENTS

English.....	1-13
Deutsch.....	14-26
Français.....	27-39
Italiano.....	40-52
Español.....	53-65

1.Overviews

More and more children play tablets / phones for fun, obsess with a variety of games and entertainment, and also learn knowledge. However, kids still lack the ability to control their behavior and identify positive contents, being obsessive with tablet may have negative effects on kids' physical and psychological development.

Guided by safe and healthy content, easy management and behavior restriction, we are committed to building a safe environment for our children, shielding hazards and making parents feel relieved about their children's online environment.

2.Parental Control

Separating contents which are not suitable for children and protecting kids' physical and psychological growth, parents can filter the contents which need to be blocked.

Applications Filter

Select appropriate applications for kids, and block inappropriate contents like bloody and violent content. Only selected applications will be showed up in children's desktop.

← Applications Kid			
	iWawa Games	<input checked="" type="checkbox"/>	⋮
	Theme	<input checked="" type="checkbox"/>	⋮
	Kids Store	<input type="checkbox"/>	⋮
	Browser	<input checked="" type="checkbox"/>	⋮
	Camera	<input checked="" type="checkbox"/>	⋮

Websites Filtering

When children use the Internet browser, it will automatically block the websites without parental permission.


Websites Kid			
	<input checked="" type="radio"/> Restricted	<input type="radio"/> Unlimited	<input type="radio"/> Prohibited
			Add
 Disney			<input checked="" type="checkbox"/> 
http://disneyeme.com			
 Smurfs			<input checked="" type="checkbox"/> 
http://www.smurf.com			
 The Garfield Show			<input checked="" type="checkbox"/> 
http://www.thegarfieldshow.com			
 Toy Story			<input checked="" type="checkbox"/> 
http://www.toystory.disney.com			
 Twenty Four Seven Science			<input checked="" type="checkbox"/> 

3.Content and Management

Provide children with rich applications resources, and use tools to manage applications, video, music and other content.

Applications Recommendation

The Kids Store recommend with educational games and other applications which are suitable for kids. Recommended content is regularly updated and can be downloaded for free.

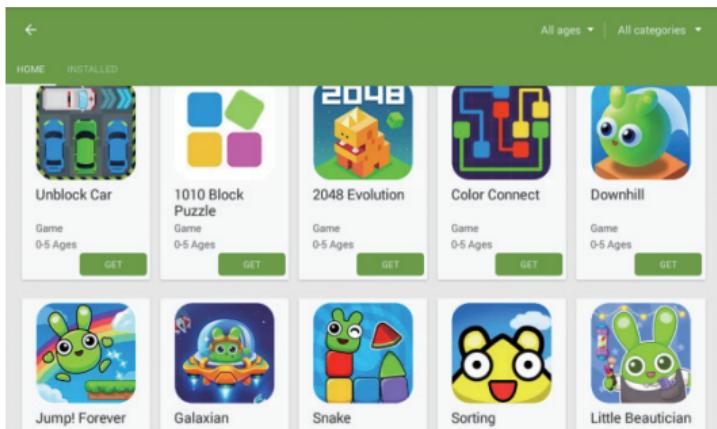

Multimedia Management

Children can open “Video” application in the children desktop and see all good movies selected by parents; similarly, children can open the “Gallery” and “Music” application and see pictures and listen to songs which are previously prepared.


Category	Count	Path	Action
Kid Photos	0	[Internal storage]/iWawa/Users/Kid/DCIM/	<input checked="" type="checkbox"/>
Public Photos	0	[Internal storage]/DCIM/	<input type="checkbox"/>
Kid Music	0	[Internal storage]/iWawa/Users/Kid/Music/	<input checked="" type="checkbox"/>
Public Music	0	[Internal storage]/Music/	<input type="checkbox"/>
Kid Pictures	0	[Internal storage]/iWawa/Users/Kid/Pictures/	<input checked="" type="checkbox"/>

4. Behavior Restrictions

Restrict kids' behavior by iWawa launcher, kids can not disturb the parents' desktop any more, unexpected consumption and games addiction could be effectively avoided.


Child Lock

Without permission of parents, children will not be able to exit the child desktop. Not only ensure that kids stay in a safe environment, but also ensure that kids do not have access to parents' desktop applications.

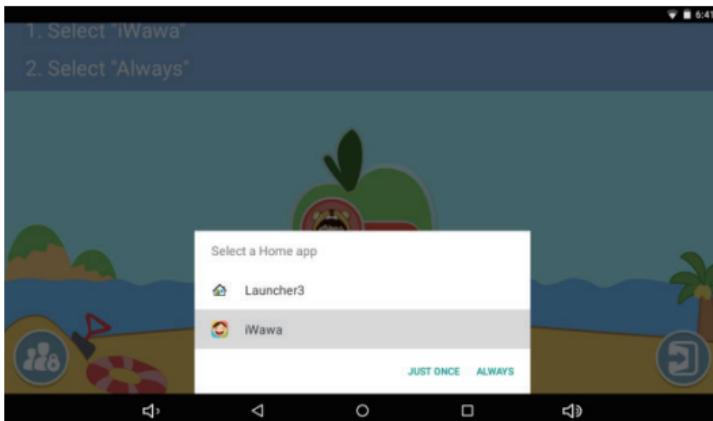

Consumption Restraint

All purchases require parents' confirmation by entering the password. Prevent kids' unexpected consumption from clicking wrong buttons.

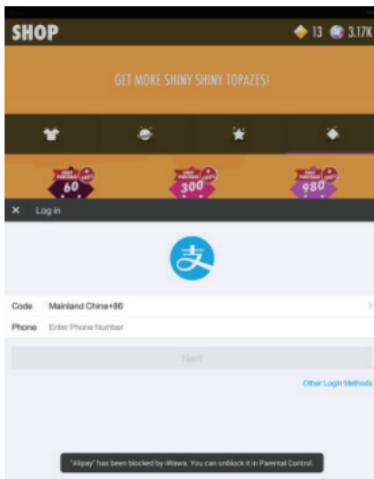

Time Limit

Parents can set a timetable for kids to use tablet and have a break time. It will automatically be transferred to break time when time is up, and tablet is temporarily unusable. It is flexible to protect the kids' growing environment.

← Time Limit | Kid

Whole week Single day

Restricted Unlimited Prohibited

Whole week	Start/End time	09:00	–	21:00
	Sessions per day	3	max	
	Session length	30	mins	
	Rest length	15	mins	

Prolong Time Quickly

Parents can enter a password to prolong 30 minutes for kids, and deal with some unexpected conditions easily.

Behavior Report

The system automatically produces detailed reports of applications usage which record kids' behavior on using various applications and the frequency. In this way, parents can easily understand kids' habits and preferences.



5. Featured Functions

Provide more practical and convenient features for children and parents.

Multiple Accounts

A tablet can set up more than one account. Each child can have their own separate desktop.

← Account

Parent Account

 Set my own password Create Delete


Children Account Add

Profile	Name	Age	Actions
	Kid 5 years 9 months		Delete Edit
	Lucy 2 years		Delete Edit

Karaoke

Placing music video files to the specific path of storage, the system automatically recognize the files which makes you see them in the menu interface, click to enjoy music video.


MKV video formats files are available to support switching freely between the original and Karaoke.Karaoke it is!Follow the video and subtitles to sing along!

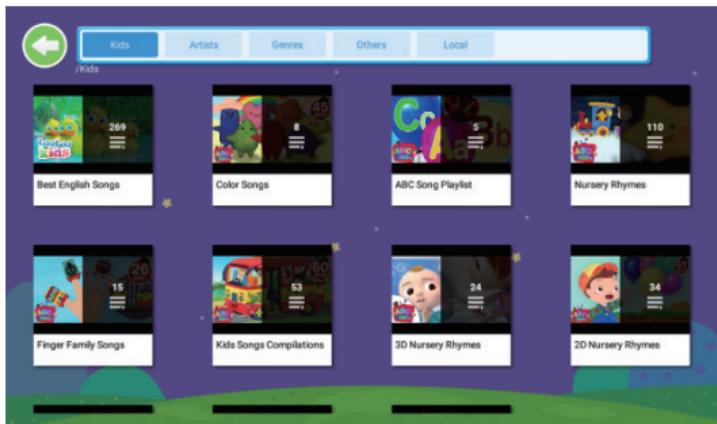

6.AR Zoo

Please check your package accessories, one is the AR Zoo card, it has included 30 kinds of animals, with the tablet PC pre-installed APP AR Zoo can show the animals with 3D effects.

Just click the AR Zoo application, then focus the animal pattern on the AR Zoo card with the camera, the 3D animals will show on the screen, kids will get much more fun when learning how to recognize different kinds of animals.

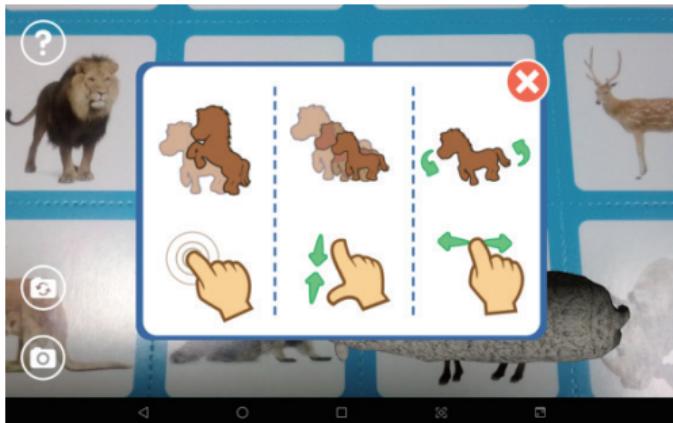

Quick Start Guide

1. Keys Function

Power button	Short press to sleep/wake up, long press to start-up and shutdown
Volume + (up)	Increase the volume
Volume - (down)	Decrease the volume
	Click it in any interface will return to main interface
	Click it in any interface will return to previous menu
	Display recently browsed history

After a short time without getting used, these buttons may shrink to dots or fade away, depending on the current app. To bring them back, touch their location.

2. Start-up and Shutdown

Start-up

Long press Power key for three seconds, you can enter into start-up picture. The system enters into screen lock status, please unlock it.

Shutdown

- Long press Power key, it will pop up shutdown window.
- Shutdown window contains Power off, Restart and Screenshot three options.
- Click Power off.

3. Open and Close of the Screen

Screen will be closed on its own when no operation happens.

- a. Screen will be closed on its own if no operation happens for some time to save battery power.
- b. When screen is open, press Power key, the screen will be closed immediately.
- c. If the screen is closed, short press Power key to open the screen.

4. Usage of Touch Screen

There are below methods to view the main screen, menu

And application procedure in your MID.

Click

When you want to use the screen keyboard typing or Choose application in the main interface, you only need To touch it by finger.

Press on

If you want to open some item (text box or the link in the Web page), or shortcut and main procedure move, you can press on this item.

Quickly slide or slide

Quickly slide or slide indicates make quick vertical or horizontal movement by finger.

Pull

Before you pull, you need to hold it with strength until you pull it into the position you want.

Rotate

For most pictures, You only need to rotate to change the direction of the screen from horizontal to vertical. For instance, when you are typing words, and watching movies.

5. Home Page

* Long press the blank space and it will pop up windows to set Home

settings, Wallpapers.

- * Swipe up on the home page to see what software the user has installed on the MID.
- * Swipe down from the top of the MID to open the status bar for easy viewing of notification information and quick settings.

The shortcut icons management in desktop application

Create folder icon in desktop

Drag an icon over another icon, and the application can collapse into a folder, you can add a name to this folder.

Remove the icons in desktop

Long press the icons need to be remove, then on the left above of the screen, it will appear  icons, drag the icon to the above of the remove icon, till the icon become gray, then move your finger to delete the icon.

6.USB Connection and Transfer files

- a. Connect the MID and computer by USB cable, the status bar will show the remind information.
- b. Open the status bar, click the "Transfer files".
- c. Now the USB is connected successfully, you can transfer files between your PC and MID.

7.Basic Setting

Connect Wi-Fi

- a. In the main menu or interface, choose setting application procedure.
- b. Click Network&Internet, open Wi-Fi, MID will automatically search the available Wi-Fi wireless internet.
- c. Choose the Wi-Fi internet you want to connect, if it has password, it will pop up the password window, enter password, click connect.

Bluetooth

- a. Click bluetooth and open it.
- b. If somebody open bluetooth in your surroundings, click search device in right above, then MID will automatically search the bluetooth device nearby.
- c. Click the available Bluetooth device, it will pop up request window, enter into related password, and match the device to connect.
- d. After match successfully, You can transfer files and other operations.

Display

In this option, you can set brightness, wallpaper, sleep time, font, etc.

Apps & Notifications

In this option, you can view the installed software of MID and set the default application and permission

Storage

It can check the used and available space of internal memory and SD card, and remove SD card safely.

**Safely remove SD card can protect SD card and extend working life of SD card.*

Sound

You can set the media volume, alarm volume and other prompt tones

Battery

You can view the usage of electricity and turn on the power saving mode

Security & Location

Can turn on and off screen lock and position information.

System

Language, input method, date and time can be set.

Specifications

Model	KID15
Screen	7inch. Resolution: 1024*600
CPU	A50 Cortex A7, 1.5GHZ
System	Android 10.0
RAM	1GB
Storage	8GB--32GB External inserted TF card be extendable to 32 GB.
Camera	0.3MP+2.0MP
Battery	3.7V/2800mA
Charging	5V, 2A

FCC Warning Statement Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.